

Assembling Illustration

**For using an engine temperature controller:
Please first remove the ratchet spring and
then install the needle control arm.**

當搭配引擎溫度控制器時，組裝引擎油針伺服臂，請先將
彈簧片移除。

