

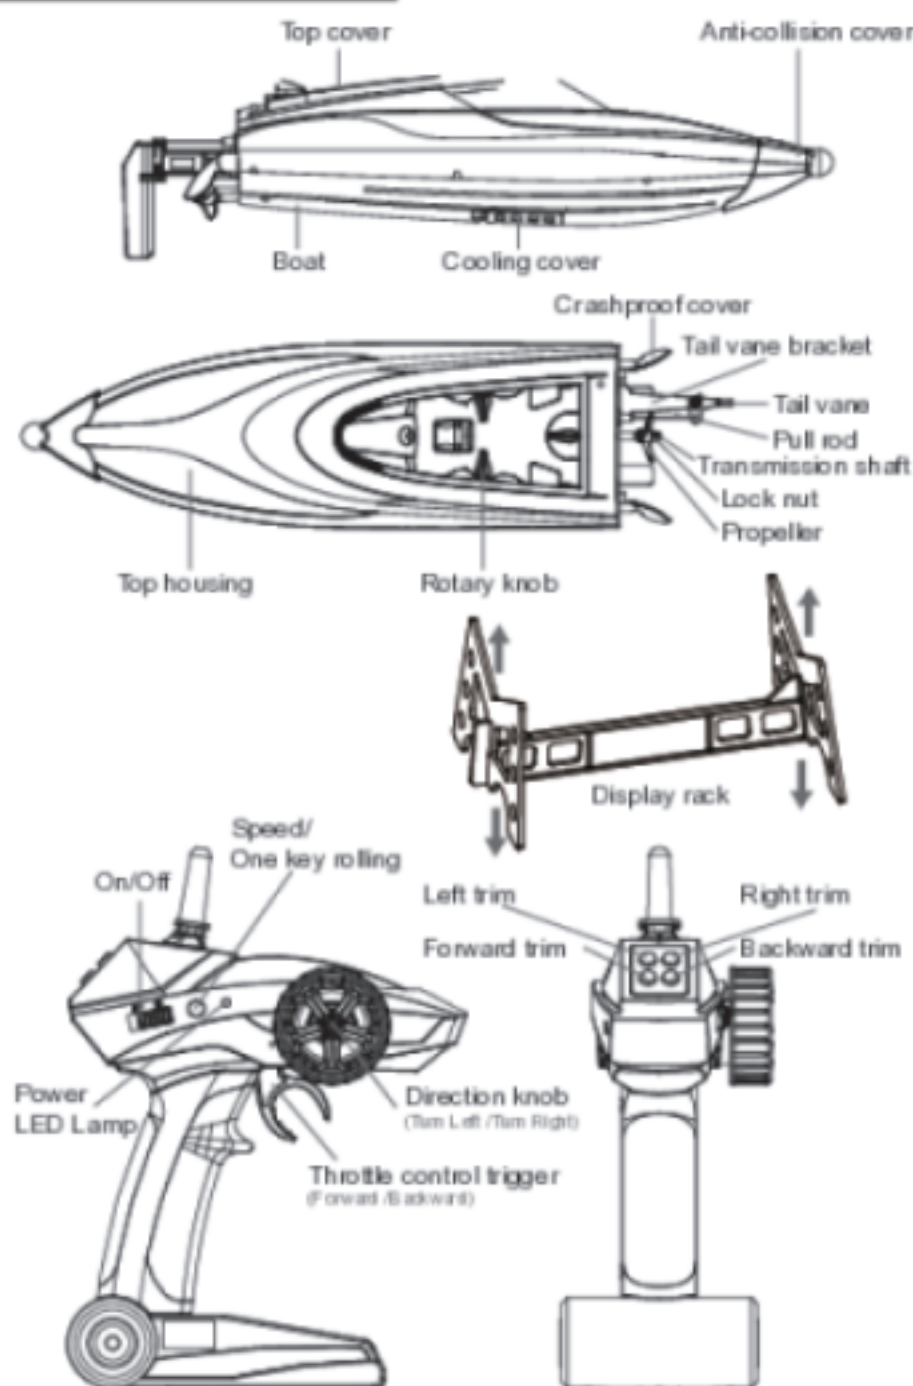 
14+
AGES

2.4G RC HIGH SPEED RACING BOAT

FTX0700

**ATTENTION:** Please read all the warnings and instructions carefully before using this product**NOTICE:** That's a normal phenomenon if water comes into the boat during running, all the inner parts are waterproof and will not effect performance. You only need to open the water outlet to pour out the water after each use.

FTX IS AN EXCLUSIVE BRAND OF CML DISTRIBUTION
 SAXON HOUSE, SAXON BUSINESS PARK, HAMBURY ROAD, BROMSGROVE,
 WORCESTERSHIRE, B60 4AD ENGLAND.
 EMAIL: INFO@FTX-RC.COM WEB: WWW.FTX-RC.COM

Main Structures of RC Boat

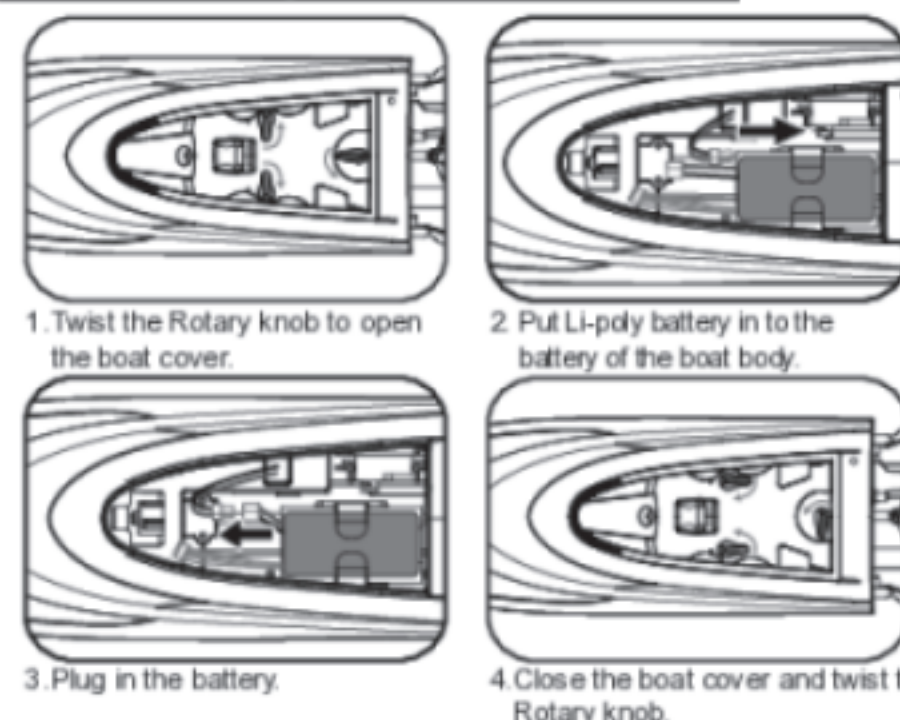 
-1-

Methods for Installing Batteries of Remote Controller

Open the battery cover of the remote controller; insert 4 X 1.5 V AA batteries into the battery case according to positive and negative electrodes, close the battery cover. (Batteries not included)

**Battery Charging Instruction**

Insert one side of the USB connector into the battery, and the other side into any computer USB port.

**Methods for Installing Batteries of Boat Controller**

-2-

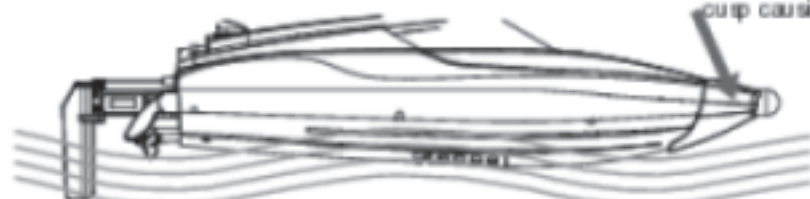 
RC Boat Design Highlights:

- Unique cooling system
- Waterproof
- Anti-collision
- Hidden wires inside the cabin
- One-key rolling
- Low battery condition for remote control is alerted by a "beep...beep" sound
- Low battery condition for boat is alerted by a "beepbeep... beepbeep" sound of remote control

Operating Preparation

- Install and connect the battery to the boat.
- Attach and secure the top cover and place the boat in the water.
- Power on the controller. The red LED light will flash rapidly.
- The controller will automatically connect to the boat.
- The controllers LED light will be solid and a "beep" sound emitted to confirm that the connection has been successful.

Anti-collision part can prevent bow cup causing injury.



Put the boat into the water, the boat will turn on automatically.

Note: The boat must first be placed in the water before any connection can be made.

Regulation

After the controller is connected to the boat successfully, if the propeller moves or makes any sound without pushing the accelerator, press the regulating button for adjustment. If the propeller rotates to the left, press the right regulating button. If the propeller rotate to the right, press the left regulating button.

Switch High & Low Speed

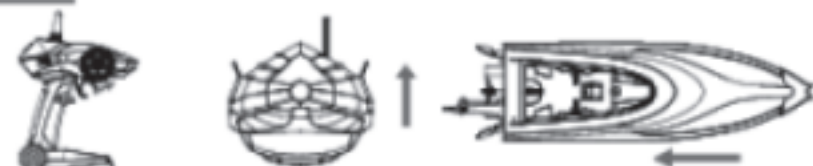 
The boat starts up with default high speed, press the speed button to change it, one "beep" for low speed, two "beeps" for high speed.



-3-

Operating Methods**Forward**

Pull down the trigger of the controller, the boat will move forward.

Backward

Pull up the trigger of the controller, the boat will move backward.

Turn left

Turn the direction knob backward and the boat will turn to left.

Turn Right

Turn the direction knob forward and the boat will turn to right.

One key rolling

When the boat turns over during driving, keep pressing the "one key rolling" button until it turns back upright.

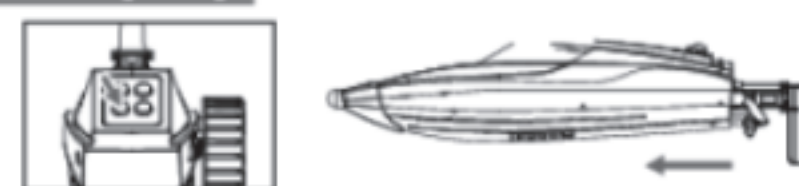 
-4-

Regulating**Left Turning Regulating**

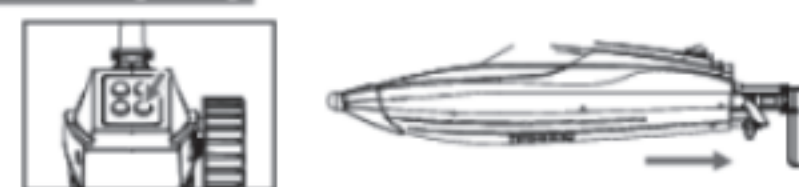 
If the boat automatically turns to the right during driving, press the left regulating button for adjustment.

Right Turning Regulating

If the boat automatically turns to the left during driving, press the right regulating button for adjustment.

Forward Regulating

If the boat keeps moving backward during driving, press the forward regulating button for adjustment.

Backward regulating

If the boat keeps moving forward during driving, press the backward regulating button for adjustment.

-5-