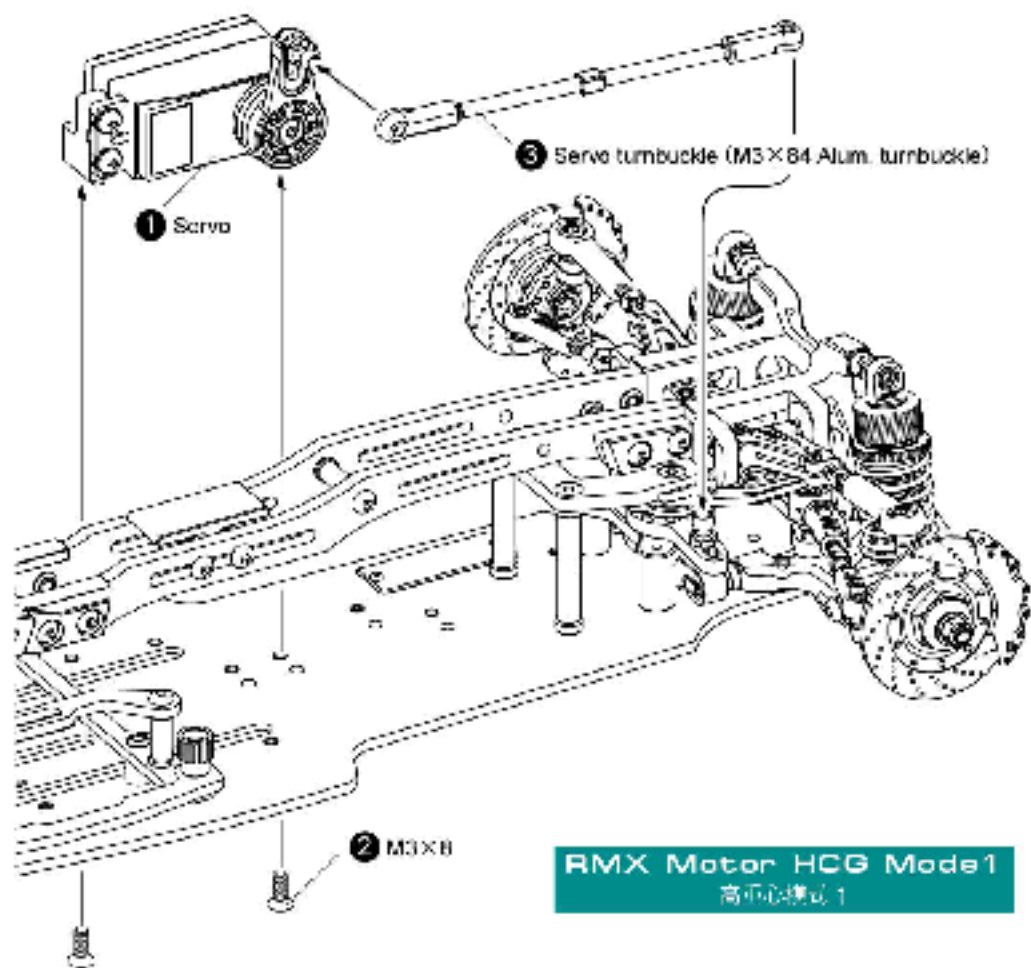


STEP 1 Steering servo assembly
转向伺服器安装STEP 2 Steering servo assembly
转向伺服器安装