






Menu level: INFO

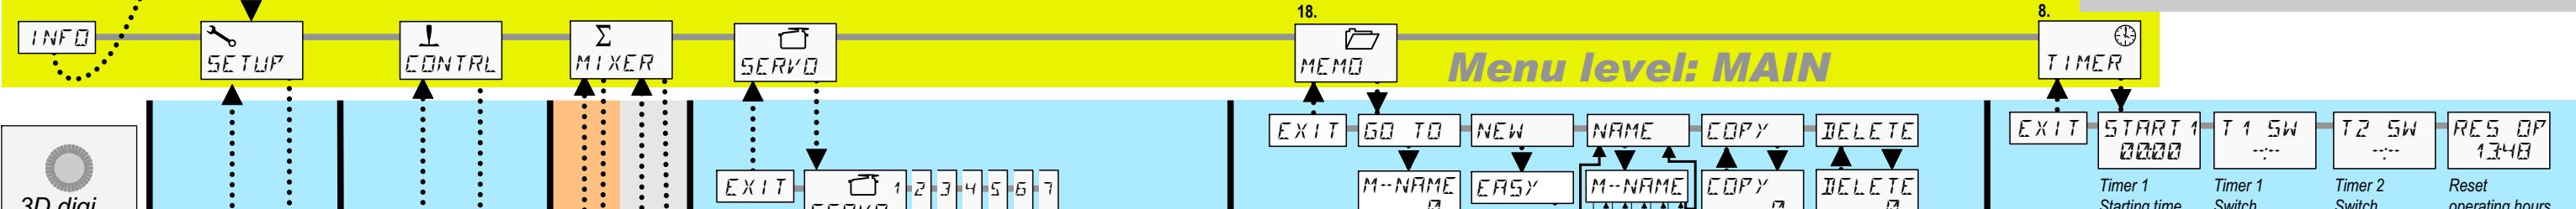


Menu level: MAIN

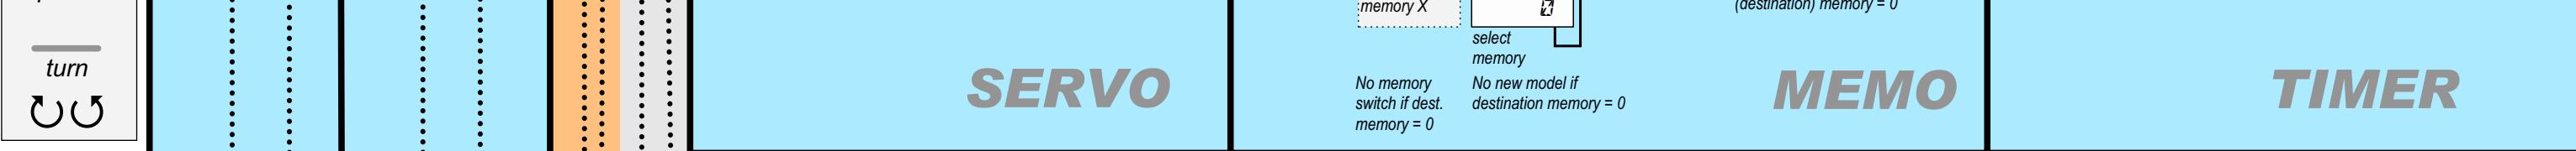




No memory switch if dest. memory = 0
No new model if destination memory = 0

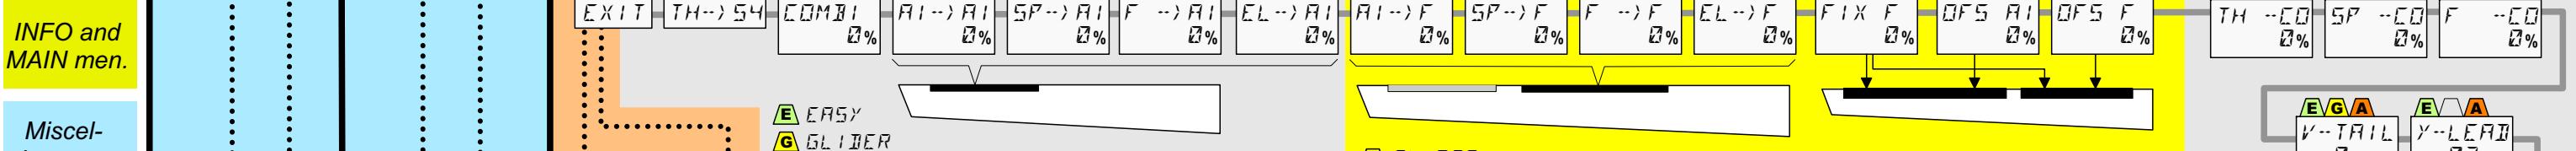

select type:
EASY
GLIDER
ACRO
HELI
select destination memory
to INFO 1 in memory X
IN MEM
select memory
select (destination) memory for: copying, deleting
If you do not wish to copy/delete: (destination) memory = 0

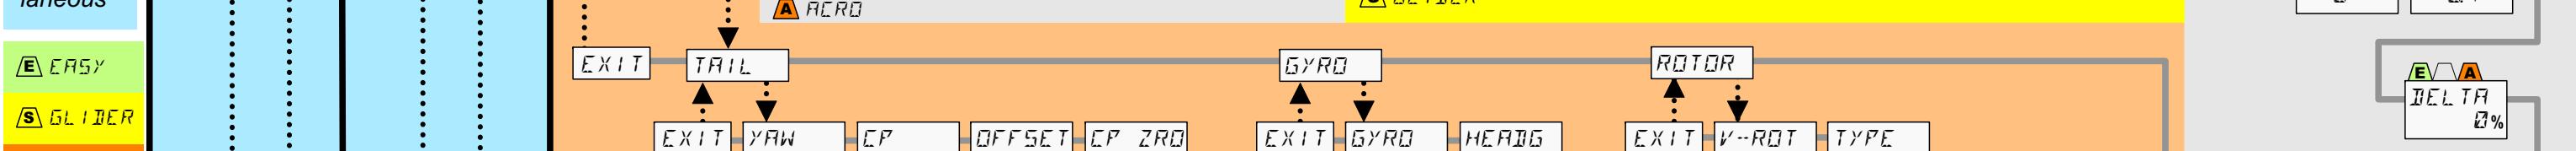

Timer 1 Starting time mm:ss (59:59)
Timer 1 Switch
Timer 2 Switch
Reset operating hours hh:mm (99:59)

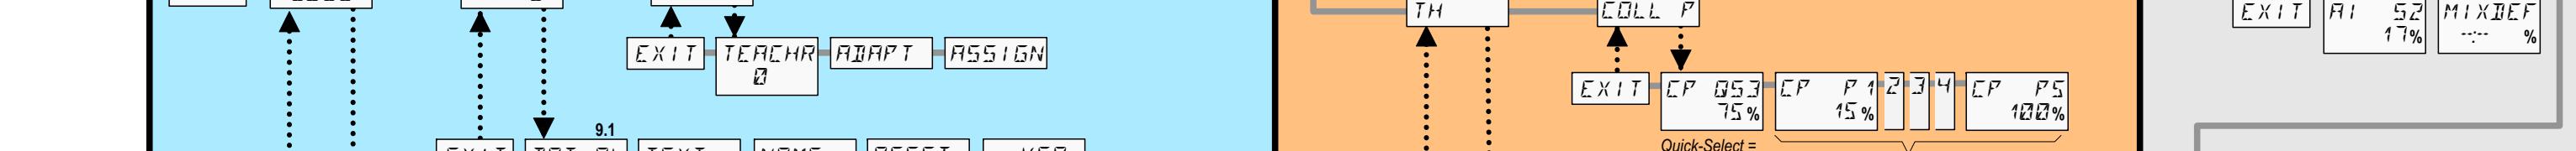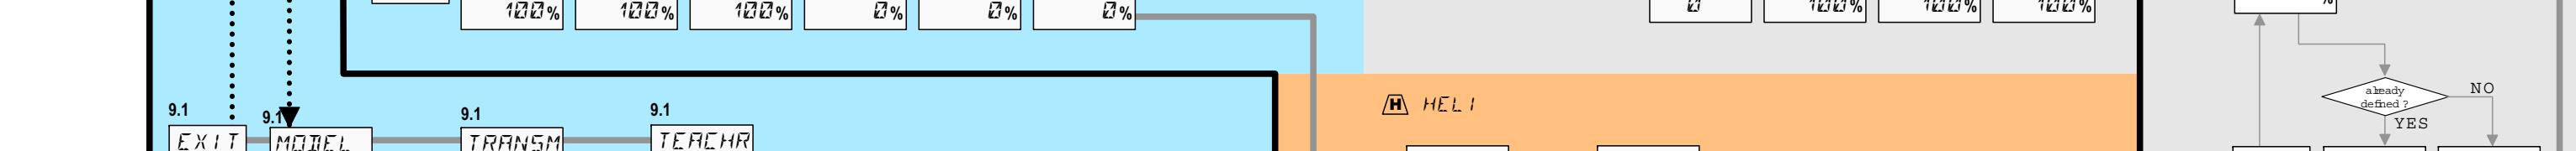
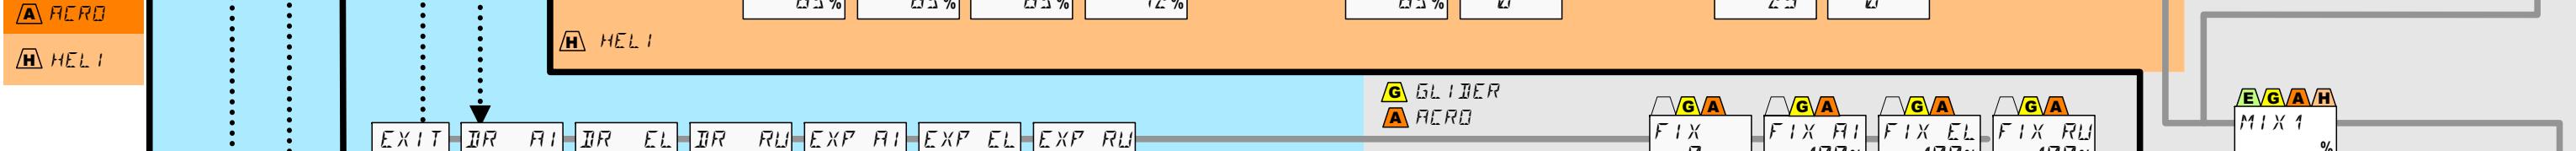


G GLIDER
A ACRO
F FIX
R1 FIX R1
R2 FIX EL
R3 FIX RW


G A H MIX 1 %
G A H MIX 2 %
G A H MIX 3 %

already defined?
YES
NO
RI 52 17%
MIXDEF --- %


Define as MIX 1 ! (see above)

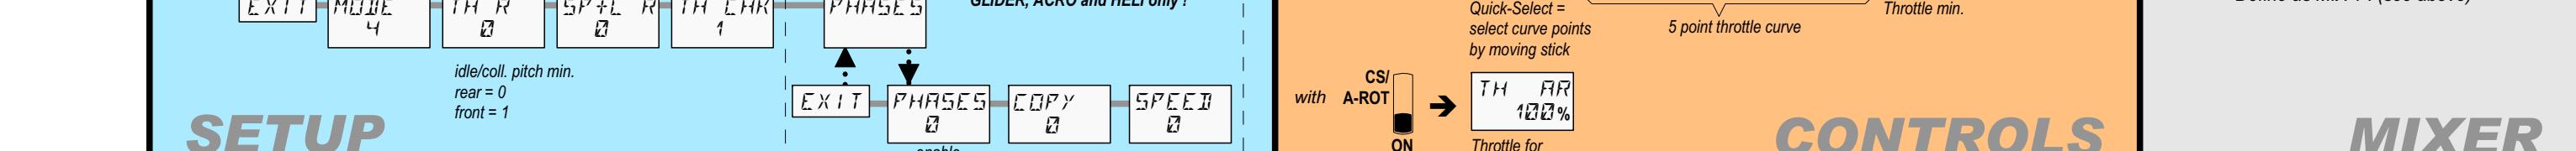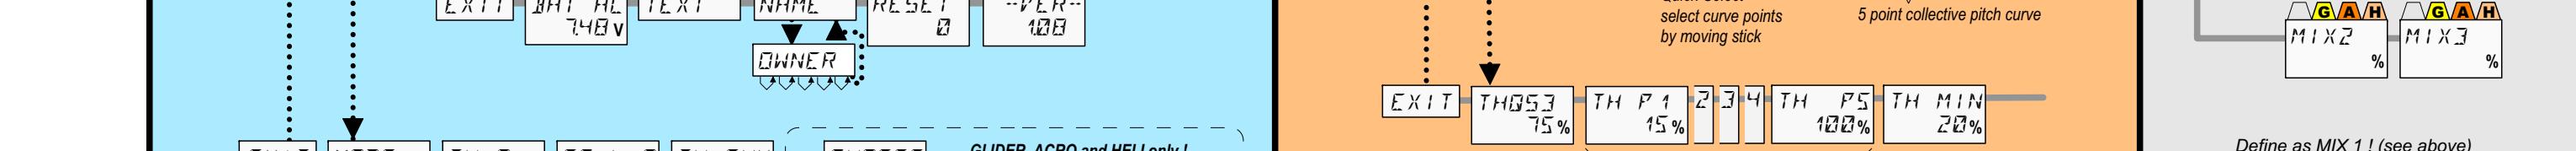




EASY

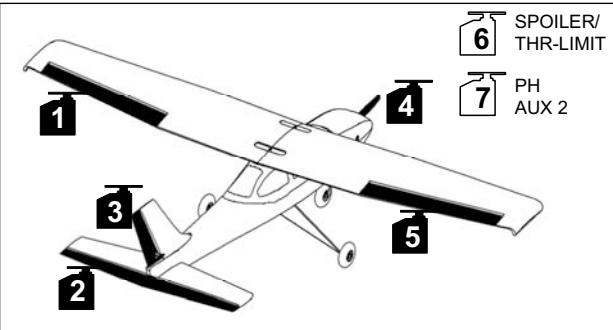


Σ : V-LEIT \rightarrow
V-TRAIL
 Σ : DELTA

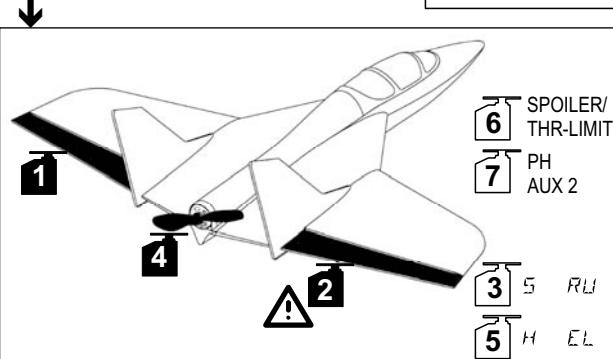



ACRO

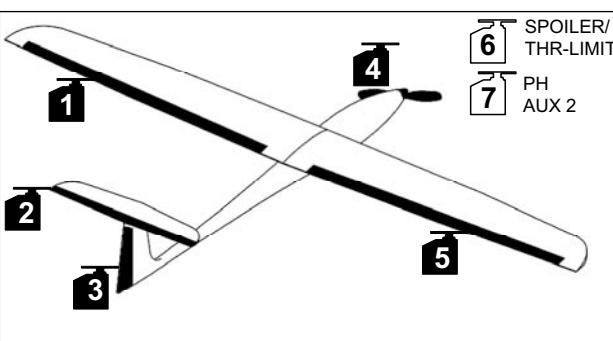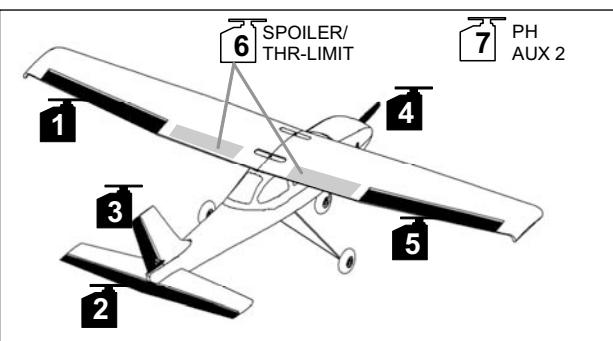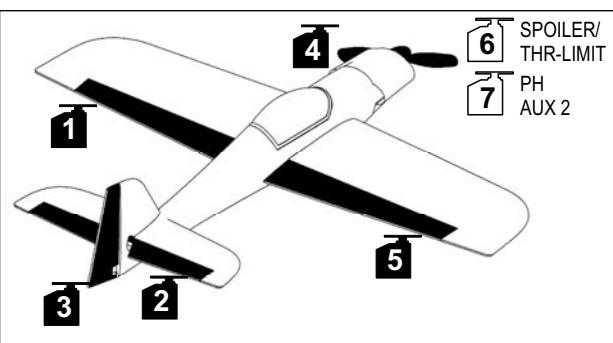


SEGLER

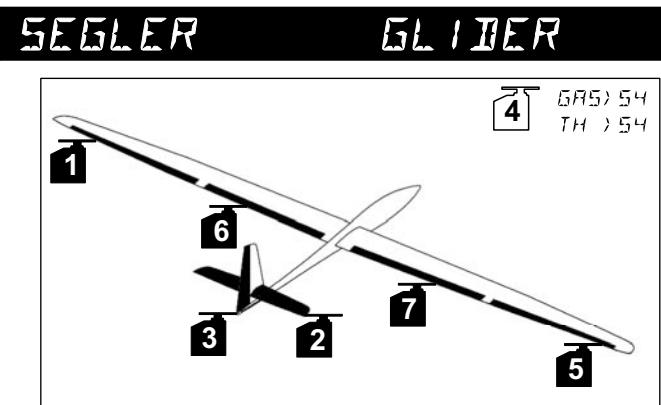

GLIDER

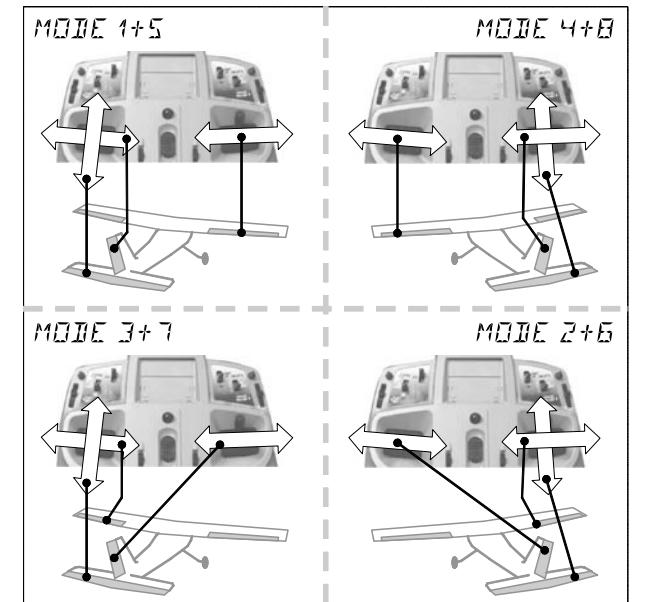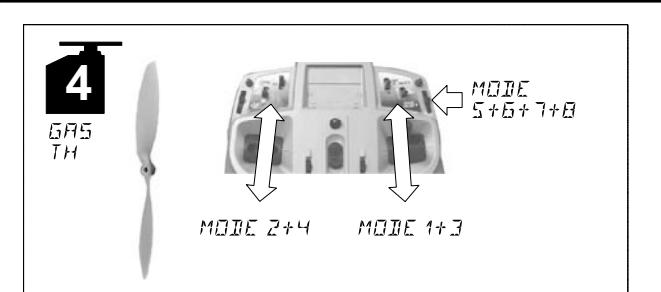


HELI (mech./ no mixing)

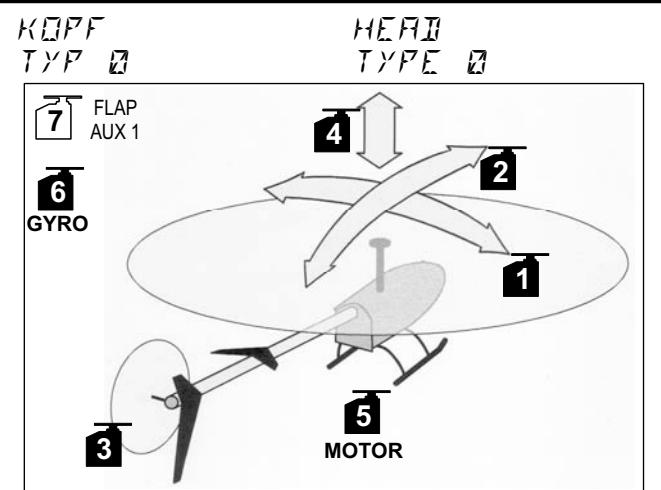

Cockpit SX

© MULTIPLEX 2006

HELI (CCPM)

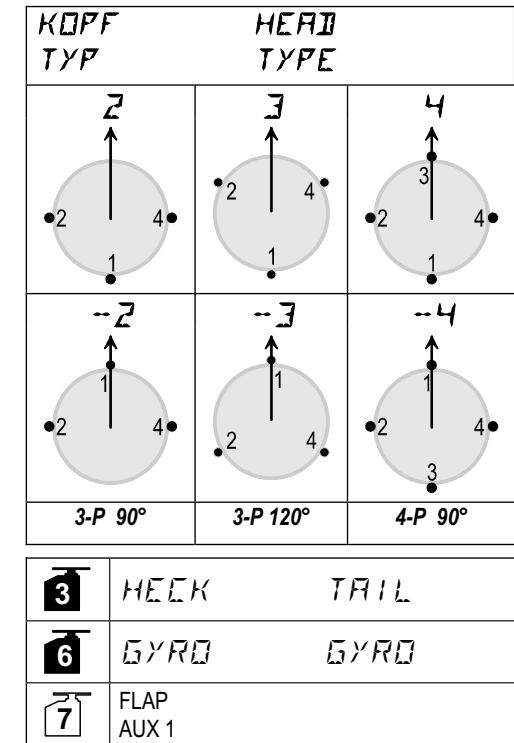

TEXT DE EN

PHASEN PHASES	PHASES	DE	EN	SEGGER GLIDER
MIX ...	1	✓	1,2,3	1,2,3
DELTA		✓	✓	x
V-LEIT V-TRAIL		✓	✓	✓
Y-KABL Y-CABL		✓	✓	x
H->D EL->R	Snap Flap	x	x	✓
DFS Q DFS RI		x	x	✓
DFS F DFS F	Offset			
FIX Q, H, S	FIX RI, EL, RU	x	x	✓
GAS > 54	TH > 54	✓	x	✓

POWER ON

	D	GB	F	E	I
1	ON 	Kanal wählen/ändern Select / change channel	Sélectionner / changer le canal	Seleccionar / cambiar el canal	Scelta/cambio di canale
	ON 	Mit gedrücktem 3D-Digi-Einsteller einschalten Switch ON with digi adjustor pressed	Allumer avec la souris pressée	Encienda con el regulador digital pulsando	Accendere con regolatore digitale premuto
	ON 	Kanal wählen und bestätigen Select channel and confirm	Choisir le canal et confirmer	Seleccionar el canal y confirmar	Scegliere il canale e confermare
	OFF 	Ausschalten Switch OFF	Mettre HORS fonction	Apague	Spegnere
	ON 	Einschalten mit den gesetzten Kanal (ohne Modul Channel-Check PLUS) Switch on with channel set (without module Channel-Check PLUS)	Allumer avec canal choisi (sans module Channel-Check PLUS)	Encienda con canal elegido (sin modulo Channel-Check PLUS)	Accendere con canale scelto (senza modulo Channel-Check PLUS)
2	ON 	Einschalten Switch ON	Allumer	Encienda	Accendere
	ON 	Bestätigen Confirm	Confirmer	Confirmar	Confermare
	ON 	Einschalten mit gesetztem Kanal UND Channel-Check PLUS Switch on with channel set AND Channel-Check PLIS	Allumer avec canal choisi ET Channel-Check PLUS	Encienda con canal elegido Y Channel-Check PLUS	Accendere con canale scelto E Channel-Check PLUS
3	ON 	Einschalten Bestätigen Switch ON Confirm	Allumer Confirm	Encienda Confirmar	Accendere Confermare
		Kanal belegt ! Kein HF-Signal Occupied ! No RF signal	Occupé ! Aucun signal HF	¡ Ocupado ! No señal HF	Occupato ! No segnale HF
		Kanal frei ! Normalbetrieb Channel free! Normal operation	Canal libre ! Operación normal	¡ Canal libre ! Operación normal	Canale libero ! Operazione normale