

USER MANUAL

 
 
9204E

MANUAL

1/10 SCALE RC POWER **4WD** OFF ROAD CAR
2.4GHz RADIO SYSTEM

14+

AGES

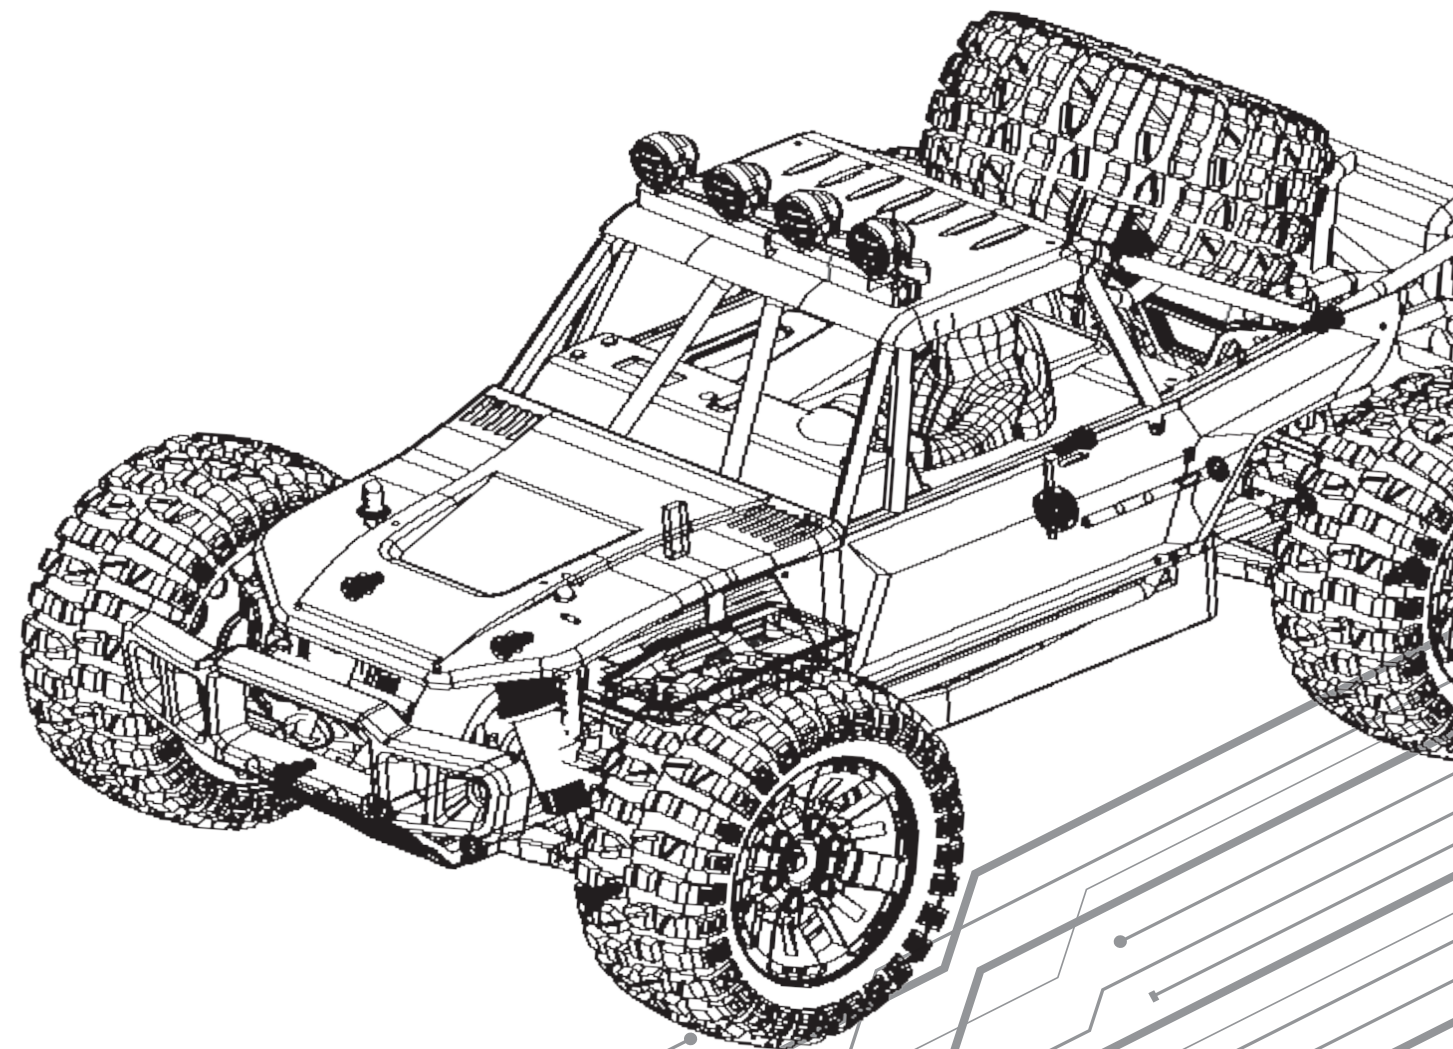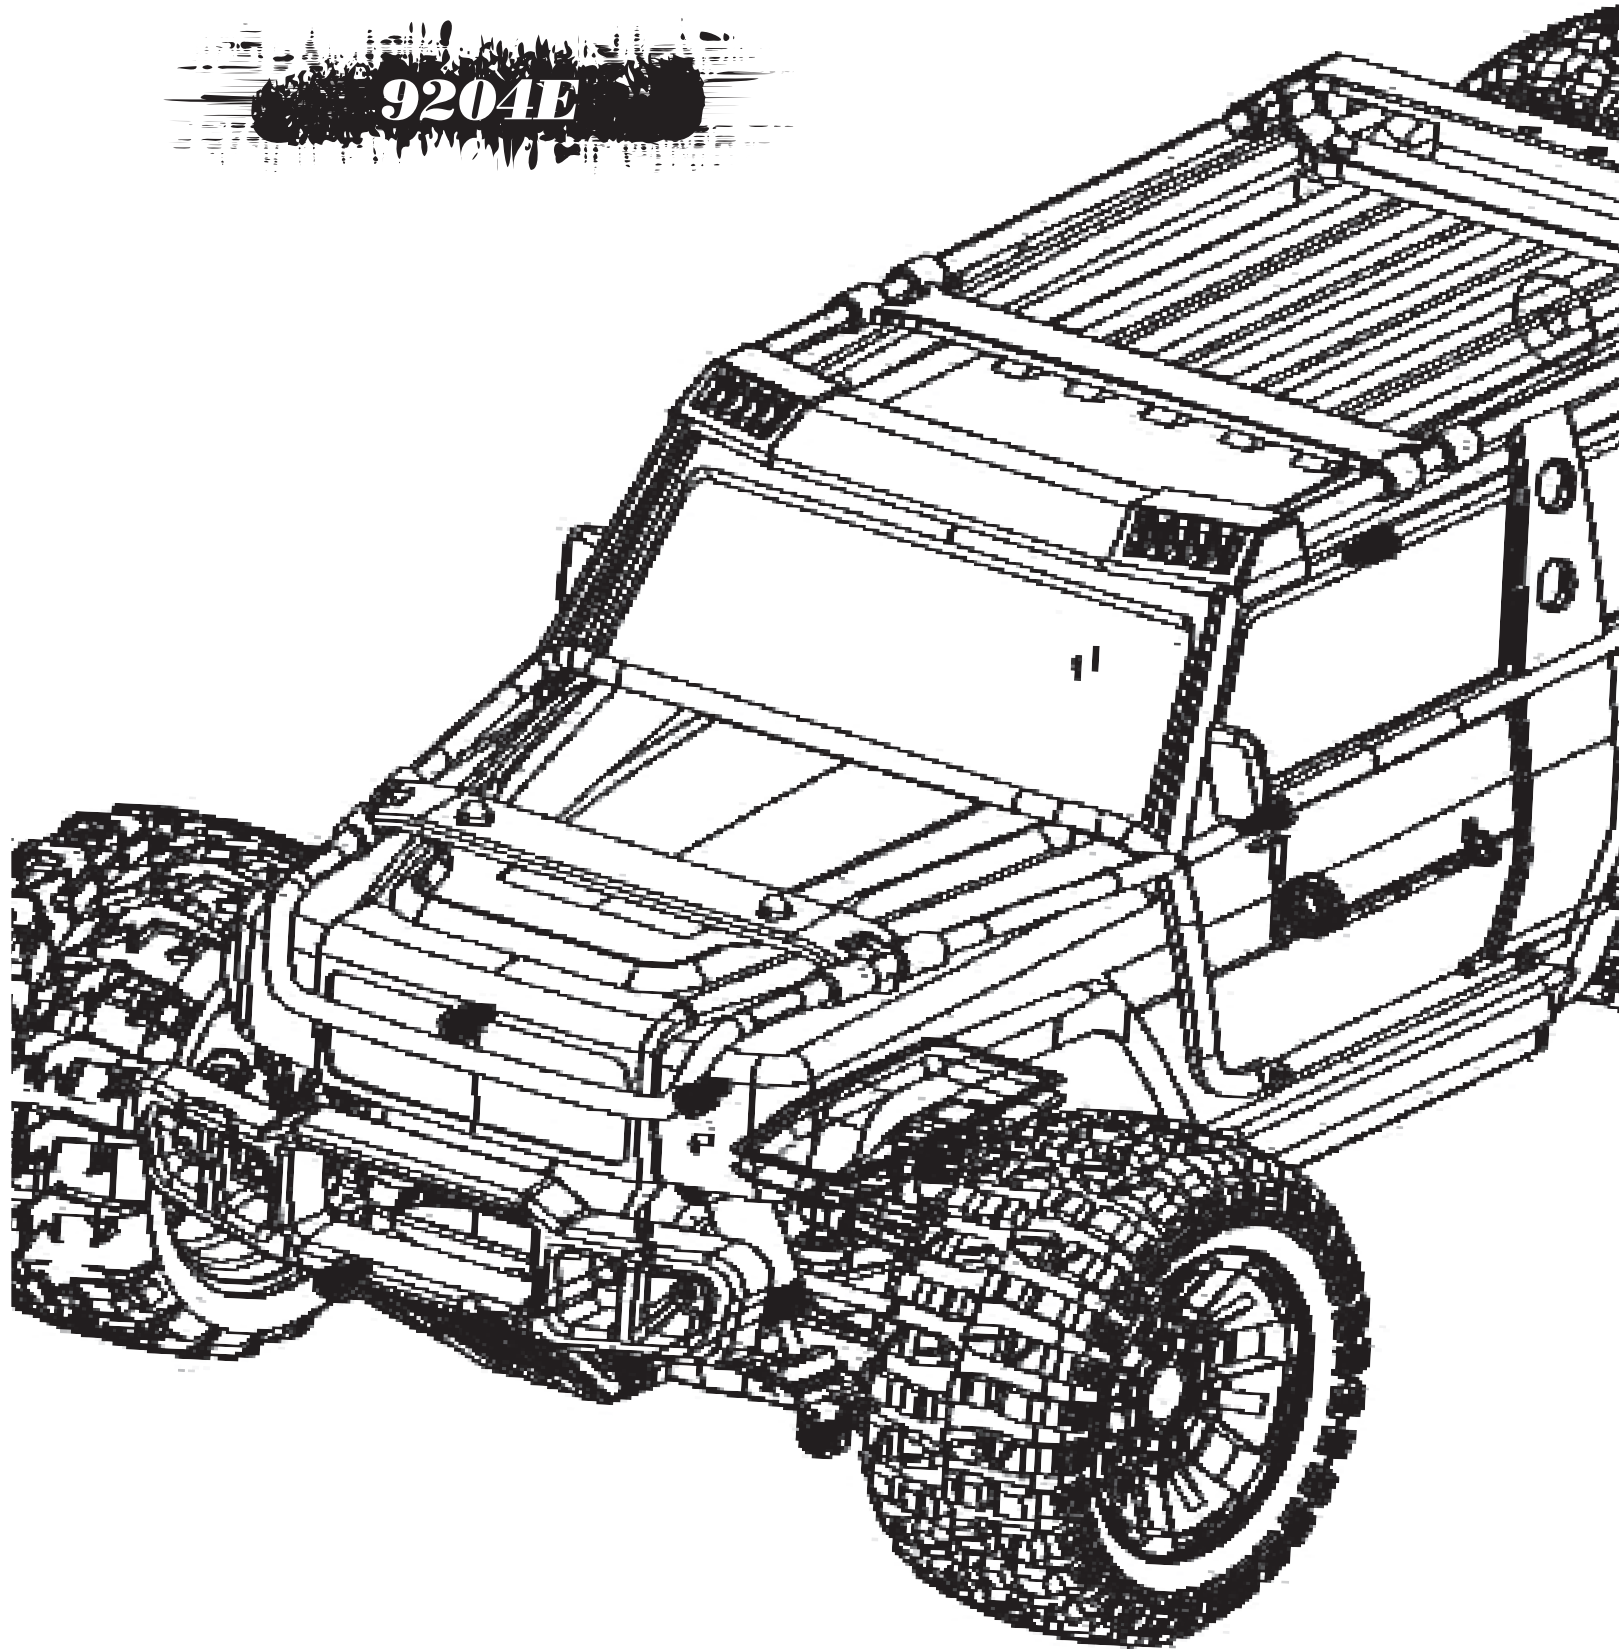

LOOKING FORWARD TO MORE NEW PRODUCTS

WARNING: PLEASE READ THE INSTRUCTION MANUAL CLEARLY BEFORE OPERATING THE PRODUCT



CONTENTS

Contents 1

Safety Precautions 2

Instruction 3

Model Introduction 5

Ready for play 6

2.4G Remote control 9

Operating your model 11

Maintaining your model 12

Diagram of device explosion 13

Assembly View 15

Retail accessory view 18

Thank you for purchasing the remote-controlled car with radio of 1:10 rc car

1:10 rc car is a new 4WD High speed off-road car,bring more adventure and fun. Featuring four-wheel independent suspension and Oil shock design, as well as 4WD traditional system, each detail is developed delicately in order to bear harsh environment when operating. This car even is enjoyed with splash-proof and can be driven in various wet environments!

This manual contains operational approach you need and course of maintaining the model. So your car can have a long service life. This model is the one with best performance in modern model market at present and it is designed by a professional model team obtaining the highest level of support from manufacturers!

This manual contains necessary setting and operational methods. Our engineers have improved performance and potential of this remote-controlled car when designing it, order to make you enjoy freely the pleasure with the highest control.

Even you are an experienced model-lover, you also need to read carefully and obey procedures of this manual before proceeding. Thank you for selecting 1:10 rc car.

We hope you can enjoy your new remote-controlled car!

BEFORE YOU PROCEED

Please read carefully and follow all introductions and any documents attached for preventing your model from damaging seriously.


Violation of these instructions shall be deemed as misuse or faulty operation.

Before operating your remote-controlled car, please read all contents of this manual and check carefully the remote car. Please stop your next operation if you decide that it is not what you want for some reasons.

Dealer shall not support return & exchange after the remote-controlled car is unpacked or used.

RETAIL ACCESSORY VIEW

 <p>PX9200-23A</p> <p>LIPO Battery (7.4V 1700MAH)</p>	 <p>PX9200-24</p> <p>Battery Cover</p>	 <p>PX9200-25</p> <p>Drive Shaft Assembly</p>	 <p>PX9200-26</p> <p>Motor</p>
 <p>PX9200-27</p> <p>Motor Layering</p>	 <p>PX9200-28</p> <p>Universal Drive Joint</p>	 <p>PX9200-29</p> <p>Wheel Complete</p>	 <p>PX9200-29A</p> <p>Vacuum Wheel Complete</p>
 <p>PX9200-30</p> <p>ESC</p>	 <p>PX9200-30A</p> <p>ESC PRO</p>	 <p>PX9200-31</p> <p>Wifi camera</p>	 <p>PX9200-32</p> <p>Chassis Sheet Steel</p>
 <p>PX9200-33</p> <p>Roof Light</p>	 <p>PX9200-34</p> <p>3MM Crosstip Screwdrivers</p>	 <p>PX9200-35</p> <p>2MM Hexagon Wrench</p>	 <p>PX9200-36</p> <p>2.4G Transmitter</p>
 <p>PX9200-37</p> <p>USB</p>	 <p>PX9200-38</p> <p>Socket Wrench</p>	 <p>PX9200-39</p> <p>Motor Gear (22T)</p>	 <p>PX9200-40</p> <p>Motor Heat Proof Cover</p>
 <p>PX9200-41</p> <p>9203 Wing And Brace</p>	 <p>PX9200-42</p> <p>One-to-Two Lamp Cord</p>	 <p>PX9200-43</p> <p>Headlamp</p>	 <p>PX9200-46</p> <p>Battery LiPo(7.4V 2000mah)</p>

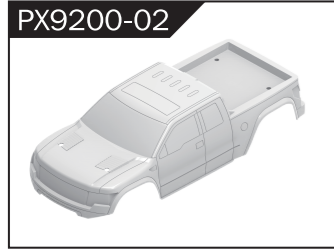 


9200 Car Body




9202 Car Body



 9203 Car Body

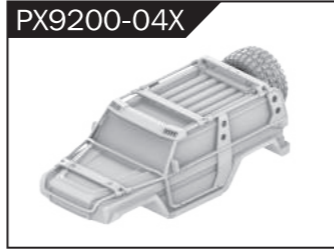


Chassis

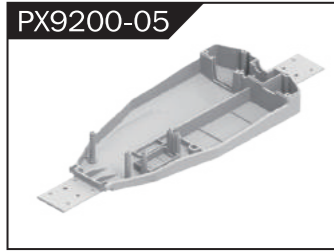 


Chassis



 Tube-style bumpers

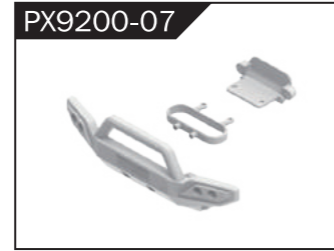

9200-Front/Rear Bumper

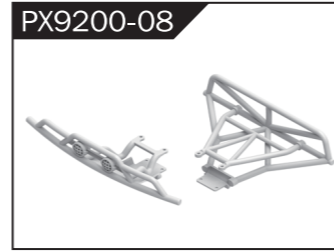 

9203-Front/Rear Bumper



Tie Bar



Lower Suspension Arm



Front Shock Tower and Body Post



Rear Shock Tower and Body Post



Front/Rear Gear Box



Front/Rear Gear Box



Diff Main Gear Complete



Front Steering Carrier



Rear Upright



 
Front/Rear Upper Link




Front/Rear Shock Absorber



Steering Link

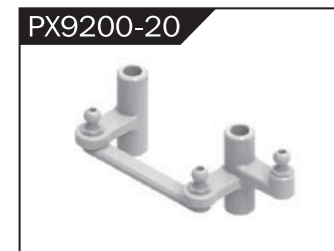

Steering Arm Complete

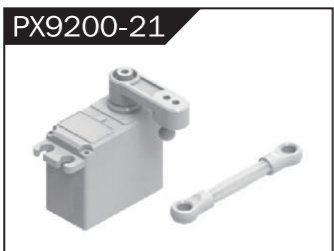 

Servo



Servo Link



Battery LiPo (7.4V 1500mAh)

PAY ATTENTION TO SAFETY PRECAUTIONS

We hope that you can enjoy your new remote-controlled car safely, keeping your head deliberately!

Hopefully, you are safe and pleasant when operating your remote-controlled car!

Property damage and serious personal injury may be caused without safe and responsible attitude.

The prevention measures listed in this manual should be followed strictly so as to ensure safe operation. Therefore, you must follow instructions to operate and precautions measures.

! You should obey all descriptions and notes listed in this manual so as to ensure safe operation of your remote-controlled car.

This remote-controlled car is not suitable for operating by children below 14 years old and they can operate it only when is under the supervision of responsible adult who is experienced in remote.

IMPORTANT HINTS

- The remote car is not suitable for driving on public roads, congested areas and areas where is easy to cause conflicts with pedestrians, traffic vehicles.
- In any circumstances, please don't operate your remote-controlled car in the crowded. It may bump into anyone due to its speed for fear of damages.
- Because your remote-controlled car is controlled by wireless, it may have interference with it coming from different sources.
- Please keep the remote-controlled car in a safe area as soon as possible for fear of collision for that it will be out of control instantly caused by radio.
- Be careful not to touch the motor until it cools because motor and battery will get hot during using process and the motor will have very temperature in using process. Make sure that there are enough air flow can cool motor down. Be careful not to be scalded.
- Don't operate your remote-controlled car in the night or places blocking your view at any time, because it will be obstructed or damaged.
- Above all, please keep your good judgment at any time.
- When you don't use it, please always keep disconnection between battery and electric control joint.
- The matched connecting line when delivery must be used. Don't change the connecting line of the motor. Improper line connection will cause fire or damage electronic speed controller.
- Not all batteries can be used in humid environment.
- Please consult your battery manufacturer to ask whether their batteries can be used in humid environment.
- Don't operate your remote-controlled car in stormy or other severe weather, or thunder and lightning will cause danger.
- Be careful. If you are intend to operate your remote-controlled car by the seaside or nearby beaches, please don't allow your remote-controlled car to access salty water (sea water), bitter salt water (in fresh water or sea water), or other polluted water, for the salty water is high conductive and corrosive.
- The service life of your remote-controlled car can be reduced even it is access to clean water. In humid conditions, you should pay attention to or change your driving mode so as to prolong the service life of the motor.

BATTERY AND BATTERY CHARGING

Your model must use safe and chargeable battery with long service life. Please be sure to read and follow or instruction or notes of offered battery pack or battery charger. You should be responsible for your charging and normal battery packs.

- It is not allowed to charge the battery when left unattended.
- When charging the battery, please take out of and charge the battery pack.
- when it is not used or used for transporting model car, please keep disconnection between electronic speed controller and battery socket.
- Before charging, be sure to charge it in a cool condition after driving.

Please don't use damaged electric wires or batteries, connectors with wire exposure or damaged.



When charging or using the battery, children should be supervised by responsible adults.

RECYCLE YOUR LITHIUM BATTERIES

When your battery has already reached the end of its service life, we strongly suggest that you can recycle batteries of your remote-controlled car and please don't throw batteries into dustbins.

OFFERED CONFIGURATIONS

Your remote-controlled car has already been equipped with several projects to help your convenient and quick initiation and operation. However if you need to buy other commodities or parts, you can contact your dealer to operate and maintain your model.

 
This model includes following configurations

REMOTE-CONTROLLED CAR X1

NO. 9200E / NO. 9200

NO. 9202E / NO. 9202

NO. 9204E / NO. 9204

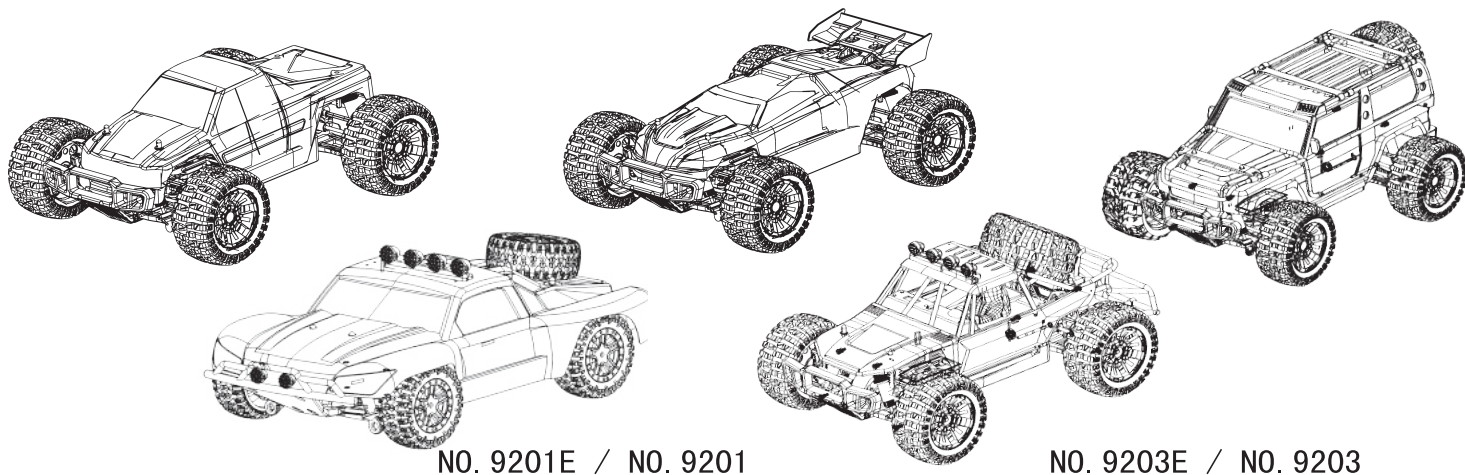

NO. 9201E / NO. 9201

NO. 9203E / NO. 9203

REMOTE X1

USB CABLE X1

RECHARGEABLE BATTERY X1

SPECIFICATION X1



RETAIL ACCESSORY VIEW

P88022



Φ2.6*7PB Round Head Screw

P88023



Φ2.6*10PB Round Head Screw

P88024



 
Φ2.6*30PB Round Head Screw

P88025



Φ3*12 Round Head Screw

P88026

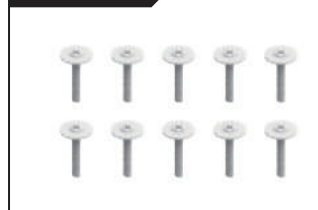

Φ2.3*10PB Screw

P88027



 
Φ2.6*12PB Screw

P88028




Φ1.7*8PB Screw

P88029

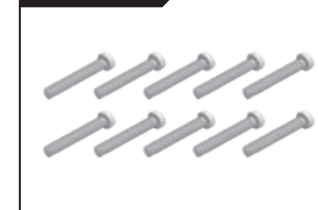


Φ2*8PB Screw

 P88030

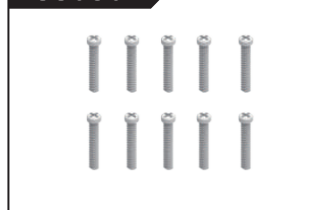


Φ2.3*14PB Screw

 P88031

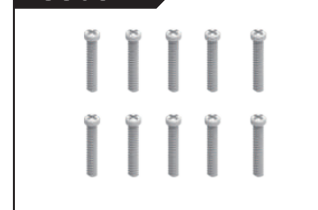


Φ2.6*14PB Screw

 P88032

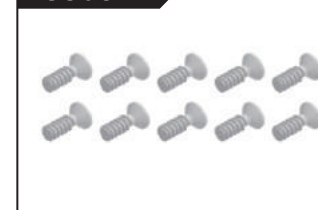

Φ2.6*10 Flattened Head Screw

 P88033

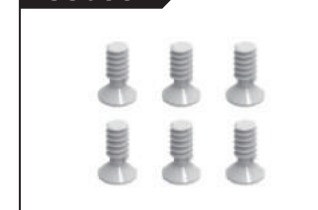


Φ3*8 Flattened Head Machine Screw

P88034




Body Clip

 P88035

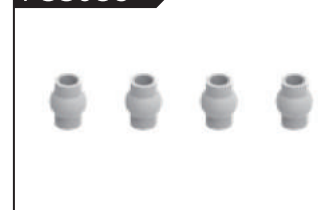

Hollow Ball Connectors

 P88036

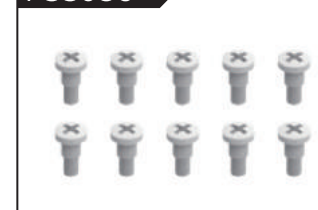

Step Screw

P88037



Φ4.8 Ball Head

P88038



Φ10*15*4 Ball Bearing

P88039



Φ8*10*3 Ball Bearing

P88040



Φ5*9*3 Ball Bearing

P88041



Φ1.5*10 Wheel Hex Pin c

P88042



 
Φ2.5*26.5 Steering Pin B

P88043




Φ3*48 Front/Rear Lower Suspension Pin A

P88044

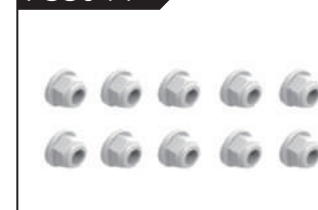


Nylon Nut M4

 PX9200-01

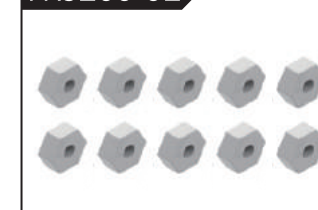


Wheel Hex

 
9203

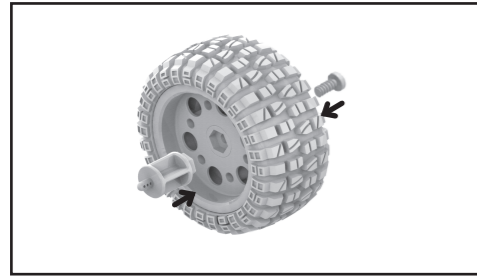

 
STEP 1

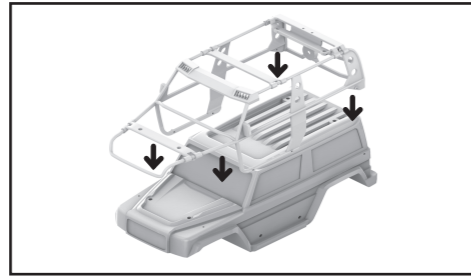

 
STEP 2

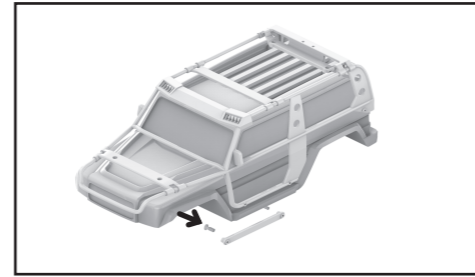

 STEP 3

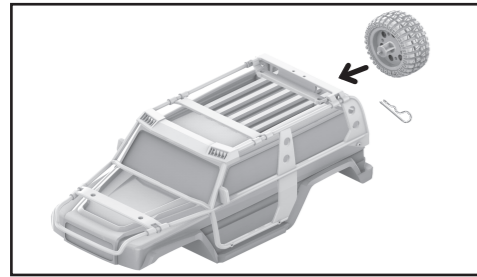


 STEP 4

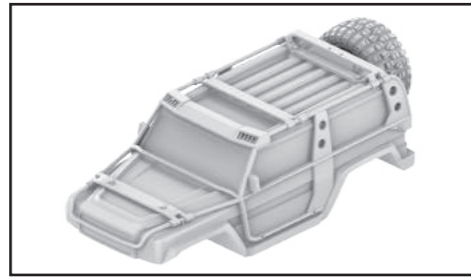


STEP 5

 
9204

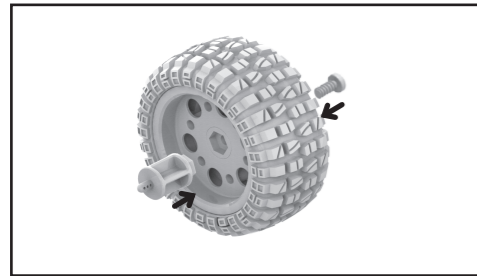

 
STEP 1

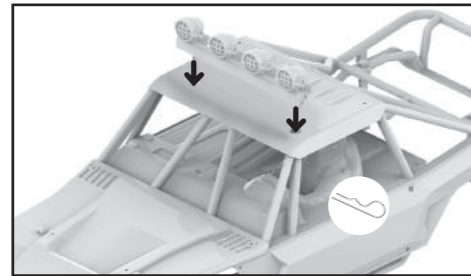

 STEP 2

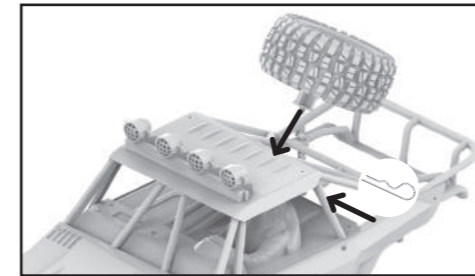

 
STEP 3

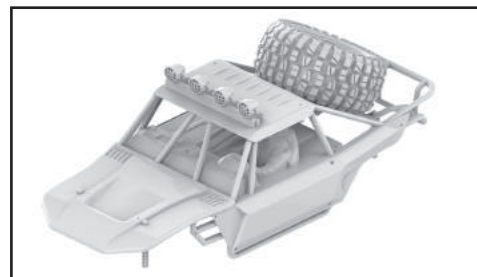


STEP 4

PRODUCT SPECIFICATION


Size of graphic carton (length*Width*height)	450*280*170mm
Size of car (length*Width*height)	375x290x145mm
Total weight(GW/NW):	2.5/2.7kg
Wheel base:	245mm
Wheel diameter:	105mm
Drive:	4WD
Motor:	540 brush driver
Steering engine:	2.2KG tense
Battery:	7.4V lithium battery
Remote frequency:	2.4GHz
Remote distance:	100m
Charging mode:	USB balance charging cable

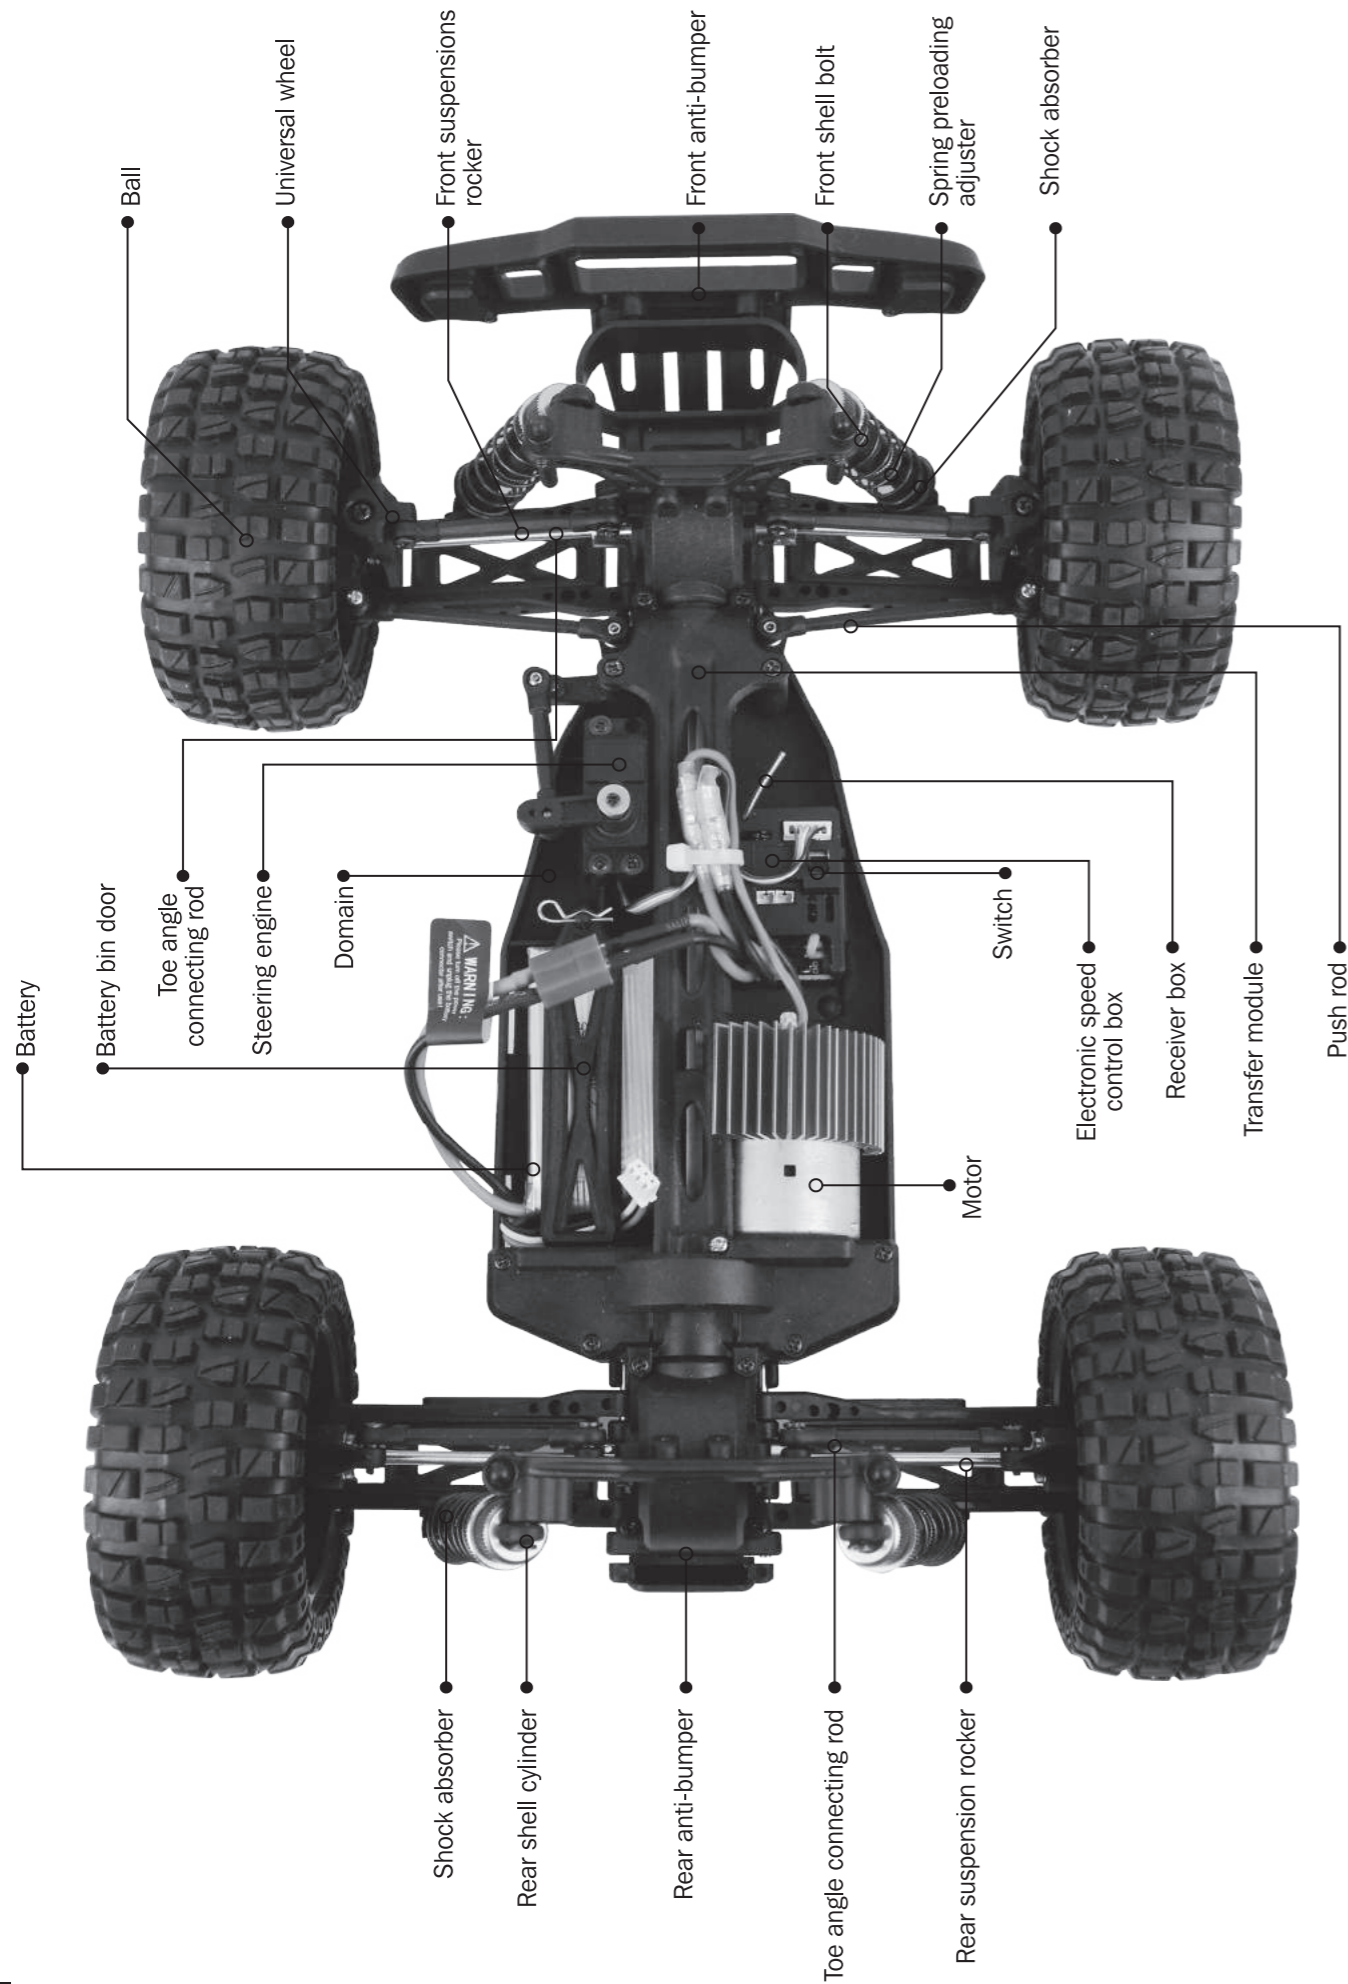 


9200 ASSEMBLY VIEW

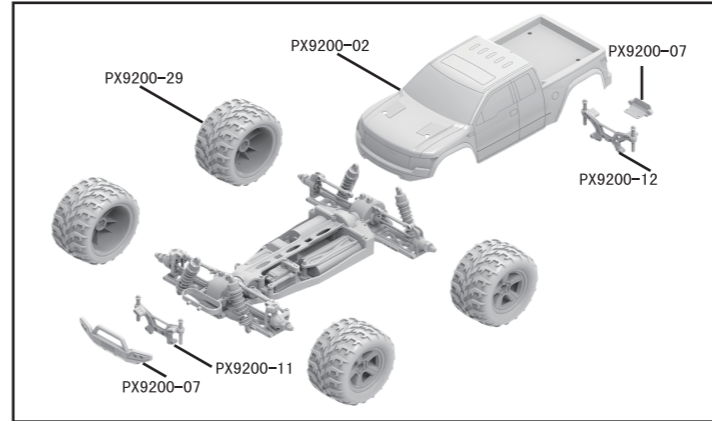 


9202 ASSEMBLY VIEW

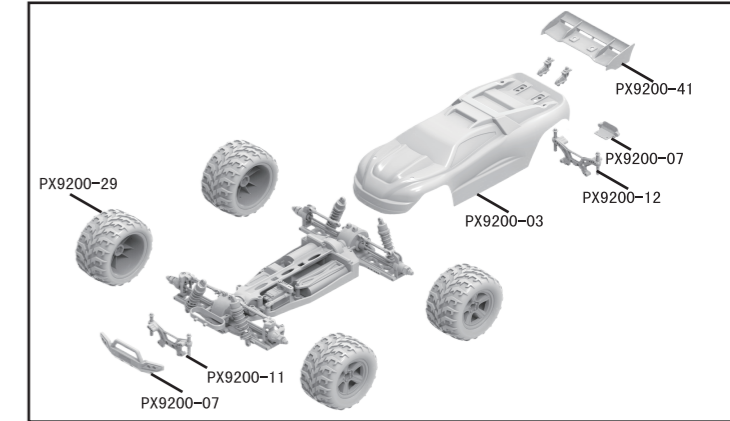 


9203 ASSEMBLY VIEW

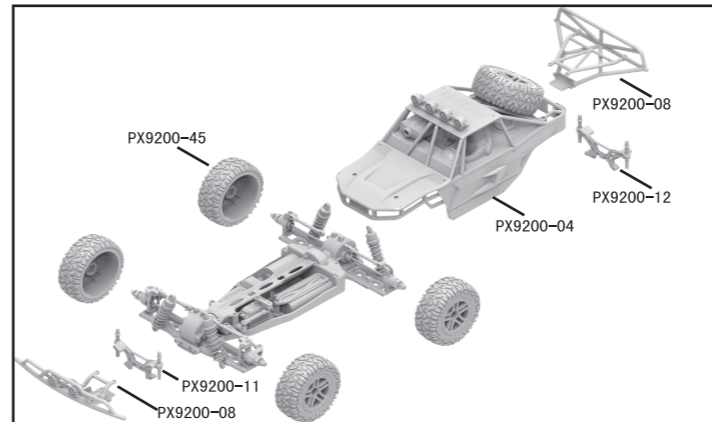 


9203 CAR BOBY

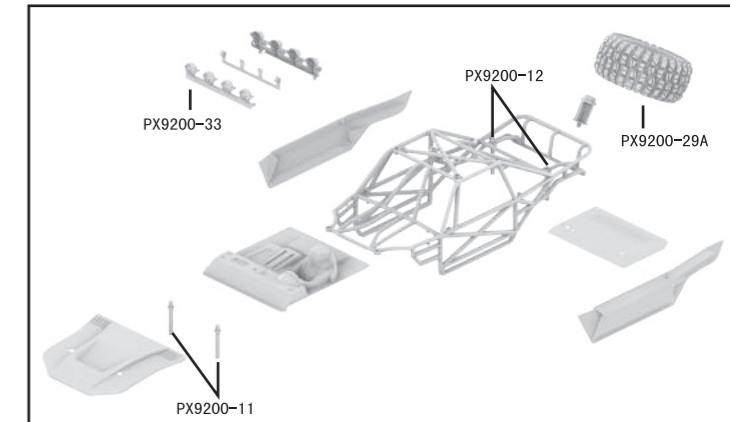 


9204 CAR BOBY

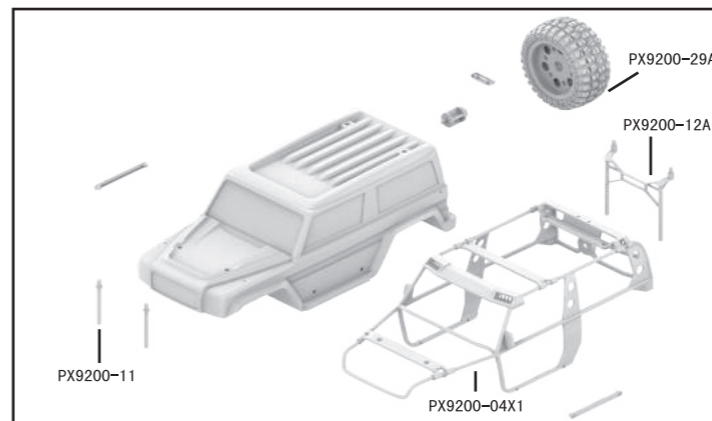 


FRONT & REAR DIFFERENTIAL EXPLODED VIEW

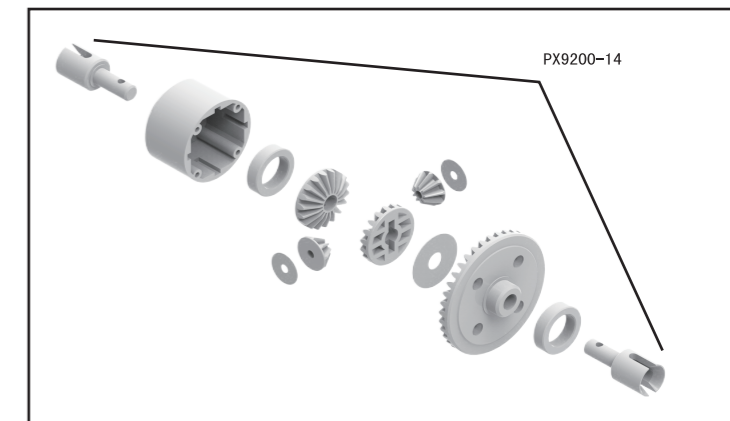 


DRIVE AXLE EXPLODED VIEW

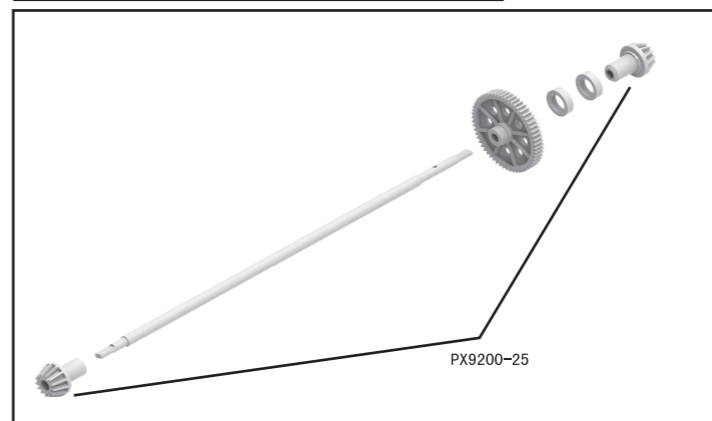 

TIRE & WHEEL AXLE EXPLODED VIEW

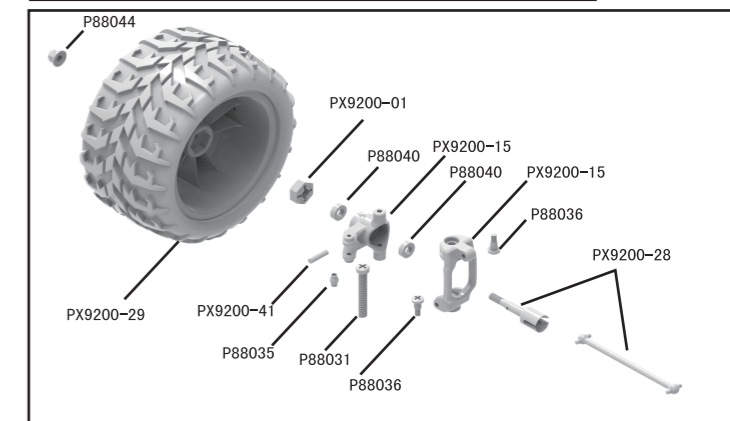 

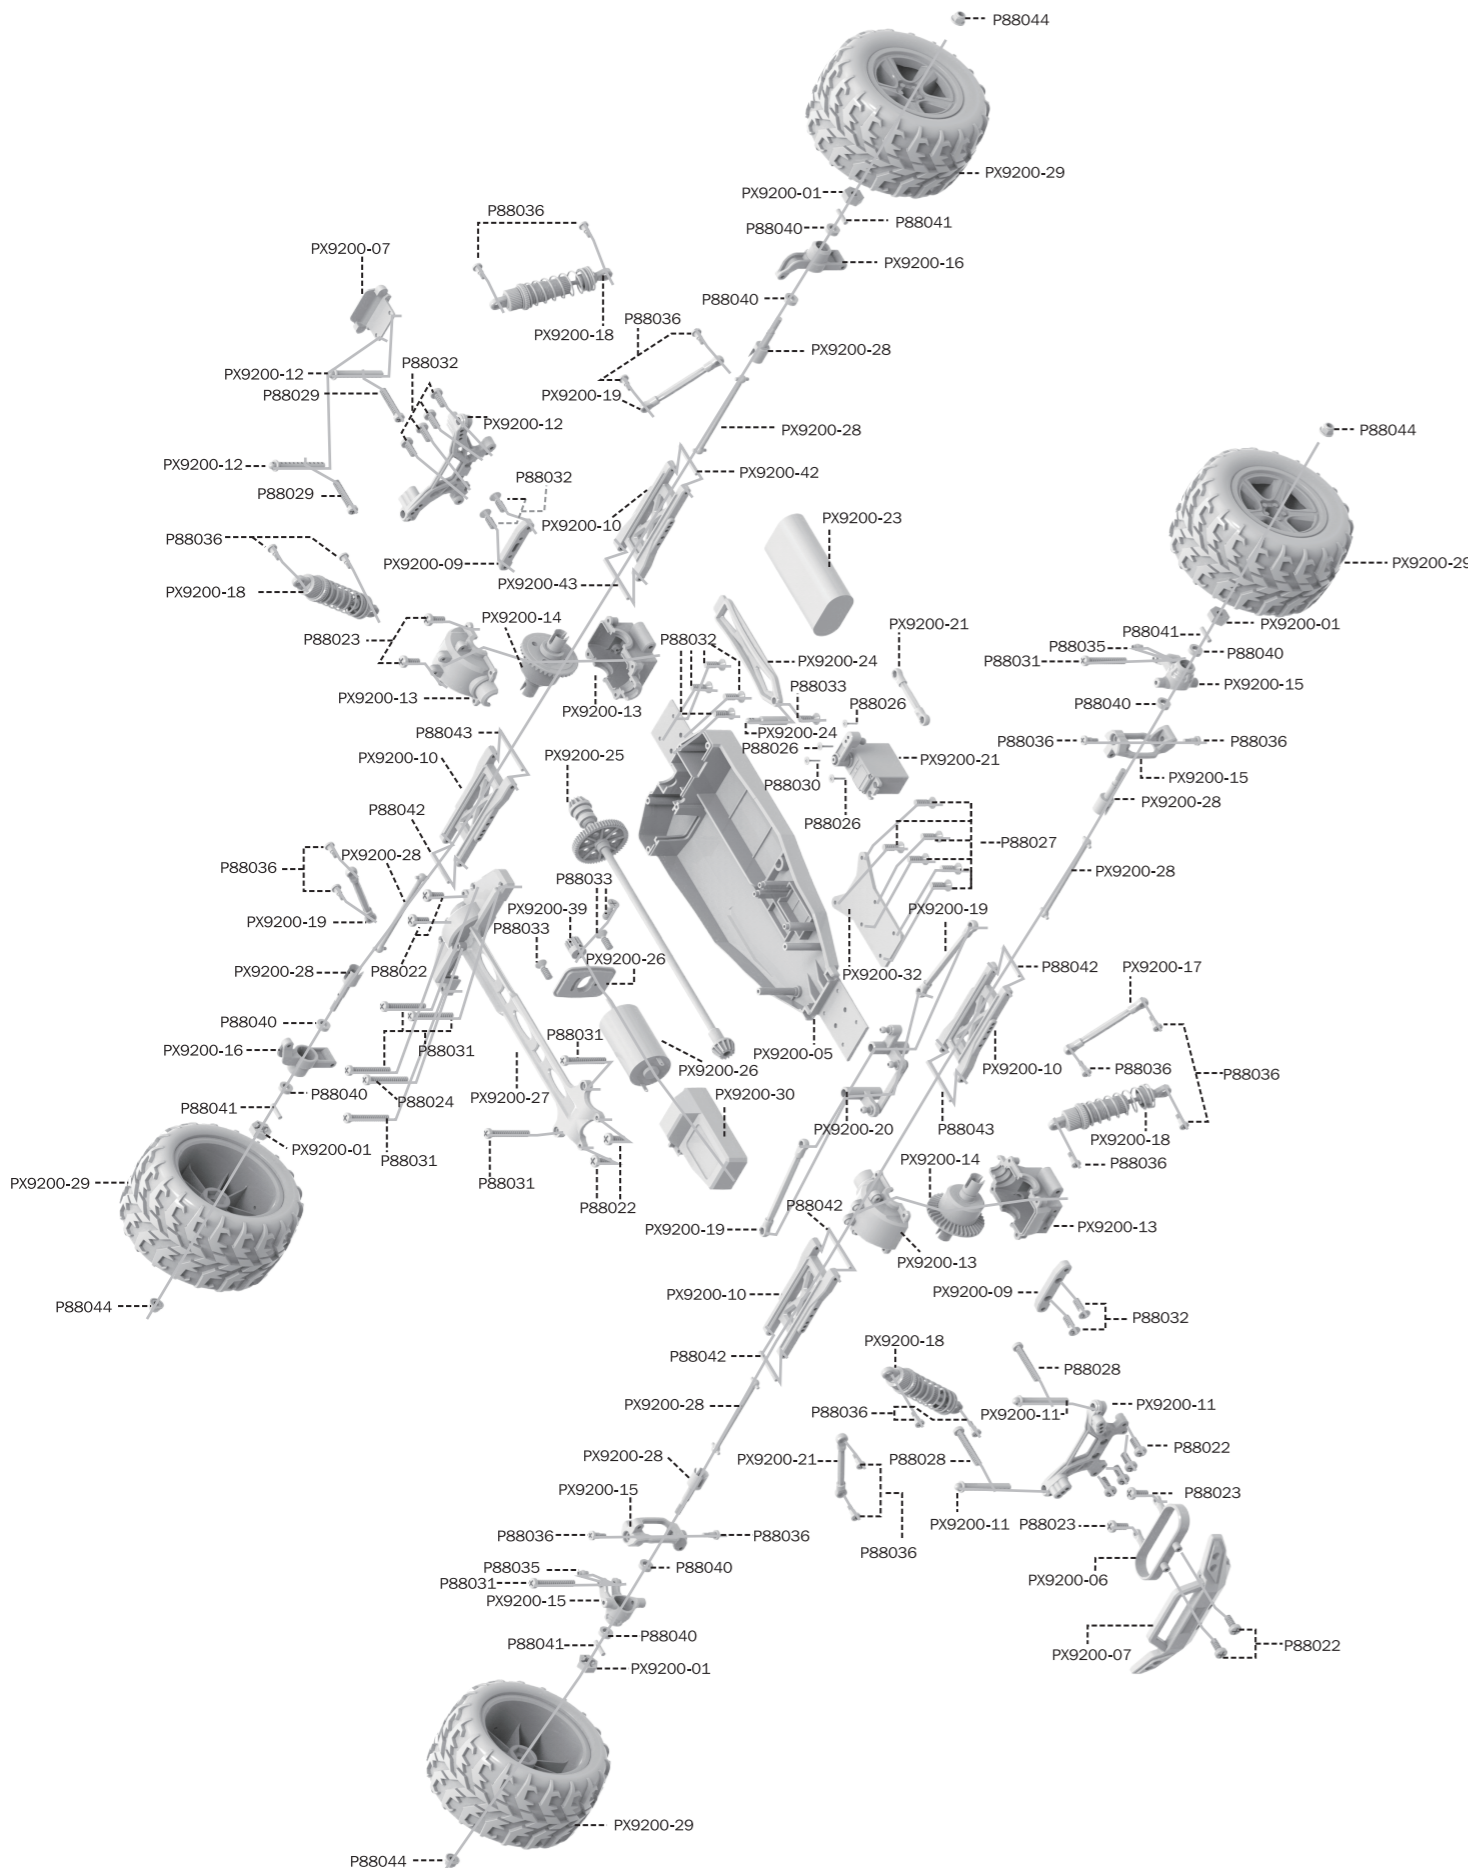 

INSTALLATION OF REMOTE BATTERY

Your remote requires three AA batteries (1.5V*3). The battery compartment is established at the bottom of the remote.

1. Hold and slide the battery compartment to take out of the battery compartment cover.
2. Install the battery according to correct directions of positive and negative anodes, indicating on the battery compartment.
3. Re-install and close the battery compartment.



4. Open the remote to check its state indicator light with red.
5. When the remote is connect to the model, the state indicator is normally on and the model can be operated.

If the remote state LED indicator blinks with red, showing weak battery of the remote or undercharging, or wrong installation.

Please change new or fully-charged battery.

LED indicator is incapable of showing whether the battery is charged fully.

If the LED state indicator of the remote is off.

Please check the direction of installing the positive and negative anodes and check whether the battery is charged fully.

Please refer to diagram of Identification number on page 9 for any other flash signals from LED.

i Use normal battery

Your remote use "1.5V AA" battery and 1:10 RC car batteries are included in this model. You also can your chargeable battery and the (lithium) battery is contained in your remote. Please make sure that chargeable batteries are charged fully according to instructions of manufacturers. If you use chargeable batteries in your remote, you should know that their power is consumed quickly compared with other alkaline batteries.



Note: When your batteries show low electricity shortage (red lights flash slowly), please stop immediately operating your remote for fear of losing control.

 
 
CHARGING BATTERIES

Your remote-controlled car has already have "USB balance charging cable" and it will take 3 hours and a half to charge attached batteries. Please connect the SN of lithium battery into SN socket of charging cable, then USB port of the other end of USB cable is inserted into power adapter, and inserted into power to be charged. This LED light will flash with green, showing that the battery is charged. After 3 hours, (when the charging is completed, the charger will be green LED), then the battery is removed from the charger which it is removed from the socket.



Charging batteries is not allowed unattended.

READY FOR PLAY

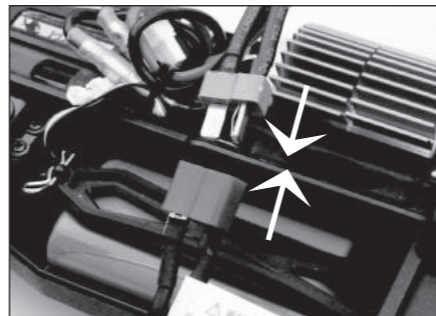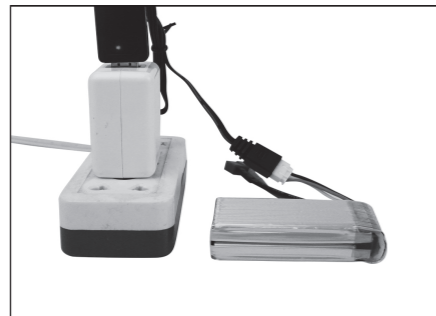

INSTALL THE BATTERY PACK FOR YOUR MODEL

Your remote-controlled car has already included a lithium battery pack with 7.4V.

Please install the battery as per following steps:

1. Remove the buckle from battery plank and take out of battery plank.
2. Put the battery into battery compartment and please make sure that the battery is located in front of the remote-controlled car.
3. Re-install battery plank and don't pinch the battery wire. Fix the car shell on the battery plank and disconnect it with joint of electronic speed controller at that moment



Note: Be sure to remove the battery tab after the remote-controlled car is operated.

WARNINGS: LiPo battery is only suitable for advanced users who have been aware of battery risks. It is not recommended that all children below 14 years old operate LiPo batteries with direction of inexperienced adults. LiPo batteries feature with the lowest safe discharging voltage and over discharge below its voltage is not allowed. Please strictly obey directions from battery manufacturers and charger manufacturers charge, and it is important for you and users of this product to use and store LiPo batteries. Be sure to your safety and understand how to use LiPo battery. Please notice that our company has no obligations to install batteries of the model, therefore, we will assume liability of any special, non-direct, attached or indirect loss caused by using LiPo battery.

NOTE OF REMOTE OPERATION

This 2.4G remote is equipped with directional antenna.

In order to obtain maximum remote scope, please hold the remote to direct vertically the model as soon as possible, and hold the transmitter to get away from the model, which will reduce radio-frequency region.


MAINTAINING YOUR MODEL

- When the battery needs to be charged again, make sure that the battery is in a cooled condition.
- Change the direction and rotate the wheel left or right.
- Always move the switch gently.

MAINTAINING YOUR MODEL

Your model needs to be repaired in time to ensure its optimal operational state. High attention should be paid to following steps. Check whether the car has obvious damage or wearing. For example:

1. Check whether it has broken, bent or damaged parts;
2. Check whether wheel hub and steering are installed in place;
3. Check whether it has worn wire lines or connecting rod with loose connection;
4. Check receiver and remote, and installation of electronic speed controller;
5. Check combination of wheels and tightness of nuts with spanner;
6. Check remote system, especially battery capacity;
7. Check whether car body or suspension has loose screws;
8. Check whether wearing of wheel gear, for example, the debris in wheel gear should be taken out in time;
9. Check tightness of all balls;



N level: Pull the trigger to allow the car to advance, while reverse the trigger to draw back the car.

R level: Pull the trigger to draw back the car. Reverse the trigger to allow the car to advance.

 
N level: Rotate knob left, the car turns left and Rotate knob right, the car turns right.

R level: Rotate knob left, the car turns right and Rotate knob right, the car turns left.

OPERATING YOUR CAR

BEGINNING

1. Move ESC switch to "ON", as shown in figure 1.
2. Moving switch of mobile power to "ON" to turn on the remote. The red LED light will be on. If the red LED light is off, please check whether the battery's positive and negative anodes of remote is installed correctly, as shown in Figure 2.
3. When the operational driving has been completed, please turn off the remote power and be sure to remove the power. If the battery connection is not disconnected, it is likely to damage batteries.

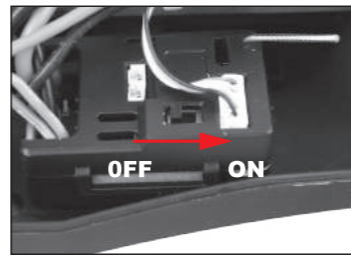

图一

 


图二

NOTE! BE SURE TO CORRECT CONNECTION BETWEEN REMOTE AND CONNECTOR BEFORE OPERATING THE CAR.


OPERATIONAL CONTENTS

- Pull the trigger to allow the car to advance slowly, and advance quickly when pulling again.
- Push the trigger forward to stop the car, and driving/reserving in the opposite direction when pushing again.
- When colliding, loosen the trigger.
- When the battery is getting low, the car will roll until it stops. The car is equipped with LVC to protect the battery.

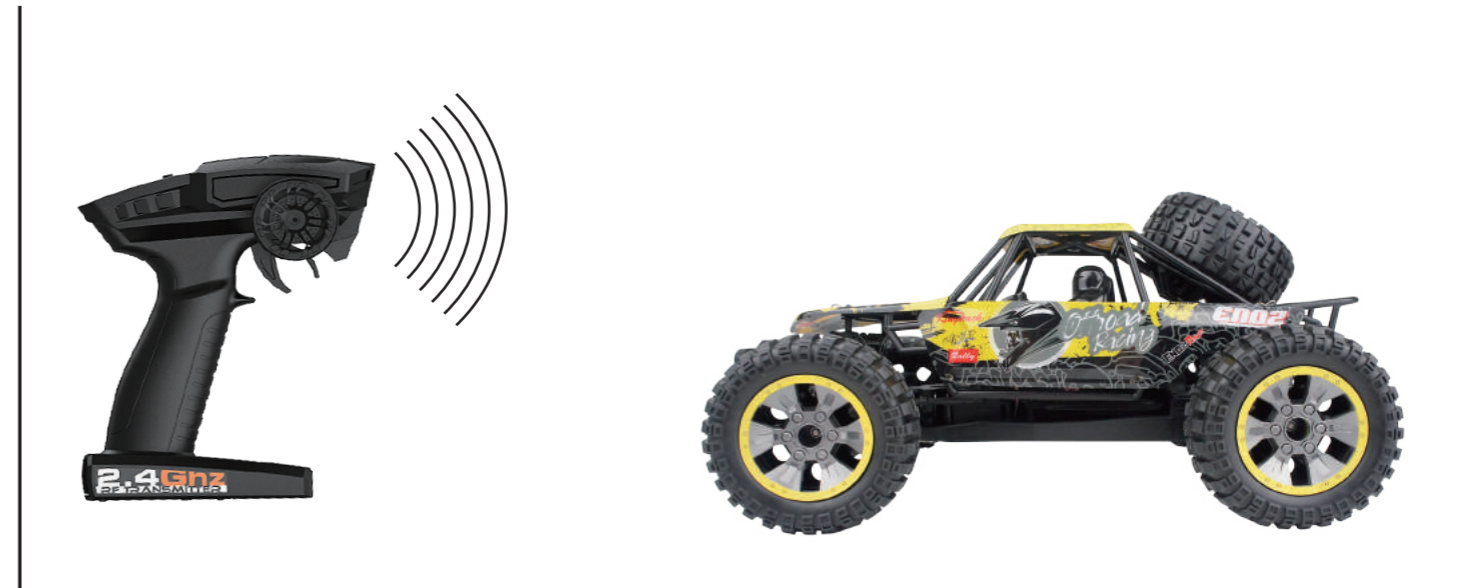

- The everlasting first step is to turn on the remote and turn off the remote at last. This operation can protect you from the remote receiving other signal sources for interference, or the remote-controlled car will be out of control. The best way for preventing it losing control is that the operation sequence which the first step is to turn on the remote and turn off it at last should be followed despite it has lost-control protection.
- Please use new or fully-charged batteries for remote, for the weak battery will limit signals between receiver and transmitter. Its weakness or signal losing will result in lost-control of your model and occurring collisions.
- In order to make remote and receiver in a frequency, receivers of model must be turned on within 20s after the remote is connected. If the remote indicator flashes quickly with red, it will be fail connection. If you miss it, close remote and restart.

 
REMOTE CONTROLLER

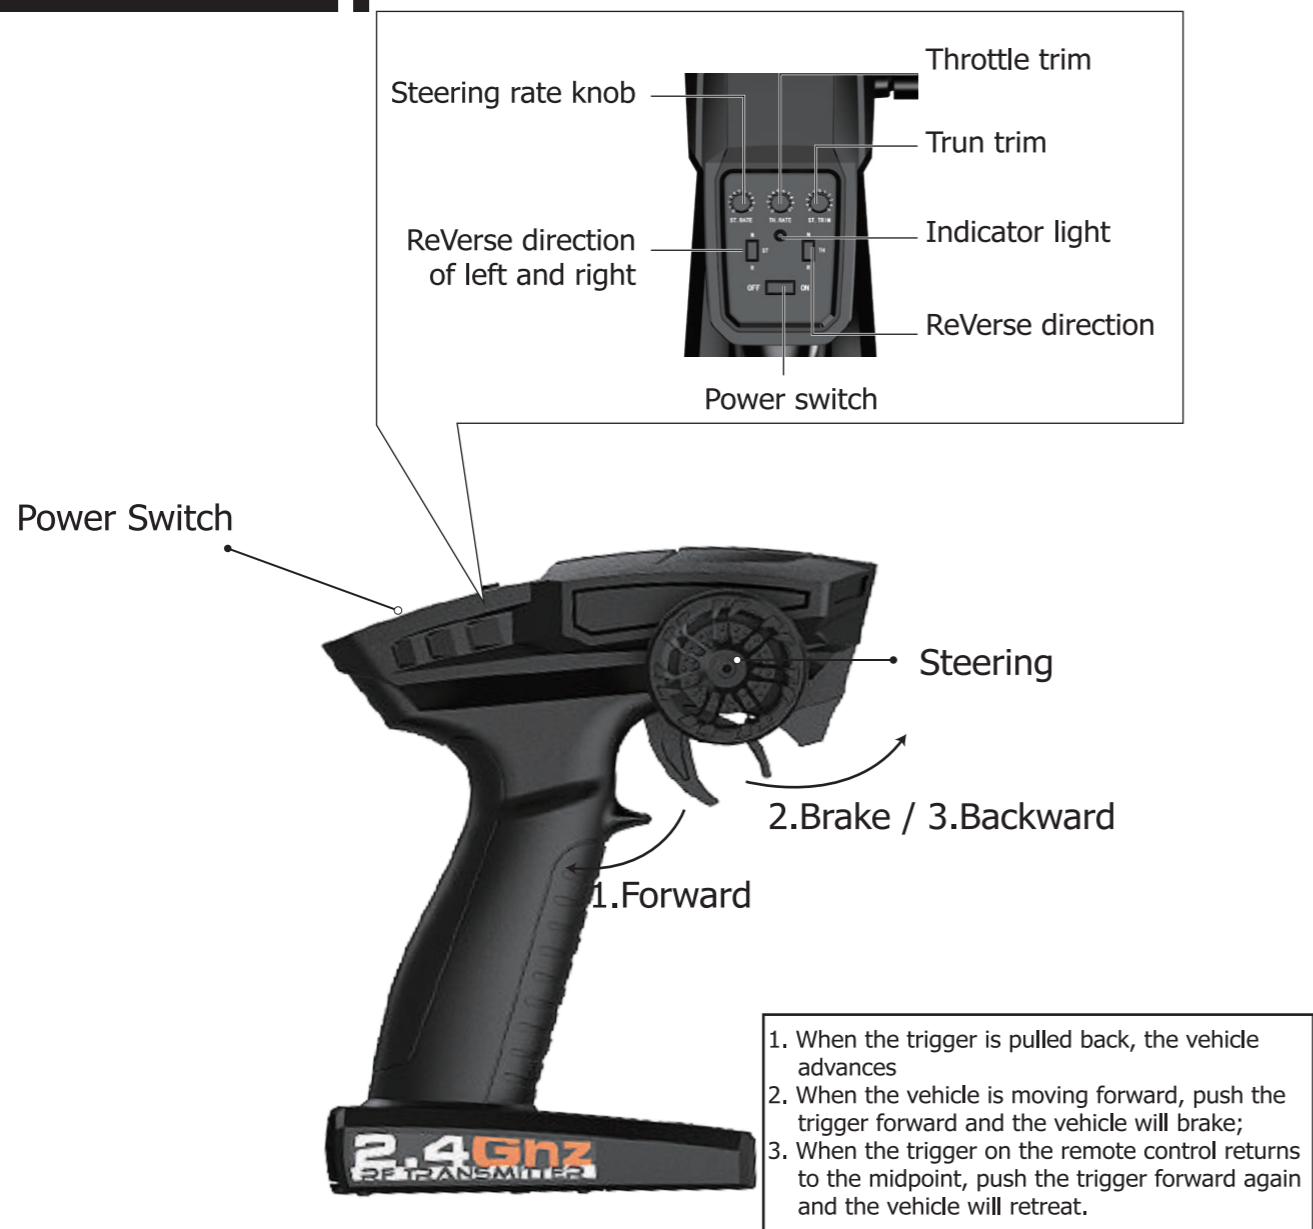

REMOTE LED CODES


LED color/pattern	Name	Hints
Red light always on	Normal driving pattern	Please refer to information about how to use remote control on page 9.
Red light with slow flash (on at 0.5s/off at 0.5s)	Hint of low power	For more information m please refer to operation of putting new battery into remote on page 6.
Red light with quick flash (on at 0.125s/off at 0.125s)	Connect failed/error	If transmitter and receiver are bound unsuccessfully, please close the remote system and restart for recovering normal operation. Please check exceeding scope, low battery or damaged antenna if the connection is failed.

 FINE TUNING KNOB OF STEERING

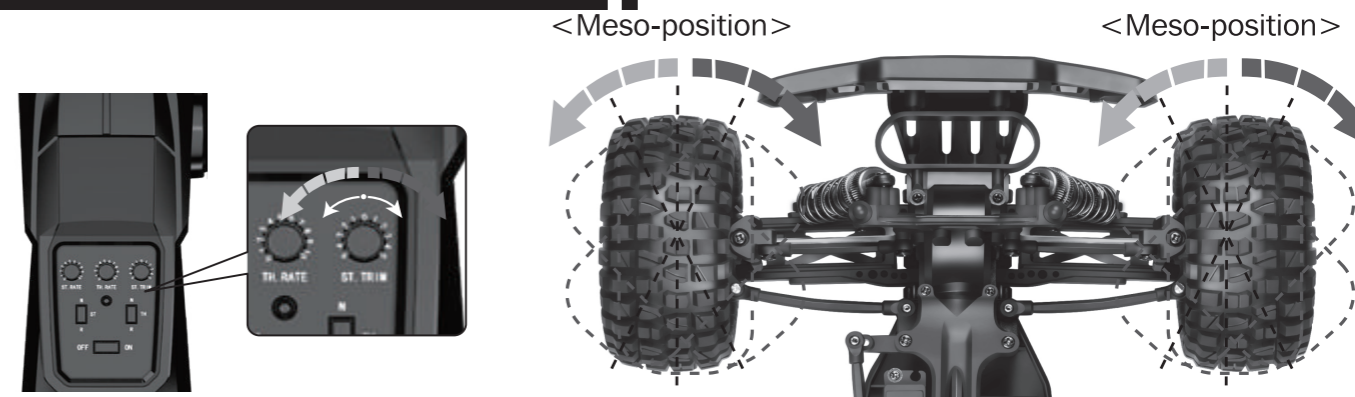


STEERING RATIO KNOB

 When the steering wheel rotates, adjust directional angle by using steering ratio knob

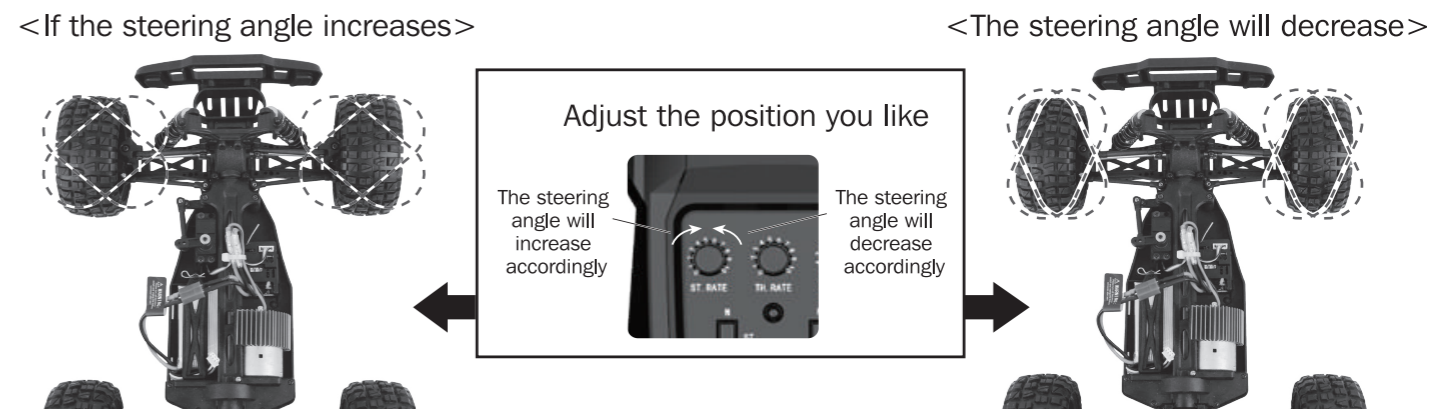

FINE TUNING KNOB OF ACCELERATOR

 Rotate left/right using fine tuning knob of accelerator.Adjust the speed you like.

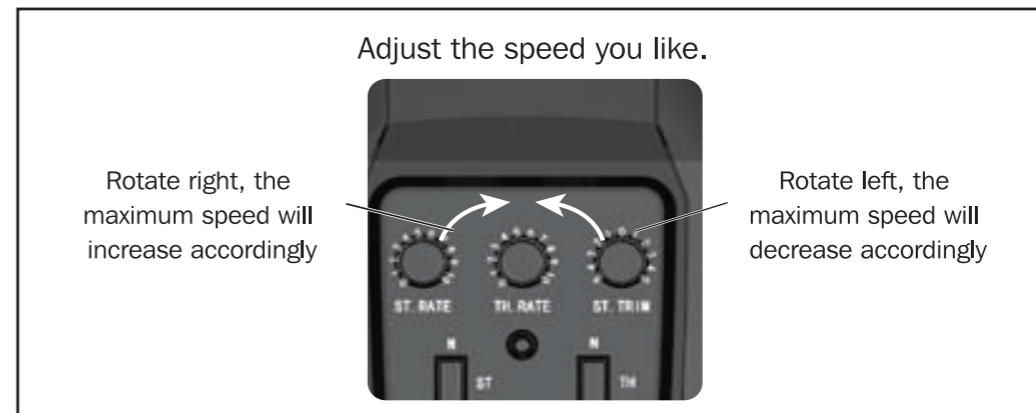

REVERSE DIRECTION BUTTON

Considering habits of more users operating remote, forward and backward, left and right reverse buttons are launched to enhance users' experience.