



DX4S

4-Channel 2.4GHz DSMR™ System



Instruction Manual
Bedienungsanleitung
Manuel d'utilisation
Manuale di istruzioni

NOTICE

All instructions, warranties and other collateral documents are subject to change at the sole discretion of Horizon Hobby, Inc. For up-to-date product literature, visit horizonhobby.com and click on the support tab for this product.

MEANING OF SPECIAL LANGUAGE

The following terms are used throughout the product literature to indicate various levels of potential harm when operating this product:

NOTICE: Procedures, which if not properly followed, create a possibility of physical property damage AND little or no possibility of injury.

CAUTION: Procedures, which if not properly followed, create the probability of physical property damage AND a possibility of serious injury.

WARNING: Procedures, which if not properly followed, create the probability of property damage, collateral damage and serious injury OR create a high probability of superficial injury.



WARNING: Read the ENTIRE instruction manual to become familiar with the features of the product before operating. Failure to operate the product correctly can result in damage to the product, personal property and cause serious injury.

This is a sophisticated hobby product. It must be operated with caution and common sense and requires some basic mechanical ability. Failure to operate this Product in a safe and responsible manner could result in injury or damage to the product or other property. This product is not intended for use by children without direct adult supervision. Do not attempt disassembly, use with incompatible components or augment product in any way without the approval of Horizon Hobby, Inc. This manual contains instructions for safety, operation and maintenance. It is essential to read and follow all the instructions and warnings in the manual, prior to assembly, setup or use, in order to operate correctly and avoid damage or serious injury.

**WARNING AGAINST COUNTERFEIT PRODUCTS**

Always purchase from a Horizon Hobby, Inc. authorized dealer to ensure authentic high-quality Spektrum product. Horizon Hobby, Inc. disclaims all support and warranty with regards, but not limited to, compatibility and performance of counterfeit products or products claiming compatibility with DSM or Spektrum.

NOTICE: This product is only intended for use with unmanned, hobby-grade, remote-controlled vehicles and aircraft. Horizon Hobby disclaims all liability outside of the intended purpose and will not provide warranty service related thereto.

Age Recommendation: Not for Children under 14 years. This is not a toy.

WARRANTY REGISTRATION

Visit community.spektrumrc.com today to register your product.

France RF Setting: The DX4S has a France RF setting that complies with French regulations. If this transmitter is purchased for use in France, always use the France power setting when operating the transmitter outdoors. See “RF Mode” in the “System” section for more information.

SAFETY PRECAUTIONS

- Always ensure all batteries have been properly charged prior to using the model.
- Always check all servos and their connections prior to each run.
- Never operate your model near spectators, parking areas or any other area that could result in injury to people or damage of property.
- Never operate your model during adverse weather conditions. Poor visibility can cause disorientation and loss of control of your model.
- Never point the transmitter antenna directly toward the model. The radiation pattern from the tip of the antenna is inherently low.
- If at any time during the operation of your model you observe any erratic or abnormal operation, immediately stop operation of your model until the cause of the problem has been ascertained and corrected.


Building on the success of the DX3S transmitter, the Spektrum™ DX4S and DSMR™ surface protocol bring you even more features including pre-programmed steering mixes, full switch assignability and a convenient back-lit display. Spektrum™ DSMR technology is an exclusive, frequency-agile 2.4GHz protocol that provides surface RC vehicles and boats with superb range and response. This is particularly true in environments where many other 2.4GHz transmitters are in use at the same time. Spektrum DSMR transmitters are also backwards compatible with DSM, DSM2 and Marine-specific Spektrum receivers.

TABLE OF CONTENTS


Warranty Registration	2	Bind Transmitter to Receiver	10
Identifying Controls and Switches	4	Sub-Trim.....	10
Installing Batteries	4	Timer	11
Installing Optional Li-Po Battery Pack.....	5	Switch	11
Changing the Rubber Grip.....	5	Mixing.....	12
Updating the Firmware	5	Servo Speed	13
ModelMatch.....	5	ABS (Automatic Breaking System or pulse brakes) 13	
Warning Screens	6	Trim Step	13
Low Battery Alarm	6	Throttle Punch	14
Inactivity Alarm	6	Reset	14
Main Screen	6	Monitor	14
Programming Guide.....	6	System	15
Individual Direction Adjustments	7	Telemetry.....	16
List	7	Troubleshooting Guide	17
Model Select.....	7	FCC Information.....	17
Copy	7	Antenna Separation Distance	17
Reverse	8	Warranty and Repair Policy	18
Travel.....	8	Warranty and Service Contact Information	19
Exponential	8	Parts Contact Information	19
Receiver Compatibility.....	9	Declaration of Conformity	20
Failsafe.....	10	European Union Information.....	20

IDENTIFYING CONTROLS AND SWITCHES


Function	Function
(A) Switch A	(I) Rubber Grip
(B) Switch B	(J) Power Switch
(C) Switch C	(K) Power LED
(D) Switch D	(L) Battery Cover
(E) Switch E	(M) Throttle Trigger
(F) Switch F	(N) Steering Wheel
(G) Roller Selector	(O) Antenna
(H) Memory Card Port (under rubber grip)	(P) LCD Screen

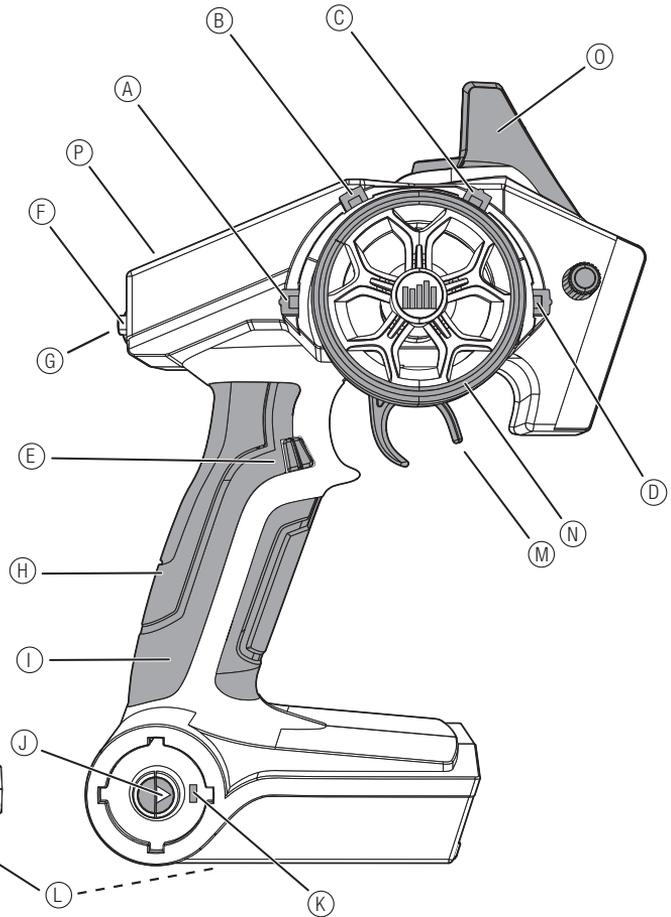

Press the power switch (J) to power ON the transmitter. The Power LED (K) will come on, a Spektrum logo screen will show, then the Main Screen will show on the LCD screen (P).

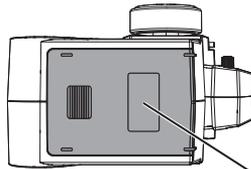


INSTALLING BATTERIES

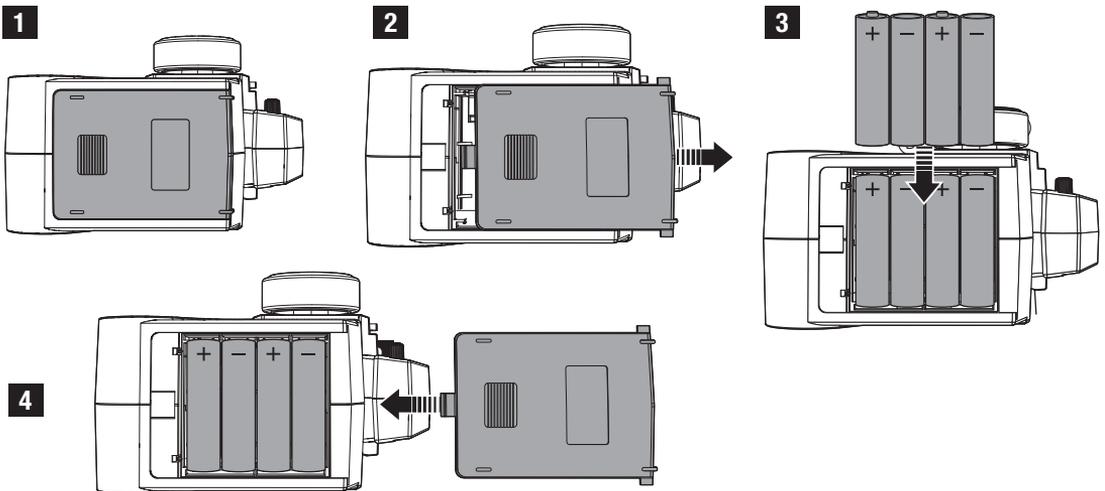

CAUTION: NEVER remove the transmitter batteries while the model is powered on. Loss of model control, damage or injury may occur.

Installing Optional Li-Po Battery Pack

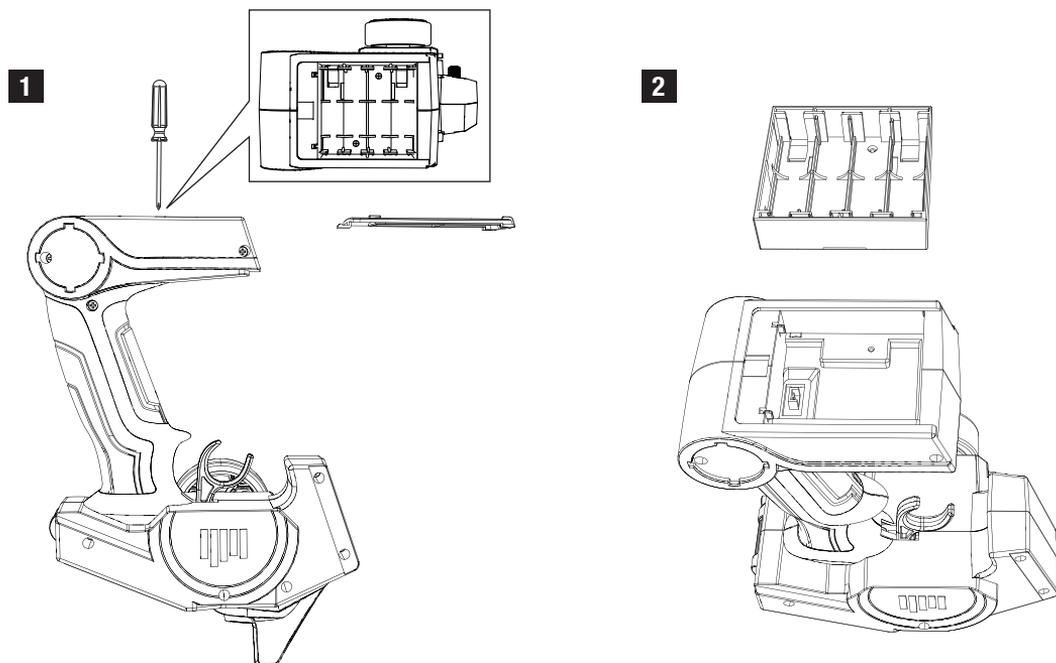

Changing the Rubber Grip


This transmitter includes 3 sizes of grips. The medium-size grip is installed at the factory. Inside the grip is a letter size: L for large, M for medium and S for small.

To change the rubber grip:

1. Lift the edge of the grip and pull the grip away from the handle.
2. Align the tabs on the new grip with the slots in the handle.
3. Press the grip against the handle.

Updating the Firmware

The DX4S features an SD card reader, enabling you to update the transmitter when firmware updates are available. Register your transmitter at Community.SpektrumRC.com to receive the latest information regarding firmware updates. To install firmware updates on your DX4S transmitter:

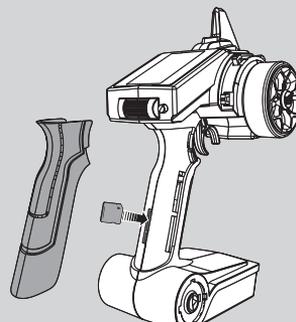

1. Remove the grip from the back of the transmitter handle.
2. Download the latest firmware from Community.SpektrumRC.com to an SD card. The transmitter serial number can be found by going to the About screen.
3. Install the SD card in the card reader slot on the DX4S transmitter.
4. Power on the transmitter. A Spektrum logo and an installation bar will appear. Installation is complete when the Main screen appears.
5. Remove the SD card from the card slot on the transmitter.
6. Re-install the rubber grip on the transmitter handle.

ModelMatch

The Spektrum DX4S transmitter features ModelMatch™ technology, preventing you from operating a vehicle when the wrong model memory is active in the transmitter. If you select the wrong model memory, the receiver will not respond to the transmitter.


WARNING SCREENS

Low Battery Alarm

An alarm will sound and a warning screen will show when the transmitter's battery power falls below a set limit. This alarm reminds a user to bring a model under full control, power off the transmitter and replace the batteries. Press the Roller to stop the alarm and go to the *Main Screen*. Set the low battery limit using the *System Screen*.

CAUTION: If you decide to use the optional Li-Po battery back, never allow the battery voltage to fall below 6.4V.

- A Warning title
- B Battery voltage, which is under the set limit
- C Animated arrow pointing to Roller below the screen
- D Image of roller below the screen.

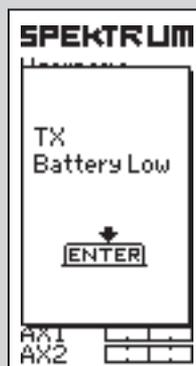

Inactivity Alarm


The alarm reminds users to power off the transmitter and save battery power. If the transmitter is powered on for more than 10 minutes and no control movement is detected, the inactivity alarm will activate. Moving any control stops the alarm. After one hour of inactivity, the transmitter will automatically shut down to save battery life. To turn the transmitter on again, push the power button off then on again.

MAIN SCREEN

The Main Screen displays information about the active model, including the Timer (when activated).

To return to the Main Screen at any time, press and hold the Rolling Selector for at least 3 seconds.

- A User Name
- B Active Model memory number (30 available)
- C Name assigned to the Model memory
- D Timer (when activated)
- E Transmitter battery voltage
- F Steering Percent
- G Brake Percent
- H Position of Steering (St) trim
- I Position of Throttle (Th) trim
- J Position of Aux 1 trim
- K Position of Aux 2 trim

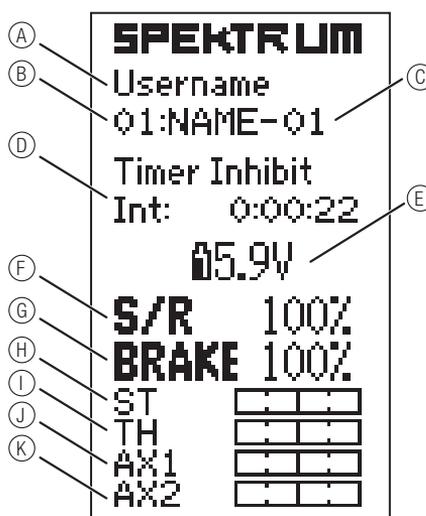

PROGRAMMING GUIDE


Using the Rolling Selector

Press the Selector to enter a highlighted function.

Roll the Selector to highlight a function, or change settings and values when selected.

Press and hold the Selector for more than 3 seconds in any screen to return the display to the List Screen or the Main Screen.

To program, always start with a press on the Selector, then roll, then press, then roll, and so on.

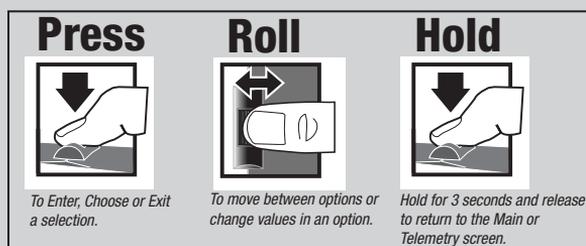

Individual Direction Adjustments

In some instances, you may find it necessary to independently adjust the control directions; for example, if you want more travel for left steering than right steering, perform the following steps:


1. Scroll to the value you wish to change and press the Rolling Selector.

2. When both directions are selected, move the control (steering or throttle) toward the control direction you wish to change. The selection box moves to the desired direction. You do not need to hold the control in the desired direction.
3. To change the opposite direction, simply move the control in that direction.
4. Press the Rolling Selector to save the selection.

LIST

The List Screen shows other screens to set programming in the transmitter.

- A dark box (A) with a clear symbol or text represents the highlighted selection.
- The Active Screen name (B) is displayed at the top of the screen.
- Choosing this arrow (C) will open the next higher screen, such as Main Screen or this List Screen.
- A small bar (D) shows the relative position of a highlighted screen name in the List.

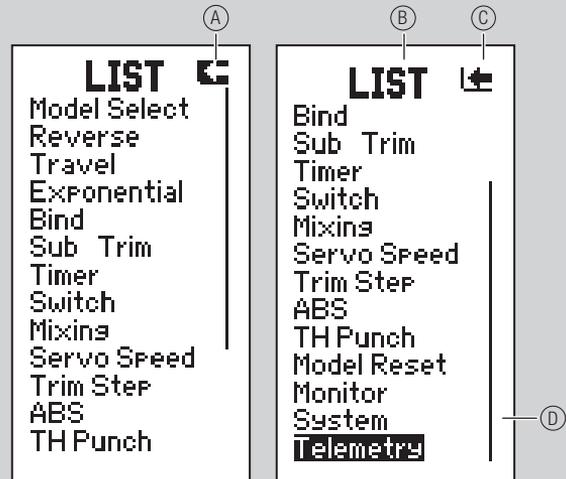

Model Select

Use the Model Select menu to change the model memory, to assign a model name or to copy a model. The DX4S has 30 model memories available.



CAUTION: NEVER change the model in Model Select while operating a model. Changing the model memory interrupts the transmitter signal to the receiver and may cause loss of vehicle control, damage or personal injury.

Model Name

Enables you to name the selected model memory using up to eight characters.

1. Use the roller to select a Model Name in the List.
2. Select the character you want to change. A list of characters appear.
3. Select the character you want to use.
4. When you are finished naming the model memory, select the arrow to save the name and return to the list.




Copy

The Copy function shares active model memory settings with a selected model memory space. This is useful for saving setups for one model to adjust programming for track conditions or model setups.

Choosing *No* returns to the List Screen. Choosing *Yes* saves the active model settings to the selected model memory.


- A** Active or source model memory number
- B** Destination model memory number

IMPORTANT: When using the Copy function, model information will be permanently overwritten by the active model settings.

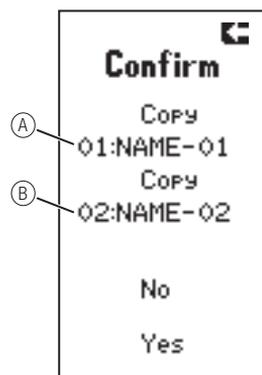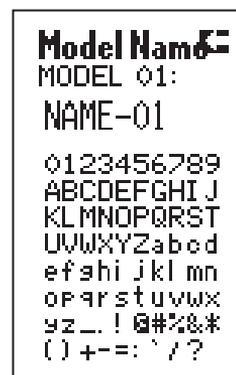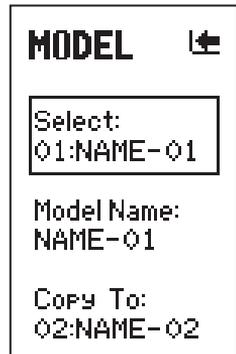

Reverse

The Reverse function, also known as servo reversing, establishes the channel direction relative to the channel input. Use the reverse menu if, for example, the wheels turn left when you turn the steering wheel to the right. Reverse is available on all channels and is normally the first function you should test and adjust during programming.

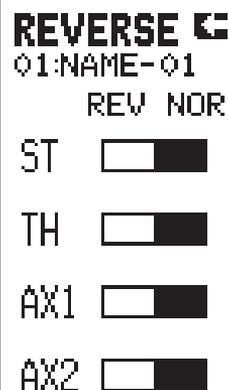


Travel

The Travel function supports precise endpoint adjustments in all channels. Travel values range from 0–150% (Default is 100%).

NOTICE: Always check the control directions at the extents of travel to be sure the linkages do not bind. Travel values that are too high will cause binding, which may result in damage to the vehicle.

Channel	Top	Bottom
Steering	L (left)	R (right)
Throttle	B (brake)	F (forward)
Aux 1	H (high)	L (low)
Aux 2	H (high)	L (low)

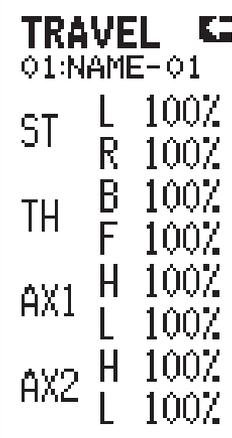


Exponential

The Exponential (Expo) function affects the response rate of the steering, throttle and/or brake. A positive Steering Expo value, for example, decreases steering sensitivity around neutral to make it easier to drive at high speeds in a straight line while still allowing for maximum turning radius. While sensitivity with positive Expo is decreased around neutral, it increases the sensitivity near the end of travel.

*Reference chart for options available on each channel:

Channel	Top	Bottom
Steering	L (left)	R (right)
Throttle	B (brake)	F (forward)
Aux 1	H (high)	L (low)
Aux 2	H (high)	L (low)

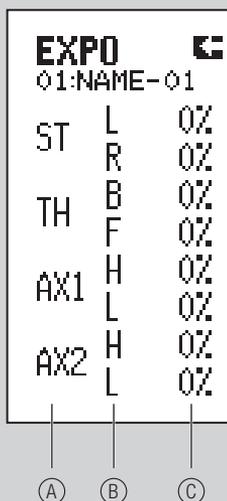

- A** Channel: *Steering, Throttle or Aux (auxiliary)*
- B** Direction
- C** Adjustable value (from -100% to +100% (0 is factory default or inhibit))


IMPORTANT: Both positive and negative Expo values are available. A positive Expo value results in the center being less sensitive (desirable most of the time), while a negative value increases the sensitivity around center (normally not used).

RECEIVER COMPATIBILITY


The DX4S transmitter is compatible with Spektrum DSMR, DSM[®], DSM2[®], and Marine surface receivers. The SR410 DSMR receiver is only compatible with DSMR transmitters.

Install the receiver in your vehicle using double-sided foam servo tape. Foam servo tape holds the receiver in place and protects the receiver from vibration. Position the antenna vertically and away from the vehicle in an antenna tube. The SR410 has a coax style antenna. The last 31mm of the antenna is the portion that receives the signal from the transmitter.


NOTICE: Do not cut or bend the antenna or it could become damaged.

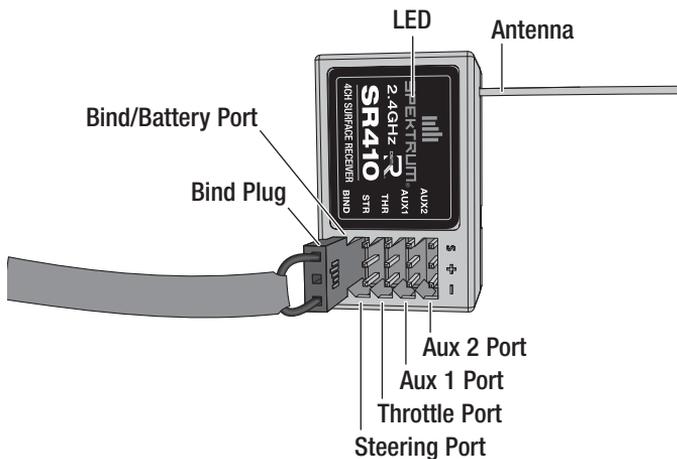

Electric Vehicle Installation

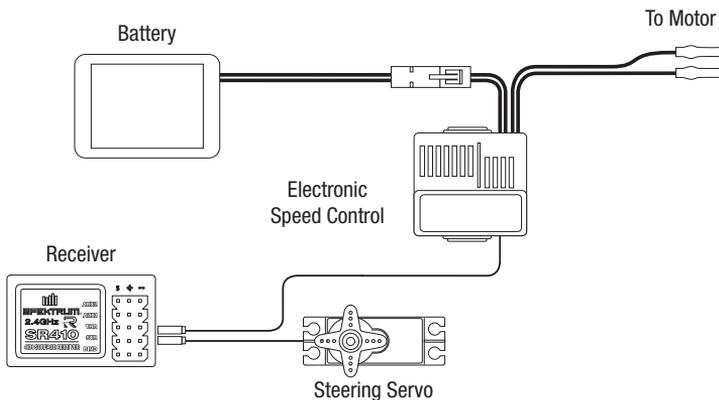

Typical Nitro Vehicle Installation

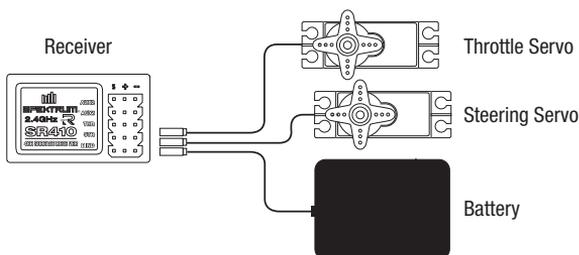


Failsafe

The throttle failsafe position is set during binding. In the unlikely event that the radio link is lost during use, the receiver will drive the the throttle servo to its pre-programmed failsafe position (normally full brakes) and all other channels will have no servo output. If the receiver is turned on prior to turning on the transmitter, the receiver will enter the failsafe mode, driving the the throttle servo to its preset failsafe position. When the transmitter is turned on, normal control is resumed.

IMPORTANT: Failsafe activates only in the event that signal is lost from the transmitter. Failsafe will NOT activate in the event that receiver battery power decreases below the recommended minimums or power to the receiver is lost.

The Bind Screen shows the active model and supports binding the active model memory to a receiver.

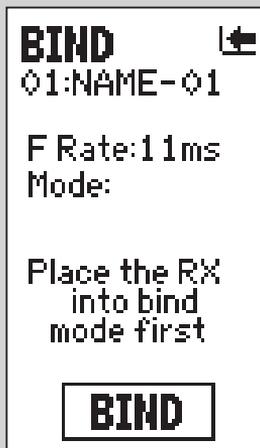

Bind

Binding is the process of teaching the receiver the specific transmitter's code called GUID (Globally Unique Identifier) and storing failsafe values. When a receiver is bound to a transmitter/model memory, the receiver will only respond to that specific transmitter/model memory (see ModelMatch for more information).

Bind Transmitter to Receiver

1. Insert a bind plug in the receiver's BIND port.
2. Power on the receiver and wait until the receiver LED begins flashing.
3. Power on the transmitter.
4. Select the Model Memory you wish to bind to.
5. Select Bind from the List menu.
6. Move the throttle channel to the desired failsafe position.

IMPORTANT: The throttle channel must stay in the failsafe position until binding is complete.

7. Scroll to Bind and press the Rolling Selector. The orange LED flashes on top of the transmitter.
8. When the bind process is complete, the transmitter and receiver LEDs stop flashing and turn solid orange.
9. **NOTICE:** Always remove the bind plug from the receiver when the bind process is complete. Failure to do so will cause the receiver to enter bind mode the next time you power on the receiver.

Remove the bind plug from the receiver and keep it in a convenient place.

Sub-Trim


The Sub-Trim function enables you to correct minor servo arm offsets by electronically adjusting the center point of the servo. Sub-trim is available on all channels.



CAUTION: Only use small sub-trim values so you do not exceed the maximum servo travel. If you find the servo requires a large amount of sub-trim, return the sub-trim to 0 and adjust the servo arm on the servo spline manually.

*Reference chart for options available for each channel:

Channel	Description	
Steering	L (left)	R (right)
Throttle	B (brake)	F (forward)
Aux 1	H (high)	L (low)
Aux 2	H (high)	L (low)

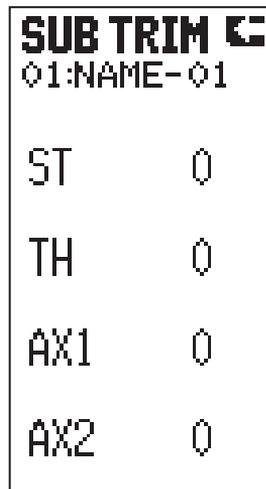

Timer

The transmitter Timer can function as either an Up or Down Timer.

Down Timer (default selection)


The Down Timer allows you to adjust the amount of time in 10 second increments to a maximum of 21 minutes, which will then start a countdown to "0" once activated. The Down Timer value is normally the length of a race or vehicle runtime. The Down Timer can be reset by selecting Timer Reset or by holding the switch that is assigned to that timer for 3 seconds.

Up Timer

The Up Timer functions as a stopwatch and is useful for determining the available runtime in one tank of fuel or a battery pack.

Using the Timer


1. Assign the timer to a switch or button in the Switch menu.
2. To start or stop the timer, hold the assigned button.
3. To reset the timer, press the timer button for more than 3 seconds.

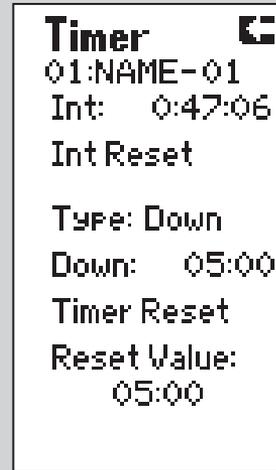

Switch

The Switch menu enables you to assign any of the seven switches to one of the following functions. Switches that have a +/- next to the name can be assigned to different directions. For example, ST trim+ causes right steering trim to trim the steering to the right. ST trim- causes right steering trim to trim steering to the left.

Aux1 and Aux2 can only be assigned to one function at a time. For example, if Aux1 is assigned to 4WS Mix, then it will not be available as an option on the switch screen.

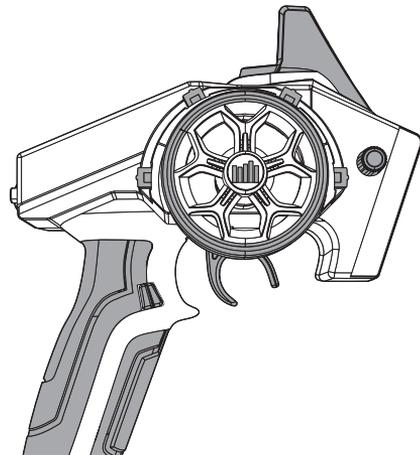

Switch A, B, C, D and E


- Inhibit** – Switch off
- AX1 Lin** – Ch 3 Linear
- AX1 2P** – Ch 3 2-position
- AX1 3P** – Ch 3 3-position
- AX1 MT** – Ch 3 Momentary
- AX2 Lin** – Ch 4 Linear
- AX2 2P** – Ch 4 2-Position
- AX2 3P** – Ch 4 3-Position
- AX2 MT** – Ch 4 Momentary
- ST Trim+** – Steering Trim
- ST Trim-** – Steering Trim
- TH Trim+** – Throttle Trim
- TH Trim-** – Throttle Trim
- AX1 Trim+** – Ch 3 Trim
- AX1 Trim-** – Ch 3 Trim
- AX2 Trim+** – Ch 4 Trim
- AX2 Trim-** – Ch 4 Trim
- Brake+** – Full Brake Trim
- Brake-** – Full Brake Trim
- ST Rate+** – Steering Rate
- ST Rate-** – Steering Rate
- ROSS** – Remote Start
- Timer** – Up or Down Timer
- 4WS Mix** – 4 Wheel Steer
- BAK Mix** – Brake Mix
- Mix A** – Mix A Function
- Mix B** – Mix B Function
- Mix A Rate** – Mix A Value
- Mix B Rate** – Mix B Value

Switch F

- Inhibit
- AX1 2P
- AX1 MT
- AX2 2P
- AX2 MT
- ROSS
- Timer
- 4WS Mix
- Mix A
- Mix B

Dial

- AX1 Lin
- AX2 Lin
- ST Trim+
- ST Trim-
- TH Trim+
- TH Trim-
- AX1 Trim+
- AX1 Trim-
- AX2 Trim+
- AX2 Trim-
- Brake+
- Brake-
- ST Rate+
- St Rate-

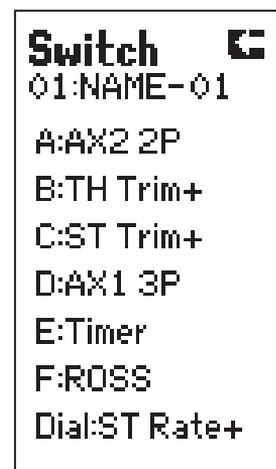

Mixing

The DX4S features a Steer Mix, Brake Mix and two programmable mixes (Mix A and Mix B).

Steer Mix

Use the Steer Mix for vehicles requiring either four-wheel steering (4WS) or dual steering servos (Dual ST).

NOTICE: Before driving a model, always do a check of the transmitter's control of the vehicle with the vehicle's wheels off the ground.

Mix Options

1. Select AX1 or AX2 as the slave channel. Aux1 and Aux2 can only be assigned to one mix at a time. If Aux1 or Aux 2 is assigned to another mix, it will not be available as a slave channel option.
2. Adjust the A Value. The value shown is the percentage of slave channel input compared to master channel input.

For example, 100% means the slave channel movement is equal to the master channel movement. If you adjust the value to 50%, the slave channel moves half as far as the master channel. A negative value means the mix moves in the opposite direction.

4WS (4-Wheel Steering)

Trim: Act or Inh (Default). When Trim is Active, adjustments to the steering trim affect both front and rear steering channels.

Switch: You may assign the 4WS mix to a switch, enabling a B Value in the mix. Assigning the 4WS mix to a switch is valuable when you want to assign rear steering values for different conditions. For example, you may use a smaller rear steer value when the vehicle is moving faster. When the vehicle is moving slowly, use the switch to select the larger rear steer value and increase steering ability. You can also set one of the mix values to 0% if you want to turn the mix off.

Dual ST (Dual Steering)

Trim: Act (Default) or Inh. We recommend activating the Trim, as it adjusts the trim for both the left and right steering servos. If you need to make small adjustments to the individual servos, you can do so in the Sub-Trim menu.

Switch: You may assign the Dual ST mix to a switch, enabling a B Value in the mix. Assigning the Dual ST mix to a switch is valuable when you want to assign dual steer values for different conditions. For example, you may use a smaller value when the vehicle is moving faster. When the vehicle is moving slowly, use the switch to select the larger value and increase steering ability. You can also set one of the mix values to 0% if you want to turn the mix off.

Brake Mix

Use the Brake Mix on large scale vehicles that require separate front and rear brake servos. The mix value creates brake bias between the front and rear brakes. Assigning the Brake Mix to a switch enables you to adjust the mix value from any screen.

1. Select AX1 or AX2 as the Slave channel. If Aux 1 or Aux 2 is assigned to another mix, it will not be available as a Slave channel option.
2. Adjust the Brake Mix Value to establish the brake bias between the front and rear brakes.

Switch: You may assign the the Brake Mix to a switch. Assigning the Brake Mix to a switch enables you to adjust the brake bias from any screen.

Steer Mix 
01:NAME-01

4 WS

Dual ST

Brake Mix 
01:NAME-01

B > AX1

Value
50%

Trim: Inhibit
Switch: E

Programmable Mix

The programmable mixes enable you to assign any channel as a Master or Slave, which is particularly helpful when you need to assign an Aux channel as a Master.

1. Scroll to Inh. Press the rolling selector once and select a Master channel.
2. Select a Slave channel.
3. Adjust the A Value percentage.

You can assign custom names to Mix A and Mix B, making it easier to remember what each mix does. Assign the names the same way you would for the Username or Model Name.

Mix Options

Trim: Inh or Act. When Trim is Active, trim adjustments to the Master channel also apply to the Slave channel.


Switch: You may assign the mix to a switch, enabling a B Value in the mix.

To adjust the B Value:

1. Assign a switch to the mix.
2. Press the switch forward or back. The A Value changes to B Value on the screen.
3. Select the B Value and move the scroll wheel to adjust the value.
4. Press the Rolling Selector to save the selection.

NOTICE: Before driving a model, always do a check of the model's response to mix settings. Raise the vehicle off the ground so it does not move during testing.


NOTICE: A negative value results in the secondary channel moving in a direction opposite the direction of the primary channel.

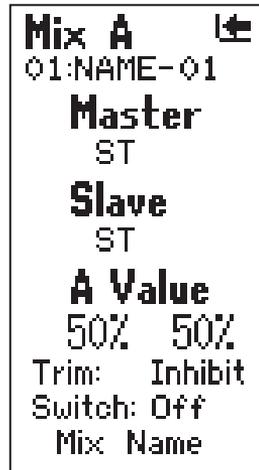

Servo Speed

The Servo Speed function allows you to change the speed of any of the four channels—steering, throttle and Aux. from 100% (default) to 1%. The maximum speed is 100% and is fixed by the specifications of the servo itself.


- In the List screen, use the roller to highlight the Servo Speed function. Press the roller to access the Servo Speed function. The Servo Speed screen appears.
- Use the roller to select the desired channel, then press the roller to access that channel. Rotate the roller to adjust the servo speed.

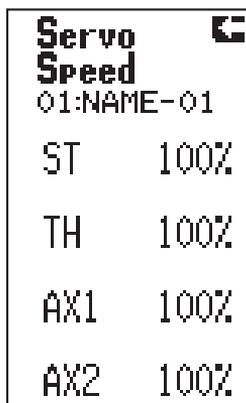

Trim Step

Trim Step affects the amount the servo travels with each click of the trim, but has no effect on the total trim travel. The trim steps range from 1 to 20 (Default is 4). To adjust the trim step:

1. Select Trim Step from the List menu.
2. Scroll to the desired channel and press the scroll wheel to activate the channel.
3. Rotate the scroll wheel to adjust the trim step.
4. Press the scroll wheel to save the selection.

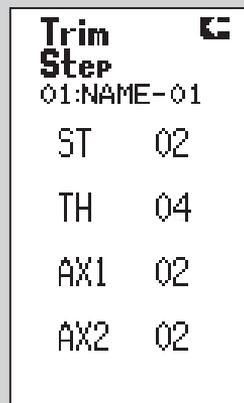

ABS (Automatic Breaking System or Pulse Brakes)

ABS helps prevent brake lock-ups and improves braking performance by pulsing the brakes.

The following ABS braking parameters can be programmed:

State: Inhibit or Active

Point: The throttle position that the pulse braking takes place. (0 to 100, default is 60)

Stroke: The distance the throttle travels during the pulse braking. (0 to 100, default is 50)


Lag: The time delay before the pulsing takes place (0.0 to 2.0 in .01 increments, default is 0.5)

Speed: The pulsing speed or frequency of the pulse braking. (-1 to -30, default is -1)

The graphic bar at the bottom of the screen displays the parameters and shows how ABS will function.

IMPORTANT: State must be Active to turn on the ABS function.

- In the List screen, use the roller to highlight the ABS function.
- Press the roller to access the ABS function. The ABS screen appears.
- Use the roller to select the ABS parameter you wish to adjust.
- Press the roller to highlight that parameter and the associated box will flash. Rotate the roller to adjust that function.

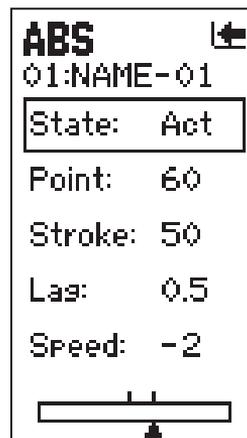

Throttle Punch

The Throttle Punch function is used to offset the throttle to a preprogrammed position and activate when 4% of throttle travel is applied. Throttle punch is typically used in nitro vehicles to reduce the lag due to throttle linkage slack.

To Access the Throttle Punch Function:

- In the List screen, use the Rolling Selector to highlight the Th Punch function.
- Press the Rolling Selector to access the Throttle Punch function. The above screen will appear.
- Use the Rolling Selector and place a box around Th Punch. Press the Rolling Selector and the surrounding box will flash, then rotate the Rolling Selector to adjust the value of the throttle punch position and press the Rolling Selector.

IMPORTANT: Throttle punch will remain active until the value is reset to zero. To return to the main screen, press and hold the Rolling Selector for more than three seconds.




Reset

The Model Reset function restores factory default settings for the active model memory.

- Choosing **Yes** affirms erasing saved settings for the active model memory and return of factory defaults. A box shows around selected text.
- Choosing **No** returns to the List Screen.


IMPORTANT: Model information saved in a memory is erased when that model memory is copied over or reset to factory default settings.

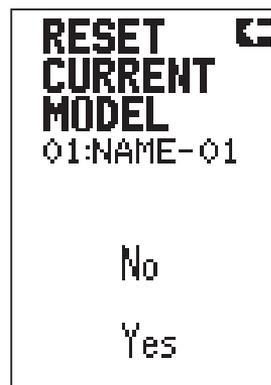

Monitor

The servo monitor displays the servo output positions graphically and digitally. This monitor can be useful in troubleshooting setups, displaying mixing functions and how they interrelate.

- In the List screen, use the roller to highlight the Monitor function.
- Press the roller to access the Monitor function. The real-time servo output positions will display.

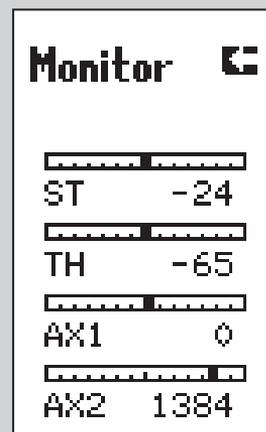

System

The System function lets you adjust transmitter functions.

List

Two modes are available: Expert and Standard. The DX4s defaults to Expert where all of the programming menus are available. Standard mode eliminates the expert screens and functions from the list; making it ideal for basic models.

Display

Contrast

The contrast function provides adjustment to the brightness ratio of the lightest to the darkest part of the screen. You can set the contrast to a value from 0 to 30 (0 is lightest and 30 is darkest).

Light

You can set the backlight to one of three modes: Timer, On or Off.

- **Timer:** The backlight will turn off after a preset delay.
- **On:** The backlight never turns off when the transmitter is on.
- **Off:** The backlight is always off.

1. Use the Rolling Selector to access Light.
2. Press the roller and the surrounding box will flash.
3. Rotate the roller to the desired backlight mode and press the roller to select it.

Lang (Language)

The DX4S can display the screen text in one of five languages: English (default), German, French, Italian and Spanish. Use the roller and select the Language function.

Alert

You can set an alarm to sound when the battery voltage gets to the limit set with the Alert. Battery voltage is displayed on the Main Screen.

Menu: None, Tone, Vibe, Both

Sets the alert type for scrolling through the menu items and selecting items.

Tone: You can adjust the buzzer to either *Low* or *High*

IMPORTANT: Buzzer adjustment does not change the sound level for Inactivity or Low Battery warnings.

Tx Battery Voltage: Set an alarm to sound when the battery voltage gets to the limit set. The range is 4.0 to 7.0V.



CAUTION: Do not operate a model when the battery voltage is below 4.3V for AA batteries and 6.4V for LiPo battery.

Tx Battery Alert Type: None, Tone

Timer: None, Tone, Vibe, Both

Sets the alert type for the down timer.

All of the alert settings above affect all models.

Telemetry: Rx Battery Alert Type: None, Tone, Vibe, Both. Sets the alert type for the telemetry receiver battery voltage. Temp Alert Type: None, Tone, Vibe, Both. Sets the alert type for the telemetry temperature.

The telemetry alert settings are model specific.

F Rate (Frame Rate)

Frame rate is the response rate of the receiver. The lower the number, the faster the response. Frame rate only affects the current model.

IMPORTANT: You should always use the fastest response rate the servos can handle. This gives the lowest latency and fastest response. If the frame rate is incompatible with the servo, the servo will move erratically or in some cases not at all. If this occurs, change the frame rate to the next highest value.

The available frame rates will depend on the type of receiver the DX4S is bound to:

DSMR: 11 or 22ms

DSM[®]: 11 or 16.5ms

DSM2[®]: 11 or 16.5ms

Marine: 22ms

1. Use the roller to highlight the F Rate function.
2. Press the roller.
3. Rotate the roller to select the frame rate and press the roller to save the selection.

RF Mode

You can set this mode on either Std or FR. Std is the standard RF mode. FR is the France RF mode and should only be selected when the transmitter is used in France outdoors. RF mode affects all models.

RS Port

This sets the port – (*Bind* or *Aux* (Auxiliary) – on the receiver for ROSS (Remote Onboard Starting System) connection. RS Port is model specific.

Username

You can program a user name with up to 8 characters. This name is displayed on the Main Screen. In the System screen, highlight the User Name and press the roller to access the function. Use the roller to select the position, then press the roller to access a character. Username affects all models.

About

This screen displays the transmitter serial number (which is required when downloading firmware updates) and the release level of the transmitter's software. Refer to Memory Card instructions for updating transmitter firmware.

SYSTEM

List:Expert

Display

Alert

F Rate:11ms

RF Mode:Std

RS Port:Inh

Username

About...

Telemetry

The Telemetry setting function is used to select a default screen for display, including Main, Telemetry or Roll. It is also used to access the Telemetry SPEED, BATTERY and TEMPERATURE sensor settings.

To Access the Telemetry Setting function:

In the List screen, use the Rolling Selector to highlight Telemetry, then press the Rolling Selector. The TELEMETRY screen will appear. To select the default screen, rotate the Rolling Selector to place the box around Screen TELE, then press the Rolling Selector. The surrounding box will flash.

- TELE displays the Telemetry screen.
- MAIN (default) always hides the Telemetry Screen.
- ROLL allows the roller to select between the Telemetry and Main screens.

Rotate the Rolling Selector and choose your desired default screen (TELE displays the Telemetry screen. ROLL will allow the Rolling Selector to select between the Telemetry and Main Screens). Press the Rolling Selector to select.

1. Use the Rolling Selector to select the sensor parameters to adjust.
2. Press the Rolling Selector and a surrounding box will flash.
3. Use the Rolling Selector to adjust the value, then press the Rolling Selector to select.
4. To return to the main screen, press and hold the Rolling Selector for more than three seconds.

Rx Battery: The Battery Alert setting allows you to preset a low voltage warning. When the battery voltage in your receiver drops below the preset voltage, the transmitter will alert you.

Temp Unit: Display Temperature Unit in degree Fahrenheit or Celsius.

Upper: The Upper value is the maximum range of the temperature scale.

Alert: The alert warning activates when the temperature sensor recognizes the set value, for example, when a nitro engine reaches 280 degrees Fahrenheit.

Lower: The Lower value is the minimum range of the temperature scale

The Telemetry screen displays the maximum achieved temperature from the point that the receiver was turned on. To reset the maximum recorded temperature, it is necessary to power OFF the receiver, then power it ON.

Sp. Unit: Select RPM, MPH or KM/H display units.

Zoom: The Zoom setting sets the maximum range or boundary of the Speed unit.

Roll Out: Roll out appears when you assign the MPH or KM/H Speed Unit. A Roll Out value (conversion factor) is required to display the value in MPH or KM/H. When the Roll Out value is 1.0' (default), the value displayed on the main screen and stored in maximum speed, is the rpm of the spur gear or flywheel triggering the RPM Sensor. To calculate the Roll Out value, use one of the following methods:

Method A (Nitro or Gas Vehicles):


1. Put a small reference mark on the flywheel. A black or silver permanent marker works well.
2. Put the car next to a ruler and align the front of the car with the 0 mark. Use your hand to roll the car forward while counting each revolution of the reference mark. At exactly 10 revolutions, stop the car.
3. Measure the exact total distance that the car traveled and divide this distance by 10. For example, 12.0" divided by 10 = 1.20".
4. Adjust the Roll Out value on the transmitter until 1.20 appears on the screen. Now all rpm-related functions will appear in mph or km/h.

Method B (Electric Vehicles): For this method you either need to know the internal gear ratio (normally provided in the vehicle's manual) or be able to calculate the ratio via the number of teeth on the gears. It is also necessary to calculate the circumference of the tire. Once the internal ratio is known, and the circumference in inches has been determined, simply divide the circumference by the internal ratio and use this value as the conversion.

To calculate the circumference—multiply 3.14 by the tire diameter (in inches).

To calculate the internal gear ratio—divide the larger transmission gear by the smaller gear. With multiple gear transmissions it is necessary to multiply each of the larger to smaller gear reduction ratios to arrive at the final ratio.

The Telemetry screen displays the maximum recorded speed from the point that the receiver was turned on. To reset the maximum recorded speed, it is necessary to power OFF the receiver, then power it ON.

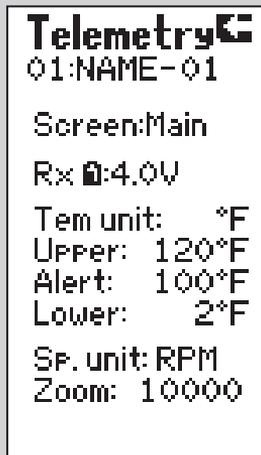

TROUBLESHOOTING GUIDE

Problem	Possible Cause	Solution
The system will not connect	Transmitter and receiver too near each other	Move transmitter 8 to 12 feet (2.4 to 3.6m) from receiver
	Transmitter and receiver too near large metal objects (vehicles, etc.)	Move away from large metal objects (vehicles, etc.)
	Selected model is not bound in transmitter	Make sure correct model memory is selected and that transmitter is bound to the model
	Transmitter accidentally put in bind mode so receiver is no longer bound	Rebind transmitter and receiver
The receiver goes into failsafe mode a short distance away from the transmitter	Check the receiver antenna to be sure it is not cut or damaged	Replace or contact Horizon Product Support
		Make sure receiver antenna is in an antenna tube and is above vehicle
Receiver quits responding during operation	Low battery voltage	Completely recharge battery
	Loose or damaged wires or connectors between battery and receiver	Do a check of the wires and connection between battery and receiver. Repair or replace wires and/or connectors
Receiver loses its bind	Transmitter accidentally put in bind mode, ending bind to receiver	Bind transmitter to receiver
Receiver taking longer than usual to link with transmitter	Transmitter and receiver are operating on Marine model	Marine receivers can take longer to link with transmitter

FCC INFORMATION

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.


CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This product contains a radio transmitter with wireless technology which has been tested and found to be compliant with the applicable regulations governing a radio transmitter in the 2.400GHz to 2.4835GHz frequency range.

Antenna Separation Distance

When operating your Spektrum transmitter, please be sure to maintain a separation distance of at least 5 cm between your body (excluding fingers, hands, wrists, ankles and feet) and the antenna to meet RF exposure safety requirements as determined by FCC regulations.

The illustrations below show the approximate 5 cm RF exposure area and typical hand placement when operating your Spektrum transmitter.

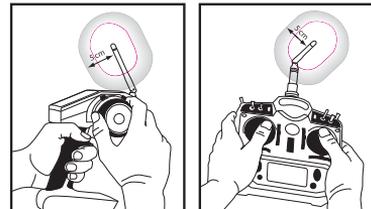

Information de IC

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

1-YEAR LIMITED WARRANTY

What this Warranty Covers

Horizon Hobby, Inc., (Horizon) warrants to the original purchaser that the product purchased (the "Product") will be free from defects in materials and workmanship for a period of 1 years from the date of purchase.

What is Not Covered

This warranty is not transferable and does not cover (i) cosmetic damage, (ii) damage due to acts of God, accident, misuse, abuse, negligence, commercial use, or due to improper use, installation, operation or maintenance, (iii) modification of or to any part of the Product, (iv) attempted service by anyone other than a Horizon Hobby authorized service center, (v) Product not purchased from an authorized Horizon dealer, or (vi) Product not compliant with applicable technical regulations.

OTHER THAN THE EXPRESS WARRANTY ABOVE, HORIZON MAKES NO OTHER WARRANTY OR REPRESENTATION, AND HEREBY DISCLAIMS ANY AND ALL IMPLIED WARRANTIES, INCLUDING, WITHOUT LIMITATION, THE IMPLIED WARRANTIES OF NON-INFRINGEMENT, MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. THE PURCHASER ACKNOWLEDGES THAT THEY ALONE HAVE DETERMINED THAT THE PRODUCT WILL SUITABLY MEET THE REQUIREMENTS OF THE PURCHASER'S INTENDED USE.

Purchaser's Remedy

Horizon's sole obligation and purchaser's sole and exclusive remedy shall be that Horizon will, at its option, either (i) service, or (ii) replace, any Product determined by Horizon to be defective. Horizon reserves the right to inspect any and all Product(s) involved in a warranty claim. Service or replacement decisions are at the sole discretion of Horizon. Proof of purchase is required for all warranty claims. SERVICE OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE PURCHASER'S SOLE AND EXCLUSIVE REMEDY.

Limitation of Liability

HORIZON SHALL NOT BE LIABLE FOR SPECIAL, INDIRECT, INCIDENTAL OR CONSEQUENTIAL DAMAGES, LOSS OF PROFITS OR PRODUCTION OR COMMERCIAL LOSS IN ANY WAY, REGARDLESS OF WHETHER SUCH CLAIM IS BASED IN CONTRACT, WARRANTY, TORT, NEGLIGENCE, STRICT LIABILITY OR ANY OTHER THEORY OF LIABILITY, EVEN IF HORIZON HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. Further, in no event shall the liability of Horizon exceed the individual price of the Product on which liability is asserted. As Horizon has no control over use, setup, final assembly, modification or misuse, no liability shall be assumed nor accepted for any resulting damage or injury. By the act of use, setup or assembly, the user accepts all resulting liability. If you as the purchaser or user are not prepared to accept the liability associated with the use of the Product, purchaser is advised to return the Product immediately in new and unused condition to the place of purchase.

Law

These terms are governed by Illinois law (without regard to conflict of law principals). This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. Horizon reserves the right to change or modify this warranty at any time without notice.

WARRANTY SERVICES

Questions, Assistance, and Services

Your local hobby store and/or place of purchase cannot provide warranty support or service. Once assembly, setup or use of the Product has been started, you must contact your local distributor or Horizon directly. This will enable Horizon to better answer your questions and service you in the event that you may need any assistance. For questions or assistance, please visit our website at www.horizonhobby.com, submit a Product Support Inquiry, or call 877.504.0233 toll free to speak to a Product Support representative.

Inspection or Services

If this Product needs to be inspected or serviced and is compliant in the country you live and use the Product in, please use the Horizon Online Service Request submission process found on our website or call Horizon to obtain a Return Merchandise Authorization (RMA) number. Pack the Product securely using a shipping carton. Please note that original boxes may be included, but are not designed to withstand the rigors of shipping without additional protection. Ship via a carrier that provides tracking and insurance for lost or damaged parcels, as Horizon is not responsible for merchandise until it arrives and is accepted at our facility. An Online Service Request is available at Horizon Hobby Service Center. If you do not have internet access, please contact Horizon Product Support to obtain a RMA number along with instructions for submitting your product for service. When calling Horizon, you will be asked to provide your complete name, street address, email address and phone number where you can be reached during business hours. When sending product into Horizon, please include your RMA number, a list of the included items, and a brief summary of the problem. A copy of your original sales receipt must be included for warranty consideration. Be sure your name, address, and RMA number are clearly written on the outside of the shipping carton.

NOTICE: Do not ship LiPo batteries to Horizon. If you have any issue with a LiPo battery, please contact the appropriate Horizon Product Support office.

Warranty Requirements

For Warranty consideration, you must include your original sales receipt verifying the proof-of-purchase date.

Provided warranty conditions have been met, your Product will be serviced or replaced free of charge. Service or replacement decisions are at the sole discretion of Horizon.

Non-Warranty Service

Should your service not be covered by warranty, service will be completed and payment will be required without notification or estimate of the expense unless the expense exceeds 50% of the retail purchase cost. By submitting the item for service you are agreeing to payment of the service without notification. Service estimates are available upon request. You must include this request with your item submitted for service. Non-warranty service estimates will be billed a minimum of ½ hour of labor. In addition you will be billed for return freight. Horizon accepts money orders and cashier's checks, as well as Visa, MasterCard, American Express, and Discover cards. By submitting any item to Horizon for service, you are agreeing to Horizon's Terms and Conditions found on our website Horizon Hobby Service Center.

NOTICE: Horizon service is limited to Product compliant in the country of use and ownership. If non-compliant product is received by Horizon for service, it will be returned unserviced at the sole expense of the purchaser.

WARRANTY AND SERVICE CONTACT INFORMATION

Country of Purchase	Horizon Hobby	Address	Phone Number/Email Address
United States of America	Horizon Service Center (Electronics and engines)	4105 Fieldstone Rd Champaign, Illinois, 61822 USA	877-504-0233 Online Repair Request: visit www.horizonhobby.com/service
	Horizon Product Support (All other products)	4105 Fieldstone Rd Champaign, Illinois, 61822 USA	877-504-0233 productsupport@horizonhobby.com
United Kingdom	Horizon Hobby Limited	Units 1-4 Ployters Rd Staple Tye, Harlow, Essex CM18 7NS, United Kingdom	+44 (0) 1279 641 097 sales@horizonhobby.co.uk
Germany	Horizon Technischer Service	Christian-Junge-Straße 1 25337 Elmshorn, Germany	+49 (0) 4121 2655 100 service@horizonhobby.de
France	Horizon Hobby SAS	Horizon Hobby SAS 11 Rue Georges Charpak 77127 Lieuxaint, France	+33 (0) 1 60 18 34 90 infofrance@horizonhobby.com
China	Horizon Hobby China	Room 506, No. 97 Changshou Rd. Shanghai, China 200060	+86 (021) 5180 9868 info@horizonhobby.com.cn

PARTS CONTACT INFORMATION

Country of Purchase	Horizon Hobby	Address	Phone Number / Email Address
United States	Sales	4105 Fieldstone Rd Champaign, Illinois, 61822 USA	800-338-4639 sales@horizonhobby.com
United Kingdom	Horizon Hobby Limited	Units 1-4 Ployters Rd Staple Tye Harlow, Essex CM18 7NS, United Kingdom	+44 (0) 1279 641 097 sales@horizonhobby.co.uk
Germany	Horizon Hobby GmbH	Christian-Junge-Straße 1 25337 Elmshorn Germany	+49 (0) 4121 2655 100 service@horizonhobby.de
France	Horizon Hobby SAS	Horizon Hobby SAS 11 Rue Georges Charpak 77127 Lieuxaint, France	+33 (0) 1 60 18 34 90 infofrance@horizonhobby.com
China	Horizon Hobby – China	Room 506, No. 97 Changshou Rd. Shanghai, China 200060	+86 (021) 5180 9868 info@horizonhobby.com.cn

COMPLIANCE INFORMATION FOR THE EUROPEAN UNION

AT	BE	BG	CZ	CY	DE	DK
ES	FI	FR	GR	HU	IE	IT
LT	LU	LV	MT	NL	PL	PT
RO	SE	SI	SK	UK		

Declaration of Conformity

CE 0678

(in accordance with ISO/IEC 17050-1)

No. HH2012111801

Product(s): DX4S 4-Channel DSMR Sport System

Item Number(s): SPM4000

Equipment class: 2

The object of declaration described above is in conformity with the requirements of the specifications listed below, following the provisions of the European R&TTE directive 1999/5/EC:

EN 300-328 V1.7.1: 2006

EN 301 489-1 V1.7.1: 2006

EN 301 489-17 V1.3.2: 2008


EN60950-1:2006+A11:2009+A1:2010+A12: 2011

Signed for and on behalf of:

Horizon Hobby, Inc.

Champaign, IL USA

November 18, 2012

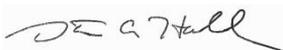

Steven A. Hall
Executive Vice President and Chief Operating Officer
International Operations and Risk Management
Horizon Hobby, Inc.



Instructions for disposal of WEEE by users in the European Union

This product must not be disposed of with other waste. Instead, it is the user's responsibility to dispose of their waste equipment by handing it over to a designated collections point for the recycling of waste electrical and electronic equipment. The separate collection and recycling of your waste equipment at the time of disposal will help to conserve natural resources and ensure that it is recycled in a manner that protects human health and the environment. For more information about where you can drop off your waste equipment for recycling, please contact your local city office, your household waste disposal service or where you purchased the product.

©2012 Horizon Hobby, Inc.

DSM, DSM2, DSMR, ModelMatch and the Horizon Hobby logo are trademarks
or registered trademarks of Horizon Hobby, Inc.

The Spektrum trademark is used with permission of Bachmann Industries, Inc.

SD Logo is a trademark of SD-3C, LLC.

Created 10/12 36345 SPM4000