



67167 23 / AIRTRONICS / JR / KO / SANWA
67168 24 / HITEC
67169 25 / HPI / FUTABA
HB ALUMINUM STEERING SERVO HORN



67190
LIGHT WEIGHT SPUR GEAR 48 TOOTH



101188 - Spur Gear 50 Tooth
101034 - SPUR GEAR 46T
101035 - SPUR GEAR 44T



67391
Front Suspension Block (FF)
- 7075



68184
SUSPENSION SHAFT (OUTER/THREADED)



68188
SWAY BAR SET (2.0,2.2,2.4,2.6mm/Short)



68191
SWAY BAR SET (2.2,2.4,2.6,2.8,3.0mm/
Long)



107446
SHOCK GUARD SET



109806 - SHOCK SPRING
(GREEN/68mm/60.8gF/2pcs)
109809 - SHOCK SPRING
(YELLOW/68mm/73.8gF/2pcs)
109810 - SHOCK SPRING
(GOLD/68mm/79.6gF/2pcs)
109811 - SHOCK SPRING
(RED/68mm/86.1gF/2pcs)



160418- VORZA BODYSHELL CLEAR
160414 - TRIMMED & PAINTED VORZA 3.5
BUGGY ORANGE BODY (NO DECALS)
160415 - TRIMMED & PAINTED VORZA
BUGGY RED BODY (NO DECALS)
160416 - TRIMMED & PAINTED VORZA S
BUGGY GREEN BODY (NO DECALS)



160328
ALUMINUM REAR HUB CARRIER SET



160329
ALUMINUM FRONT SPINDLE CARRIER SET (10 DEGREES)




160330
ALUMINUM FRONT SPINDLE SET




67398
Steering Plate - 7075



67379
Pivot Plate (RR/3deg) - 7075

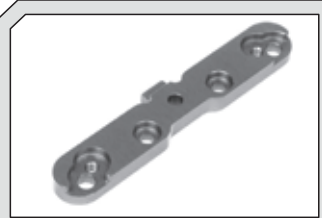

67380
Pivot Plate (RF/3deg) - 7075

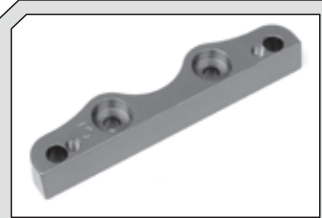

67384
Front Suspension Block (FR)
- 7075



67409
Rear Shock Tower 7075

160189
Front Shock Tower 7075



109832
SHOCK BOOT (29mm STROKE/2pcs)



67433 - Aluminum Big Bore
Shock Cap
67528 - Big Bore Shock Spring
Adjust Nut
67528 - Big Bore Shock Spring
Adjust Nut



109829
ALUMINUM BIG BORE SHOCK SET
(106mm/2pcs)



109831
HD SHOCK SHAFT (29mm
STROKE/2pcs)



103662
MAIN CHASSIS FLUX BUGGY 7075
4.0mm



103681
FRONT SHOCK PROTECTORS

