

Post 11.5 X2

M3 X14 Cap screw X1

3X6X0.5 Spacer X4

M3 X30 Screw X2

M3 X20 Screw X3

RMX to RFX Conversion kit
210660

RFX Connector X1

Rear spacer X1


Diffuser X1

STEP 1 Attaching RFX drive system

RMX



Rear spoiler

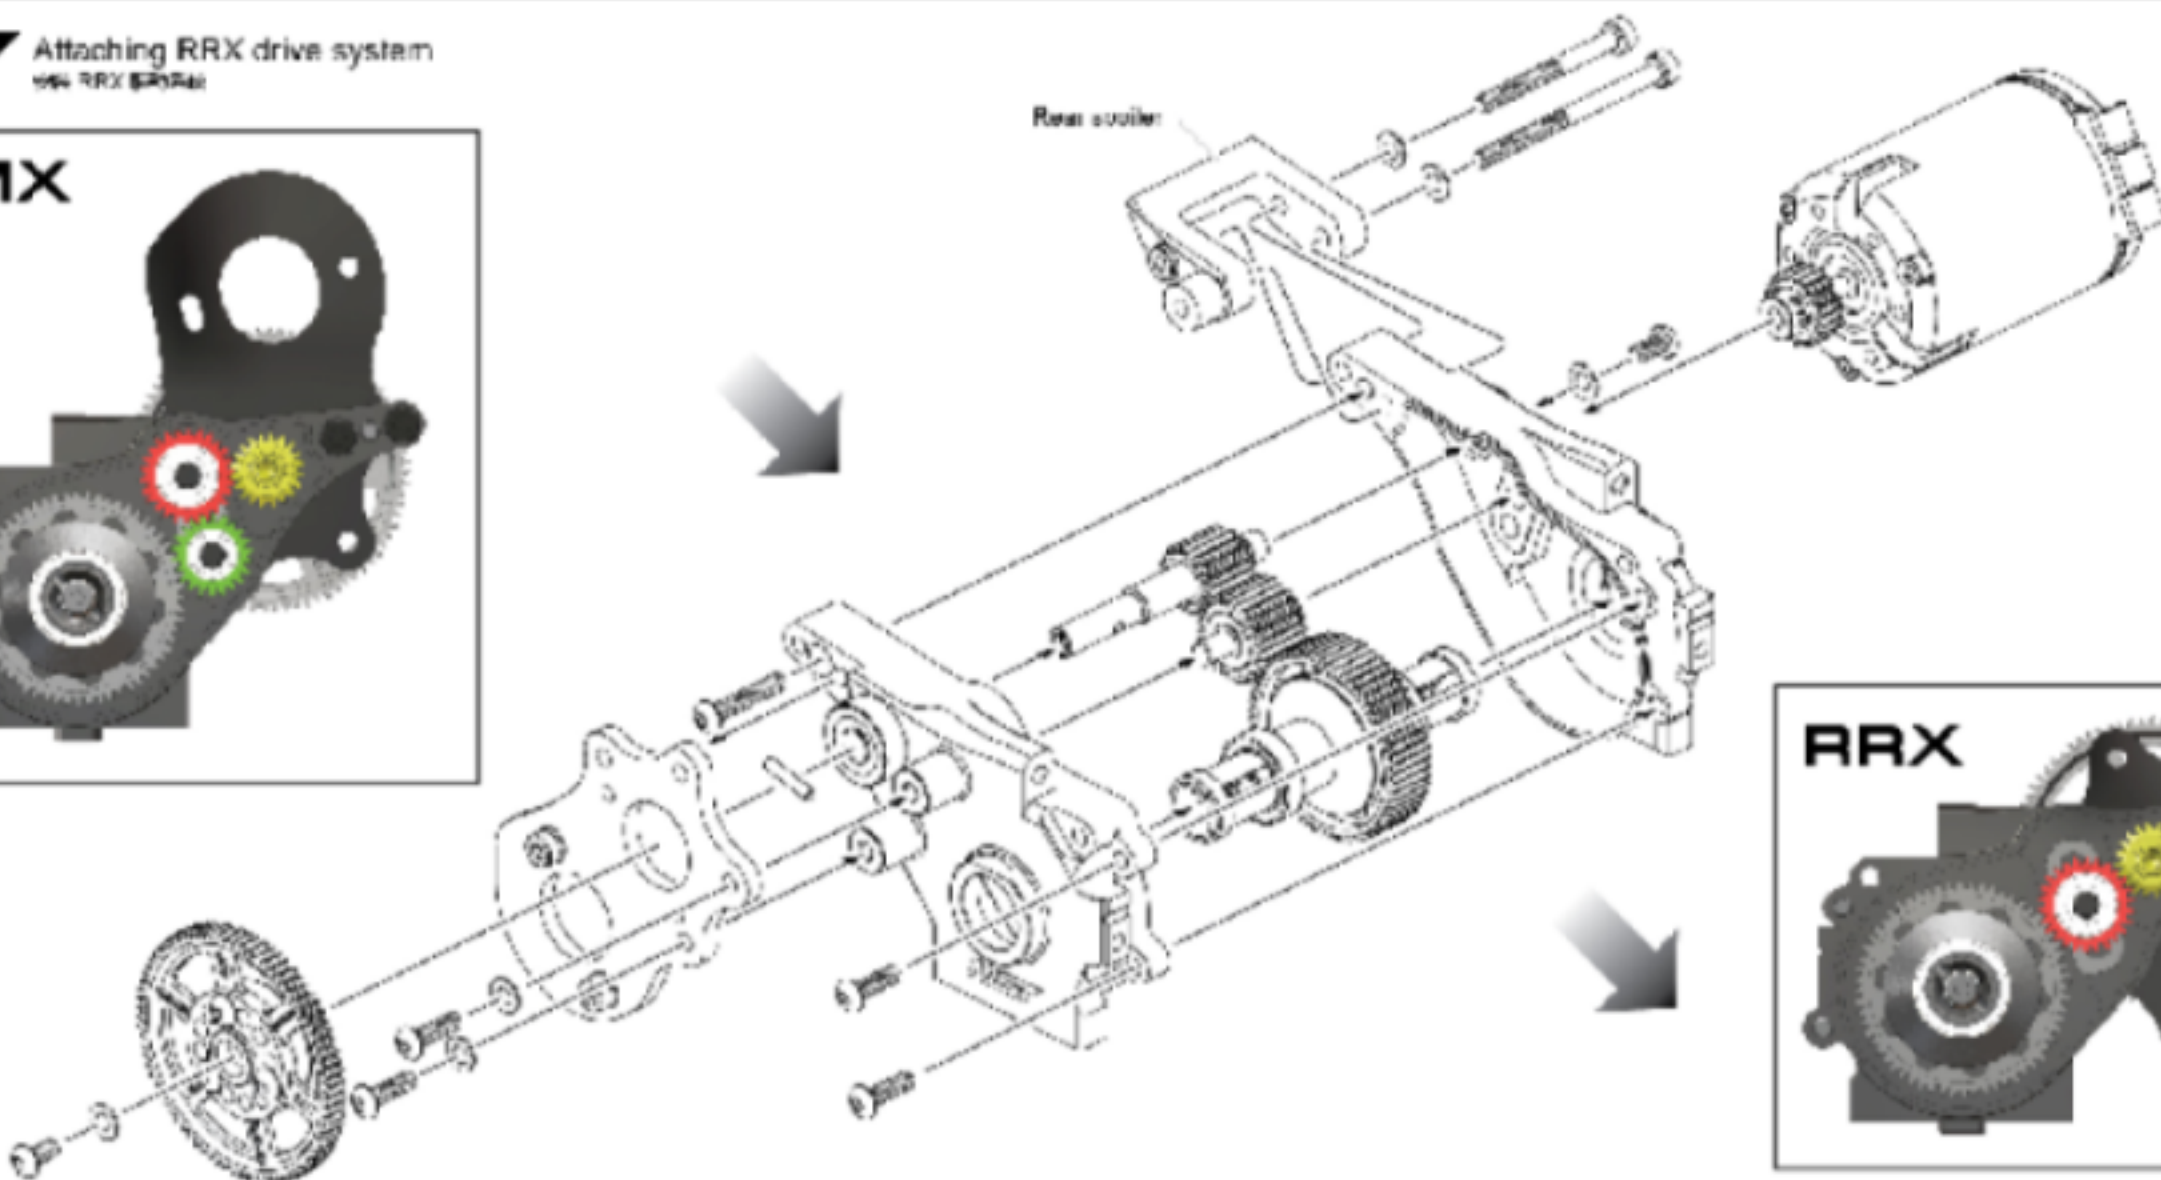

RFX



STEP 2 Attaching damper stay set

M3 X20

Post 11.5

RFX Connector

3X6X0.5 Spacer

M3 X30

Diffuser

STEP 3 Attaching drive system

M3 X14

M3 X30

3X6X0.5 Spacer

Exchange

3X6X0.5 Spacer

M3 X20

