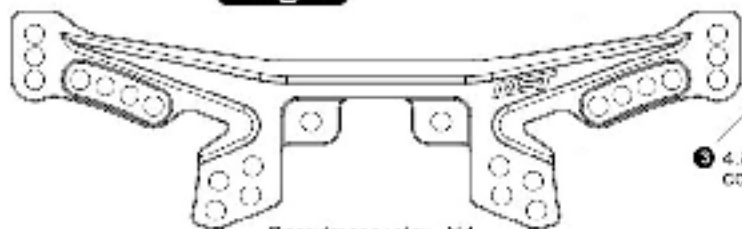
Front damper stay X1  
前避震器

Bag 2

Rear damper stay X1  
後避震器

Bag 5

## STEP 1 Attaching front damper stay


前避震器安裝

1 Front damper stay

2 M3×8

3 4.8 Ball connector

4 M3×10

4.8 Ball connector X4  
前避震器球頭4.8 Ball connector L X2  
前避震器球頭LM3×8 screw X2  
前避震器螺絲M3×10 screw X8  
前避震器螺絲M3×28 Alum. turnbuckle X2  
前避震器調整桿4.8 Adjuster N X4  
前避震器調整器

## STEP 2 Attaching rear damper stay

後避震器安裝

1 Rear damper stay

2 4.8 Ball connector L

3 M3×10

4 M3×10


5 M3×10

6 4.8 Ball connector

7 Rear upper turnbuckle

## Rear upper turnbuckle assembly

後上避震器安裝


Please use a caliper for  
precise measurements.  
請使用卡尺進行精確測量。8 M3×28 Alum.  
turnbuckle

9 4.8 Adjuster M

16.2 mm



R



L