


## :: Bag 9 - Step 1 - Pg 15

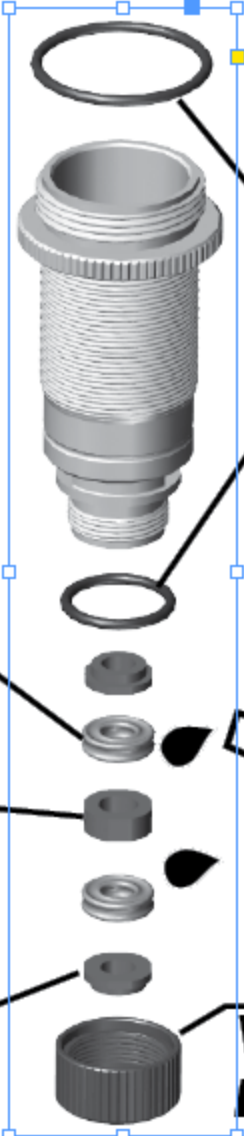


**91493**  $\times 2$   
**X-Ring**


**91495**  
**V2 Shock  
Spacer**

**91495**  $\times 2$   
**V2 Shock  
Hat Bushing**

**31327**  
**VCS3 Shock  
Bottom Cap**

**#1105  
green slime**

  
Lightly rub shock oil  
on the o-ring before  
installation!

  
Racers Tip:  
Coating the o-rings with  
green slime (#1105) helps  
seal & reduce o-ring  
swell! Green slime not  
included in kit!