


#81012 - Mud Flap Kit for *RPM* Rear Bumpers for the Traxxas Slash 2wd & Slash 4x4

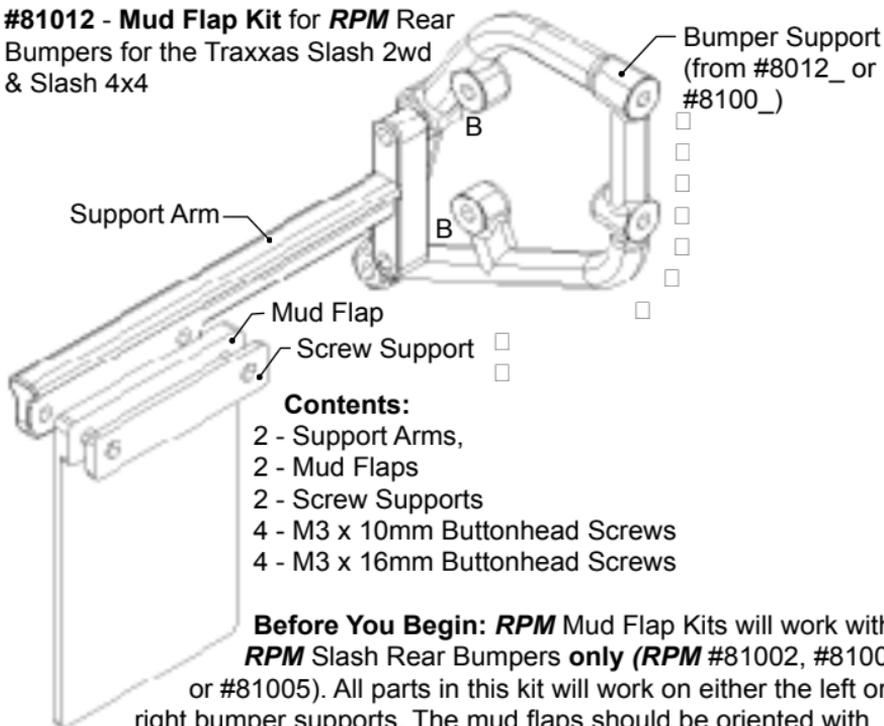

Contents:

- 2 - Support Arms,
- 2 - Mud Flaps
- 2 - Screw Supports
- 4 - M3 x 10mm Buttonhead Screws
- 4 - M3 x 16mm Buttonhead Screws

Before You Begin: *RPM* Mud Flap Kits will work with *RPM* Slash Rear Bumpers **only** (*RPM* #81002, #81003 or #81005). All parts in this kit will work on either the left or right bumper supports. The mud flaps should be oriented with the *RPM* Logo facing the rear of the vehicle.

Installation: Remove all parts from their respective parts trees with a sharp hobby knife or plastic cutters. Slip two of the M3 x 10mm screws through one of the two Screw Supports, through one of the Mud Flaps (preferably with the *RPM* logo facing the rear of the vehicle) and thread them into one of the two Support Arms. Do this for both sides but remember, **you need a left and a right** so install the second Mud Flap and Screw Support **from the opposite side** of the Support Arm. Next, take two M3 x 16mm screws and install the Support Arm with the Mud Flap installed on to the Bumper Support in the screw hole locations marked "B" in the illustration. Repeat for the opposite side.