WWW.CORALLY.COM

TEAM CORALLY

WORLD CHAMPIONS

PREMIUM QUALITY Since 1986 GUARANTEED



SYNCRO4RS

C-00296 - Syncro-4 RS
Manual version - **2026.11.05**

- **Download the latest version of the manual from www.corally.com**
- Téléchargez la dernière version du manuel à partir de www.corally.com
- Laden Sie die neueste Version des Handbuchs von www.corally.com herunter.
- Download de nieuwste versie van de handleiding op www.corally.com

https://corally.com/en/customer-service/downloads-manuals

LANGUAGES

INTRODUCTION

Thank you for purchasing a Team Corally car. This manual describes the instructions for using the model and the electronic components. You will also find some tips on how to maintain your RC model so that you can enjoy it for years to come. You have purchased one of the most efficient models available on the market that was designed by a team of professionals. You will also benefit from the best after-sales support. All Team Corally models guarantee a high quality of manufacture and performance. Always take the time to read the instructions carefully in order to follow all the procedures to use your RC model safely for you and for other people and property in the area. This will allow you to take full advantage of all the performance of your RC model.

Please also visit the website *www. corally.com/Downloads/* to check if you have the latest version of this instruction manual. (Version: see the bottom of the front cover of this manual)
If you have any questions about the model and its components, you can send a message to info@corally.com
We also recommend that you get help from an experienced model maker or your dealer.
You will find all the references of the spare parts on the website www.corally.com

TERMS OF USE
The user is responsible for the use of the model. The user assumes all risks associated with the use of the model. This model is not intended for use by children under 14 years of age without the supervision of a responsible adult who is familiar with the dangers of using a RC model. Team Corally / JSP Group Intl BV, its manufacturers, distributors and resellers cannot control the use and load of the model and therefore cannot be held responsible for any damage to property and damage caused to persons resulting from the use of this product. You must accept these conditions and consider yourself fully responsible for the use of this product. If not, Do NOT use this product.

Due to the continuous development of our products, the exact specifications of the kit may vary. If you have a problem with your new kit, please contact the store where you purchased it, indicating the part number(s).
Team Corally / JSP Group Intl BV reserves the right to change any specification without notice. All rights reserved.

READ FIRST

This manual is designed for use with your vehicle and contains the instructions you will need to assemble and maintain your vehicle.

- We know you're looking forward to driving your car, but it's very important that you take the time to read this manual carefully, even if you're an experienced R/C driver.
- Read and follow all the instructions in this manual carefully. Failure to follow the instructions will be considered abuse and/or negligence and may invalidate the warranty.
- Your vehicle is designed to operate on uneven terrain. However, dust, sand, water and carpet fibres can enter moving parts and mechanical components, potentially causing damage if not removed promptly.
  Damage caused by external elements such as sand, dirt or water is not covered by the warranty.
  Users are responsible for the proper maintenance and safe operation of this vehicle.
- This product is not a toy. It is not suitable for users under 14 years of age, unless they are supervised by adults.
- Only upgrade your car with Corally spare parts/options designed for your model.
- Always disconnect the vehicle battery from the controller when not in use.
- Drive your car in a spacious area. Never drive your car in the street or in traffic. Public places are subject to specific legislation by country, city, municipality; please comply with the legislation for the use of RC models in your area.

SAFETY PRECAUTIONS

For your safety, always wear gloves and goggles when assembling and maintaining your model.

Always take all necessary precautions when handling products (silicone oil, grease, Threadlock, cyanoacrylate glue, fuel) for the operation of the model. (Refer to the manufacturer's instructions)

For your safety, to keep the warranty and obtain the best performance, always use genuine Corally parts.

Contains: LEAD (CAS 7439-92-1) and ANTIMONY (CAS 7440-36-0)

WARNING: This product contains a chemical known to the State of California to cause cancer and birth defects or other reproductive harm.

CAUTION: CANCER HAZARD
Contains lead, a listed carcinogen. Lead is harmful if ingested. Wash thoroughly after using.
Do NOT use product while eating, drinking or smoking.

USE PRECAUTIONS

Failure to operate your model in a safe and responsible manner may result in injury to yourself, others or damage to property around you.

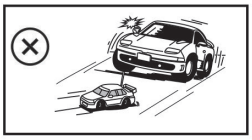

- Do NOT use your model on public roads or in areas where you may encounter pedestrians or riders.
- Do not operate in a congested area or in crowds.
- Do not operate in areas where loud noises can disturb others, such as hospitals and residential areas.
- Do not operate your model with an obstructed line of sight, at night or near water.

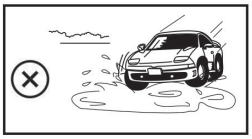

- Your model is radio-controlled and is therefore subject to possible radio interference. Radio interference can cause loss of control of your model. Be careful.
- Take care not to injure yourself while using tools to adjust or upgrade your model.
- Since the model contains small parts, keep it out of reach of children while assembling and/or disassembling your model.



- If your model becomes stuck against an object, release the throttle and retrieve it by hand.
- Do not continue to apply the throttle when your model is stuck. This may damage the motor and/or ESC/ Receiver unit.



- Turn your model OFF and do not use it if it runs erratically. Please Do NOT use your model again until the problem has been solved.
- Keep the wheels of the model off the ground when checking the operation of the radio equipment.
- When learning to operate your model, go to an area that has no obstacles that can damage your model.
- Before and after each use, check all the screws on the model.
- To maintain the best performance, check that all moving parts move freely.

Take all necessary precautions before, during and after using your model. You are responsible for the safe assembly, maintenance and use of your model.
In case of any questions, contact your local reseller or contact Team Corally support for assistance.

LIPO BATTERY SAFETY PRECAUTIONS

- Follow and respect the manufacturer's instructions for use
- It is important to check that your ESC is set to LIPO if you are using a LIPO battery. Failure to comply with this instruction may result in increased battery discharge and may cause fire and damage to persons and property.
- When charging or storing LiPo batteries always use Flame-retardant LiPo safety bag.
- Always respect the maximum charge rate and voltage specified by the battery manufacturer.
- Charge the LIPO battery outdoors or in a ventilated area away from flammable objects and surfaces.
- NEVER leave your LiPo battery unattended while charging.
- If the battery swells during charging, stop charging immediately and disconnect the battery from the charger. Place the battery outdoors, on a non-flammable surface, for a few hours and observe. Then recycle the battery according to the instructions of your country/region. Never dispose of a LIPO battery with household waste.
- Before recycling a defective battery, neutralise it.. Take a plastic container, fill it with water and add a lot of salt until the water turns cloudy. Place the LIPO battery in the water and leave for 24 hours. Check with a voltmeter that the voltage is 0.0V. Then recycle the battery according to local regulations.
- Never charge a damaged or swollen battery.
- Never discharge the battery cells below 3.2 V per cell.
- Always use the appropriate balancer/charger when charging your LiPo battery pack.
- When the battery is empty, check the temperature of the battery before charging it.
  If the battery is very hot, wait for it to cool down before charging it.
- Never charge a very hot battery as this may cause an explosion or fire.
- When the battery is empty, recharge it immediately. Do not store an empty battery; the battery will continue to discharge, it will fall below the minimum voltage and become unusable.

Download the LiPo safety information in other languages here.

If material defects or manufacturing faults should arise in a product distributed or manufactured by Team Corally / JSP Group Intl BV, and purchased by a consumer, we Team Corally / JSP Group Intl BV acknowledge the obligation to correct those faults or defects within the limitations described below. This manufacturer's warranty is in addition to, and does not affect, the legal or contractual rights of the consumer that arise from the purchase of such products. Team Corally / JSP Group Intl BV guarantees the consumer that its products are free from material, manufacturing, and construction faults, as determined by the general state of knowledge and technology valid at the time of manufacturing. The fault responsible for causing the damage must be proven to have been present in the product at this time. Claims for compensation arising from consequential damage or product liability will not be considered valid unless they fall under peremptory provisions of the law. If material defects or manufacturing faults should arise in a product distributed or manufactured by Team Corally / JSP Group Intl BV in the European community (EC) and purchased by a consumer, then Team Corally / JSP Group Intl BV undertakes to correct those defects within the limitations described below. This manufacturer's declaration does not affect the consumer's legal or contractual rights regarding defects arising from the purchase contract between the consumer and the dealer or reseller.

Extend of the Warranty

If a claim is made under warranty, we will, at our discretion, repair or replace the defective goods. We will not consider supplementary claims, especially for reimbursement of costs relating to the defect (e.g. installation / removal costs) and compensation for consequential damages unless they are allowed by statute. This does not affect claims on legal regulations, particularly under product liability law.

Provisions of the Warranty

The purchaser is required to make the warranty claim in writing, and must enclose original proof of purchase (e.g. invoice, receipt, delivery note) and the appropriate warranty card. The purchaser must send the defective goods to our local representatives or directly to Team Corally / JSP Group Intl BV, Geelseweg 80, 2250 Olen, Belgium at his own risk and cost.

The purchaser should state the material defect or manufacturing fault, or symptoms of the fault, as accurately as possible, so that we can check if our warranty obligation is applicable. The goods are transported from the consumer to us, and from us to the consumer, entirely at the risk and cost of the consumer.

Invalidation of the Warranty

The consumer cannot make a claim under warranty where the fault arises from natural wear, competition use, or improper use (including installation) or external forces. The consumer's adherence to the building and operating instructions relevant to the model, including the installation, operation, use of, and maintenance of, model-related components cannot be supervised by Team Corally / JSP Group Intl BV. Therefore Team Corally / JSP Group Intl BV is in no way liable for loss, damage, or costs resulting from improper use, or behaviour in any way connected to the above-described provisions. Unless otherwise required by law, Team Corally / JSP Group Intl BV is in no way liable to provide compensation for damages arising from the improper use of the model (including personal injury, death, damage to buildings, loss of turnover, loss of business, or interruption of business, or any other direct or indirect consequential damage).

Duration of Validity

The claim period is 24 months from the date of purchase of the product by the consumer from a dealer in the European Community (EC) counted from the date of purchase. The claim period is 12 months from the date of purchase of the product by the consumer from a dealer outside the European Community (EC) counted from the date of purchase. If a defect arises after the end of the claim period, or if evidence or documents required according to this declaration in order to make the claim valid are not submitted until after this period, then the consumer forfeits any rights or claims from this declaration. The guarantee period is not prolonged by the granting of any claims within the framework of this warranty, especially in the case of repair or replacement. The guarantee period also does not restart in such cases.

Warranty Expiration

If we do not acknowledge the validity of a claim based on this declaration within the claim period, all claims based on this declaration will expire after six months from the time of registering the claim; however this cannot occur prior to the end of the claim period.

For any support, contact us at support.corally.com

Download the warranty information in other languages here.

DOWNLOAD • *QUICK START GUIDE*

Download the latest version of this manual and the other language versions.
Download other instruction manuals about : ***Electronics - LiPo Safety Instructions - Spare parts - Option Parts ...***

ALL INSTRUCTION MANUALS

Go to
https://corally.com/en/useful-links/downloads-manuals

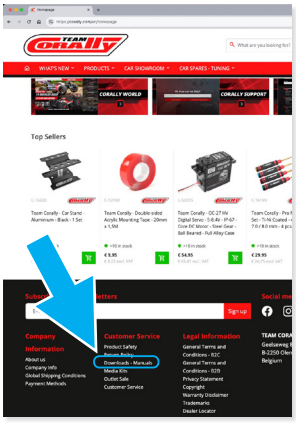

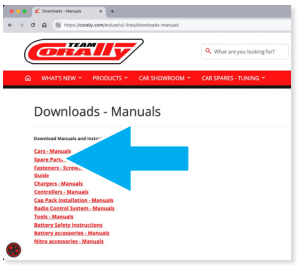

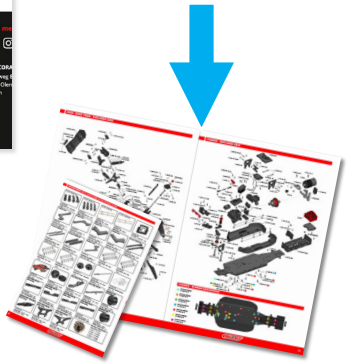

ONE PAGE MANUALS *(Step by step manual)*

Go to https://world.corally.com/



Select your car and visit the showroom

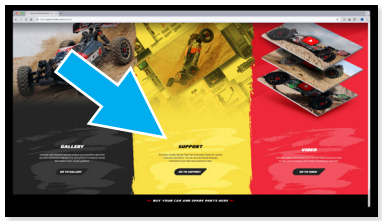

Go to the bottom of the page and click on SUPPORT.

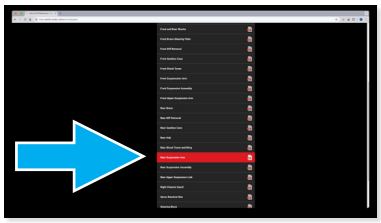

... and select a "One Page Manual"

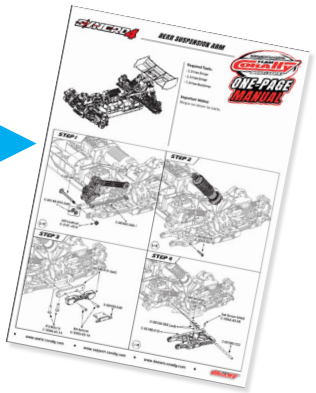

KIT CONTENT



Transmitter



RTR Model



Tool Set



User Guides

REQUIRED FOR OPERATION (Not included)



Charger : C-51025 - ULTRA-X 80



C-50301 - Multi Charge / Balance Lead - 3-in-1
- XT-90 - EC-5 - T-Plug - 6S Balance Board



LiPo - Min. capacity of 4000mAh
3S - 11.1V LiPo Battery - Hard case
4S - 14.8V LiPo Battery - Hard case



C-90248 - LiPo Safe Bag - Sport - for 2 pcs
2S Hard Case Battery packs



4 x AA batteries for the Transmitter



Silicone Oil - Grease - Threadlock
(for maintenance)

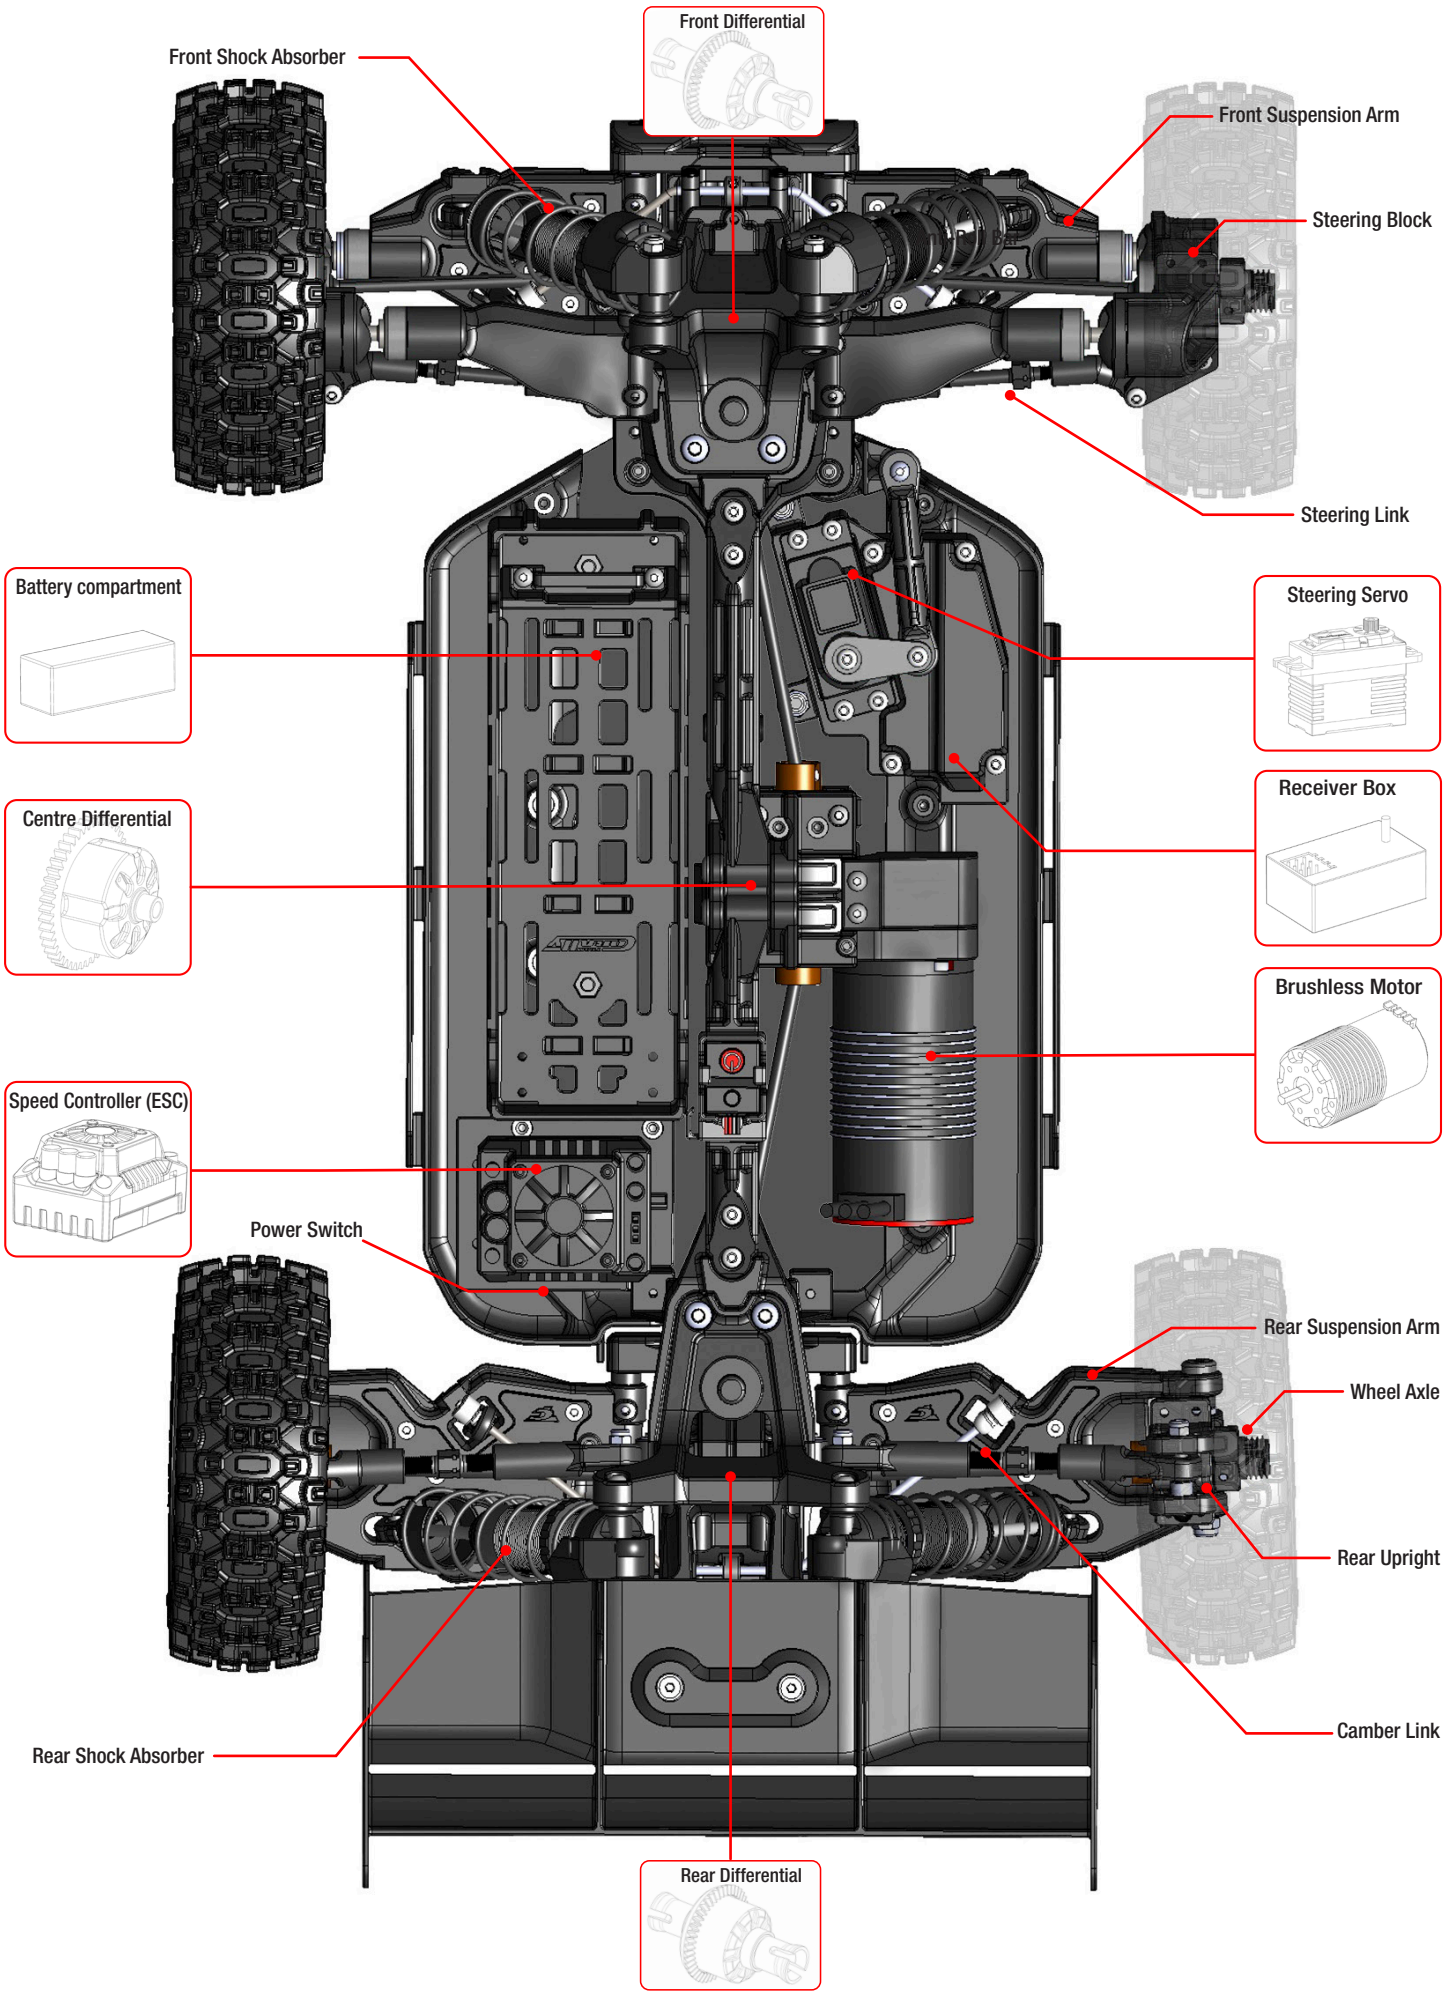
Front Differential
Front Shock Absorber
Front Suspension Arm
Steering Block
Steering Link
Battery compartment
Steering Servo
Centre Differential
Receiver Box
Brushless Motor
Speed Controller (ESC)
Power Switch
Rear Suspension Arm
Wheel Axle
Rear Upright
Camber Link
Rear Shock Absorber
Rear Differential

READ THE INSTRUCTIONS



- *Lisez les instructions*
- *Lesen Sie die Anleitung*
- *Lees de instructies*

CHARGE THE BATTERY



- *Chargez la batterie*
- *Laden Sie den Akku*
- *De batterij opladen*

INSTALL 4x AA BATTERY - 1.5V



- *Installez les piles dans l'émetteur*
- *Setzen Sie die Batterien in den Sender ein*
- *Plaats de batterijen in de zender*

MAKE SURE THAT ALL SCREWS AND NUTS ARE TIGHTENED PROPERLY.

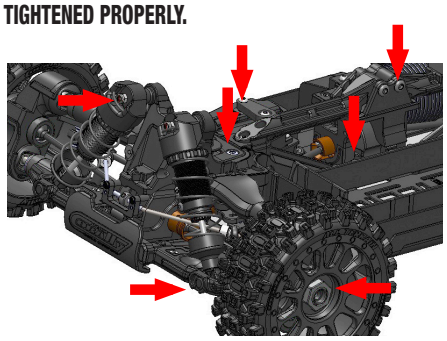

- *Vérifiez le serrage des vis et écrous*
- *Überprüfen Sie die Schrauben und Muttern auf festen Sitz*
- *Controleer de vastheid van de schroeven en moeren*

INSTALL THE FULLY CHARGED BATTERY

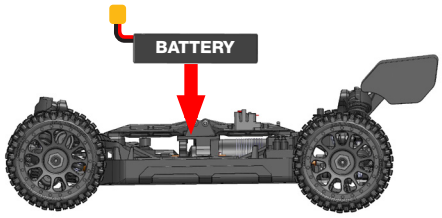

- *Installez la batterie chargée*
- *Setzen Sie den geladenen Akku ein*
- *Installeer de opgeladen batterij*

TURN ON THE TRANSMITTER (Always First)



- *Allumez l'émetteur (toujours en premier)*
- *Schalten Sie den Sender ein (Immer zuerst)*
- *Zet de zender aan (altijd eerst)*

CONNECT THE BATTERY TO THE ESC SWITCH ON THE ESC

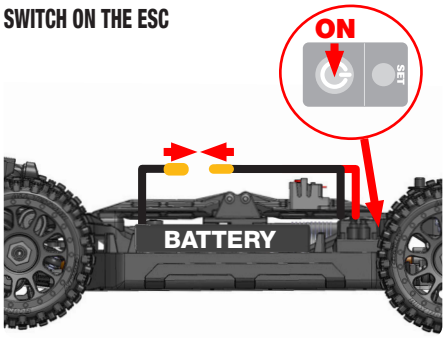

- *Connectez la batterie au variateur et allumez-le*
- *Schließen Sie den Akku an den Regler an und schalten Sie ihn ein*
- *Sluit de accu aan op de regelaar en schakel deze in*

CHECK THE FUNCTIONS

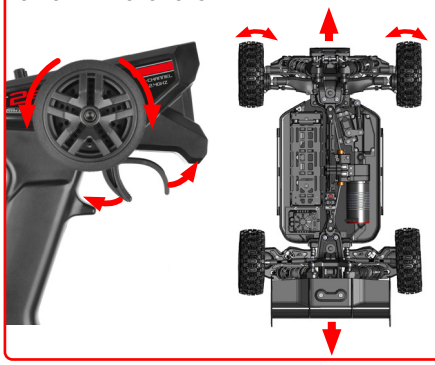

- *Contrôlez les fonctions*
- *Kontrollieren Sie die Funktionen*
- *Controle van de functies*

CHECK THE RADIO SYSTEM RANGE

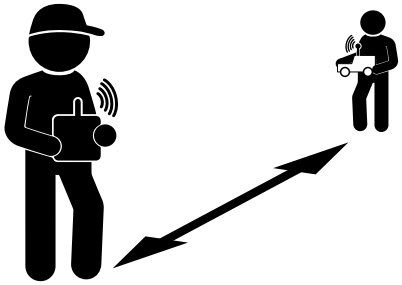

Walk to the maximum distance at which you will drive the vehicle..
Check that the vehicle responds properly to the controls.
If not, reduce the distance or change the driving location.

- *Contrôlez la portée de l'émetteur*
- *Überprüfen Sie die Fahrzeit des Senders*
- *Controleer het rijtijd van de zender*

DRIVE SLOWLY TO BEGIN



To start, set the speed selector to 1
1 = 50% of speed
2 = 100% of speed



- *Pour débuter, placez le sélecteur de vitesse sur 1*
- *Um zu beginnen, stellen Sie den Geschwindigkeitswahlschalter auf 1*
- *Zet om te beginnen de snelheidskeuzeknop op 1*

WHEN FINISHING

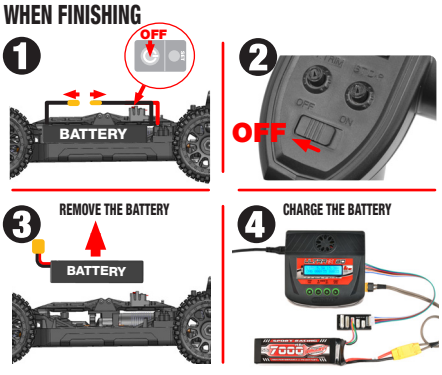

- *Débranchez la batterie et rechargez-la immédiatement.*
- *Trennen Sie den Akku ab und laden Sie ihn sofort wieder auf.*
- *Ontkoppel dan de batterij en laad deze onmiddellijk op.*

CLEAN AND MAINTAIN YOUR VEHICLE



- *Nettoyez et entretenez votre voiture!*
- *Reinigen und pflegen Sie Ihr Auto!*
- *Reinig en onderhoud uw auto!*

GEAR RATIO - RAPPORT DE TRANSMISSION - GETRIEBEVERHÄLTNIS- OVERBRENGINGSVERHOUDING

SPEED GEAR CHART - TABLEAU DES VITESSES - DREHZAHLGANGDIAGRAMM - VERSNELLINGSTABEL

GEAR RATIO : 3.31
SPUR GEAR : 46T
MOTOR KV : 2200
TYRE Ø mm : 115

	Km/h	Mph	Km/h	Mph	Km/h	Mph
Gear	13T Pinion		15T Pinion		17T Pinion	
46T	11,71		10,14		8,95	
3S	49	30	56	35	64	40
4S	65	40	75	47	85	53

Factory fitted
OK
Usable but not recommended



Note: The speed indicated in the table is a theoretical speed for information purposes. The real speed varies according to the type of terrain, electronic equipment, atmospheric conditions and other driving parameters.

Note: *La vitesse indiquée dans le tableau est une vitesse théorique à titre indicatif. La vitesse réelle varie en fonction du type de terrain, de l'équipement électronique, des conditions atmosphériques et d'autres paramètres de conduite.*

Bemerkung: Die in der Tabelle angegebene Geschwindigkeit ist eine theoretische Geschwindigkeit, die nur als Referenz dient. Die tatsächliche Geschwindigkeit hängt von der Art des Geländes, der elektronischen Ausrüstung, den Wetterbedingungen und anderen Fahrparametern ab.

Nota: *De in de tabel aangegeven snelheid is een theoretische snelheid, uitsluitend ter referentie. De werkelijke snelheid varieert afhankelijk van het soort terrein, de elektronische apparatuur, de weersomstandigheden en andere rijparameters.*

MOTOR PINION MOD1.0 - PIGNON MOTEUR MOD1.0 - MOTORRITZEL MOD1.0 - MOTOR PINION MOD1.0

- You can choose a different pinion size to change the speed or acceleration. The car is equipped with a 15-tooth pinion from the factory, which is the best balance of power, speed and run time. Adapt the pinion to the type of terrain (off-road = small pinion, speed = large pinion). If the motor gets too hot or the controller shuts down (safety), the motor is working too hard; fit a smaller pinion.

- *Vous pouvez choisir un pignon de taille différente pour modifier la vitesse ou l'accélération. La voiture est équipée en usine du pignon 15 dents, qui offre le meilleur rapport puissance/vitesse/autonomie.. Adaptez le pignon en fonction du type de terrain (tout-terrain = petit pignon, vitesse = grand pignon). Si le moteur chauffe trop ou si le variateur se coupe (sécurité), c'est que le moteur fournit trop d'effort : réduisez la taille du pignon.*

- Sie können ein Ritzel unterschiedlicher Größe wählen, um die Geschwindigkeit oder die Beschleunigung zu verändern. Das Auto ist ab Werk mit einem Ritzel mit 15 Zähnen ausgestattet, was das beste Verhältnis von Leistung/Geschwindigkeit und Fahrzeit darstellt. Passen Sie das Ritzel an den jeweiligen Geländetyp an (Gelände = kleines Ritzel, Geschwindigkeit = großes Ritzel). Wenn der Motor zu heiß wird oder der Regler sich aus Sicherheitsgründen abschaltet, wird der Motor zu stark belastet; verwenden Sie dann ein kleineres Ritzel.

- *U kunt een ander formaat motortandwiel kiezen om de snelheid of versnelling te veranderen. De auto is af fabriek uitgerust met een 15-tands tandwiel, de beste verhouding tussen vermogen, snelheid en rijtijd. Pas het tandwiel aan het soort terrein aan (off-road = klein tandwiel, snelheid = groot tandwiel). Als de motor te heet wordt of de regelaar uitschakelt (veiligheid), wordt de motor te zwaar belast; gebruik dan een kleiner motortandwiel.*

M1.0 PINION - HARDENED STEEL - FOR 5MM DIAMETER MOTOR SHAFT



C-72813 - Pinion 13 Teeth

C-72815 - Pinion 15 Teeth
(Factory installed)

C-72817 - Pinion 17 Teeth

- High-performance pinions gear, manufactured from special steel for toughness and durability with precise tolerances and assures unparalleled concentricity and vibration-free operation. Each pinion is marked with the tooth number for easy and quick identification. Fits all cars with MOD1 gears (1/8 Scale)

- *Pignons Haute Performance, fabriqués en acier spécial avec des tolérances précises pour garantir solidité, longévité et concentricité et fonctionnement sans vibrations. Chaque pignon porte l'indication de son nombre de dents pour une identification facile et rapide. Convient à toutes les voitures avec une transmission MOD1 (Échelle 1/8)*

- Hochleistungsritzel, hergestellt aus Spezialstahl mit präzisen Toleranzen, um Festigkeit, Langlebigkeit und Rundlauf sowie einen vibrationsfreien Betrieb zu gewährleisten. Jedes Ritzel ist mit der Anzahl der Zähne gekennzeichnet, damit es schnell und einfach identifiziert werden kann. Passend für alle Fahrzeuge mit MOD1-Getriebe (Maßstab 1/8)

- *Hoogwaardige motortandwielen, vervaardigd uit speciaal staal met nauwkeurige toleranties om sterkte, duurzaamheid, concentriciteit en trillingsvrije werking te garanderen. Elk tandwiel is gemarkeerd met het aantal tanden voor snelle en eenvoudige identificatie. Past op alle auto's met MOD1-transmissie (schaal 1/8)*

CHANGING THE MOTOR PINION - CHANGEMENT DU PIGNON MOTEUR - AUSWECHSELN DES MOTORRITZELS - VERANDEREN VAN HET MOTORRONDSEL

- You can adjust the gear ratio by changing the motor pinion. You can choose from three pinion sizes: 13, 15 and 17 teeth. The 15-tooth pinion is fitted as standard and allows you to drive on all types of terrain. The 13-tooth sprocket will make the car run slightly slower but provides more torque when used on grassy or muddy terrain. The 17-tooth sprocket will make the car run faster, but be careful not to use it on very rough terrain with severe inclines, mud or tall grass, as the motor will have to work very hard, risk overheating and consume more battery power.
- *Vous pouvez modifier le rapport de transmission en changeant le pignon moteur. Vous avez le choix entre 3 tailles de pignon : 13, 15 et 17 dents. Le pignon 15 dents est installé d'usine et permet de rouler sur tout type de terrain. Le 13 dents fera rouler un peu moins vite mais apportera plus de couple en utilisation sur terrain herbeux ou boueux. Le 17 dents fera rouler la voiture plus vite mais attention à ne pas l'utiliser sur des terrains très accidentés avec de fortes montées, de la boue ou de l'herbe haute car le moteur fournira beaucoup d'effort, risquera de chauffer et consommera plus de batterie.*
- Sie können das Übersetzungsverhältnis ändern, indem Sie das Antriebsritzel austauschen. Sie haben die Wahl zwischen drei Ritzelgrößen: 13, 15 und 17 Zähne. Das 15-Zahn-Ritzel ist werkseitig verbaut und ermöglicht das Fahren auf jedem Gelände. Das 13-Zahn-Ritzel sorgt für eine etwas geringere Geschwindigkeit, bietet jedoch mehr Drehmoment auf grasigem oder schlammigem Gelände. Das 17-Zahn-Ritzel lässt das Auto schneller fahren, aber achten Sie darauf, es nicht auf sehr unebenem Gelände mit starken Steigungen, Schlamm oder hohem Gras zu verwenden, da der Motor stark beansprucht wird, überhitzen könnte und mehr Batterieleistung verbraucht.
- *U kunt de overbrengingsverhouding aanpassen door het motorritsel te vervangen. U kunt kiezen uit drie maten ritzels: 13, 15 en 17 tanden. Het ritsel met 15 tanden is standaard gemonteerd en is geschikt voor elk type terrein. Met het tandwiel met 13 tanden rijdt u iets langzamer, maar heeft u meer koppel op gras of modder. Met het tandwiel met 17 tanden rijdt de auto sneller, maar pas op dat u dit niet gebruikt op zeer ruw terrein met steile hellingen, modder of hoog gras, want de motor zal zwaar moeten werken, kan oververhit raken en verbruikt meer batterijvermogen.*

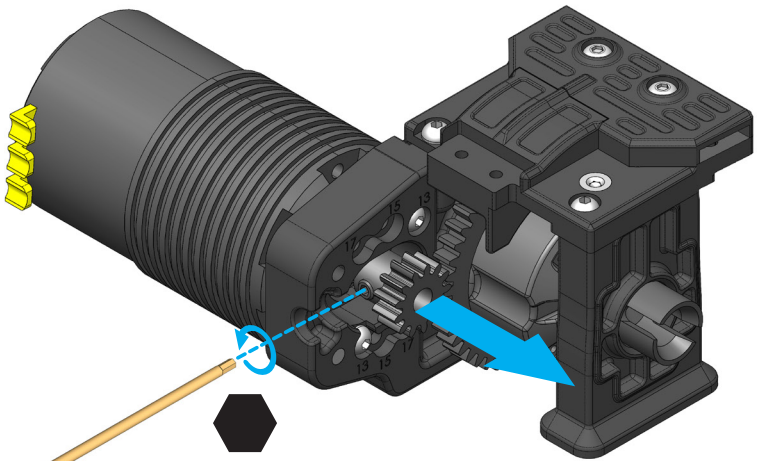

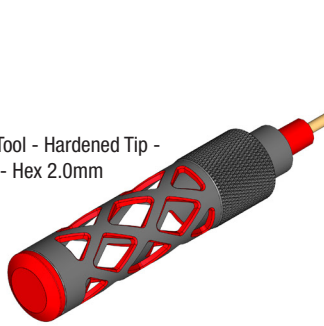

C-16431
Team Corally PRO Tool - Hardened Tip - Lightened Alu Grip - Hex 2.0mm

Hex Driver - 2.0mm

- **Motor mounting holes according to pinion size.**
- ***Trous de fixation moteur en fonction de la taille du pignon.***
- **Befestigungslöcher des Motors je nach Größe des Ritzels.**
- ***Motorbevestigingsgaten volgens rondselgrootte***

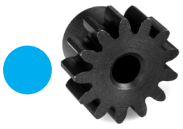

Pinion - **13** Teeth - Shaft Dia. 5mm
#C-72813

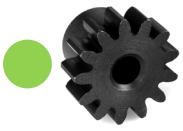

Factory installed

Pinion - **15** Teeth - Shaft Dia. 5mm
#C-72815



Pinion - **17** Teeth - Shaft Dia. 5mm
#C-72817

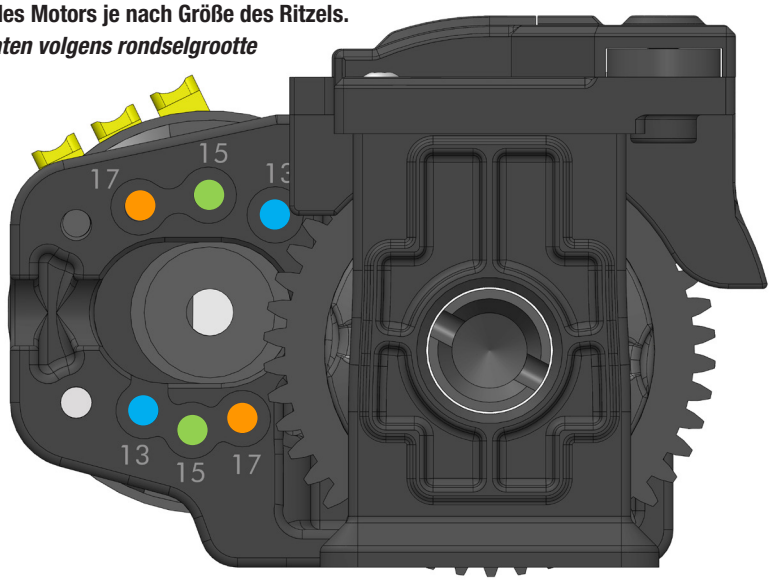

SHOCK ABSORBER MAINTENANCE - ENTRETIEN DES AMORTISSEURS - STOSSDÄMPFERWARTUNG - ONDERHOUD SCHOKDEMPERS

- **It may be necessary to replace the silicone oil in the shock absorbers every 40 runs (depending on how you drive and the type of terrain you drive on).**
- *Il peut être nécessaire de remplacer l'huile silicone des amortisseurs toutes les 40 courses (cela dépend de votre conduite et du type de terrain sur lequel vous roulez).*
- Es kann notwendig sein, das Silikonöl in den Stoßdämpfern alle 40 Fahrten zu wechseln (abhängig von Ihrer Fahrweise und dem Gelände, auf dem Sie fahren).
- *Het kan nodig zijn om de siliconenolie in de schokdempers na elke 40 ritten te vervangen (afhankelijk van uw rijstijl en het soort terrein waarop u rijdt).*

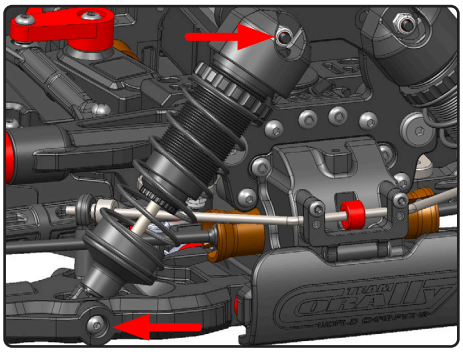

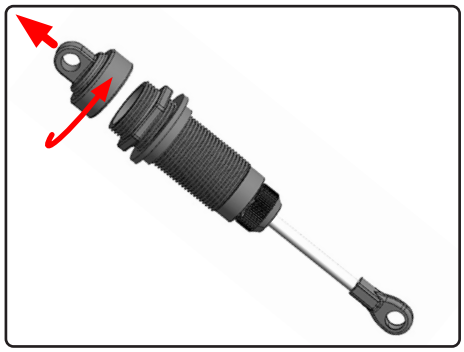

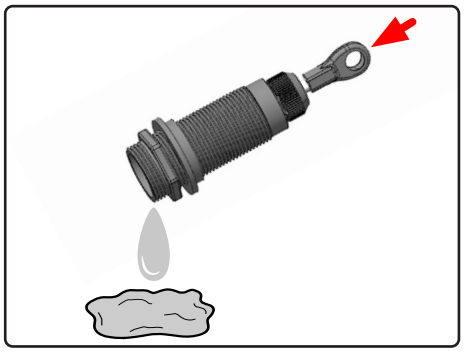

USE SILICONE OIL ONLY. NEVER USE OTHER TYPE OF OIL..

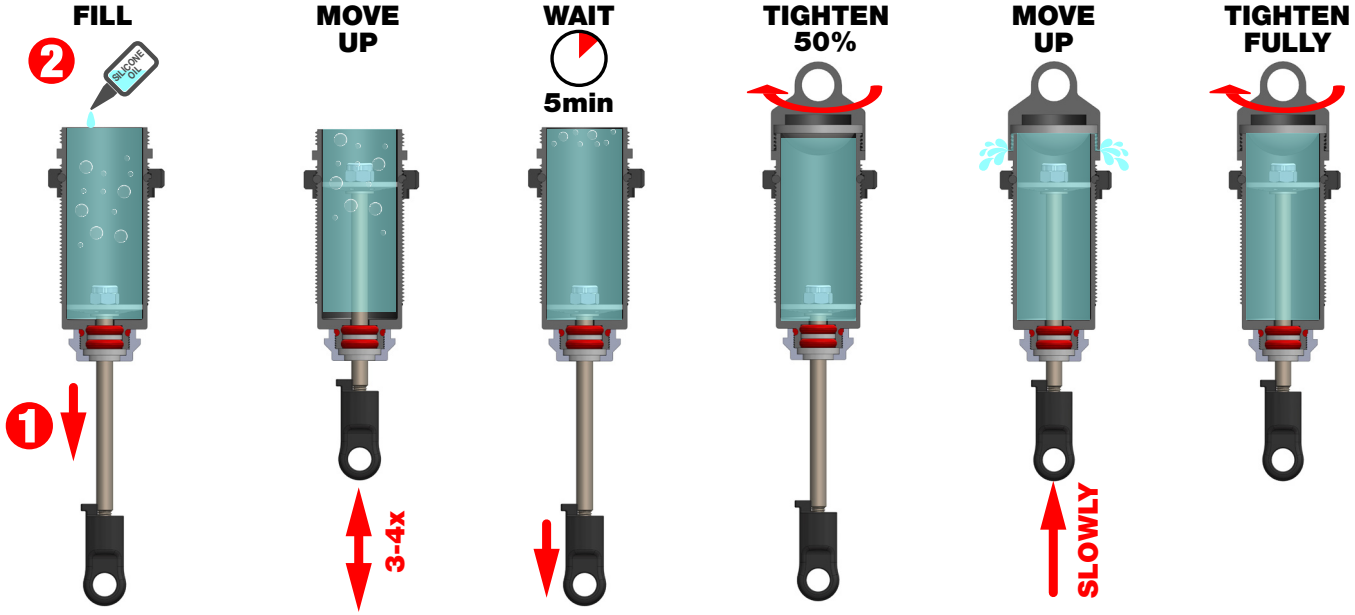

- Fill the shock with silicone oil.
- Move the piston up and down (3-4x) to release the air bubbles in the silicone oil.
- Pull the shock shaft down and wait until the bubbles rise to the surface.
- Screw in the shock absorber cap to 50%.
- Gently move the piston to the upper position; the excess oil will flow out.
- Now tighten the cap fully, but not too tight, otherwise the membrane will be deformed.

- *Remplissez l'amortisseur avec de l'huile de silicone.*
- *Déplacez le piston de haut en bas (3 à 4 fois) pour libérer les bulles d'air.*
- *Tirez la tige d'amortisseur vers le bas et attendez que les bulles remontent à la surface.*
- *Vissez le capuchon d'amortisseur à 50%*
- *Déplacez doucement le piston en position haute, l'excédent d'huile s'écoulera.*
- *Maintenant, serrez le capuchon à fond, mais pas trop, sinon la membrane sera déformée.*

- Füllen Sie den Dämpfer mit Silikonöl.
- Bewegen Sie den Kolben nach nach oben und unten (3-4 Mal), damit die Luftblasen entweichen.
- Ziehen Sie die Kolbenstange nach unten und warten Sie, bis die Blasen an die Oberfläche steigen.
- Schrauben Sie die Dämpferkappe zu 50 % fest.
- Bewegen Sie den Kolben vorsichtig in die obere Position, das überschüssige Öl fließt dann heraus.
- Ziehen Sie nun die Kappe vollständig, aber nicht zu fest an, da sonst die Membran verformt wird.

- *Vul de schokdemper met siliconenolie.*
- *Beweeg de schokdemperzuiger 3 à 4 keer op en neer om de luchtbellen uit de siliconenolie te verwijderen.*
- *Trek de schokas naar beneden en wacht tot de luchtbellen naar de oppervlakte stijgen.*
- *Schroef de schokkap van de schokdemper tot 50% dicht.*
- *Beweeg de zuiger voorzichtig naar de bovenste stand ; de overtollige olie stroomt eruit.*
- *Draai nu de dop helemaal vast, maar niet te strak, anders wordt het membraan vervormd.*

	FRONT		REAR		
	SILICONE OIL	SPRING TENSION	SILICONE OIL	SPRING TENSION	SHOCK PISTON
TRACK USE	450CPS	4mm	400CPS	0mm	4 Holes
OFF-ROAD	600CPS	4mm	500CPS	0mm	4 Holes
FACTORY	500CPS		500CPS		4 Holes

.www. corally.com/Chemicals/Silicone-Oils/

- **Do not overtighten the shock cap, to prevent the silicone shock bladder from deforming..**
- *Ne serrez pas trop le capuchon de l'amortisseur pour éviter la déformation de la membrane en silicone.*
- Ziehen Sie die Dämpferabdeckung nicht zu fest an, um eine Verformung der Silikonmembran zu vermeiden.
- *Draai de schokkap niet te strak aan om vervorming van het siliconenmembraan te voorkomen.*

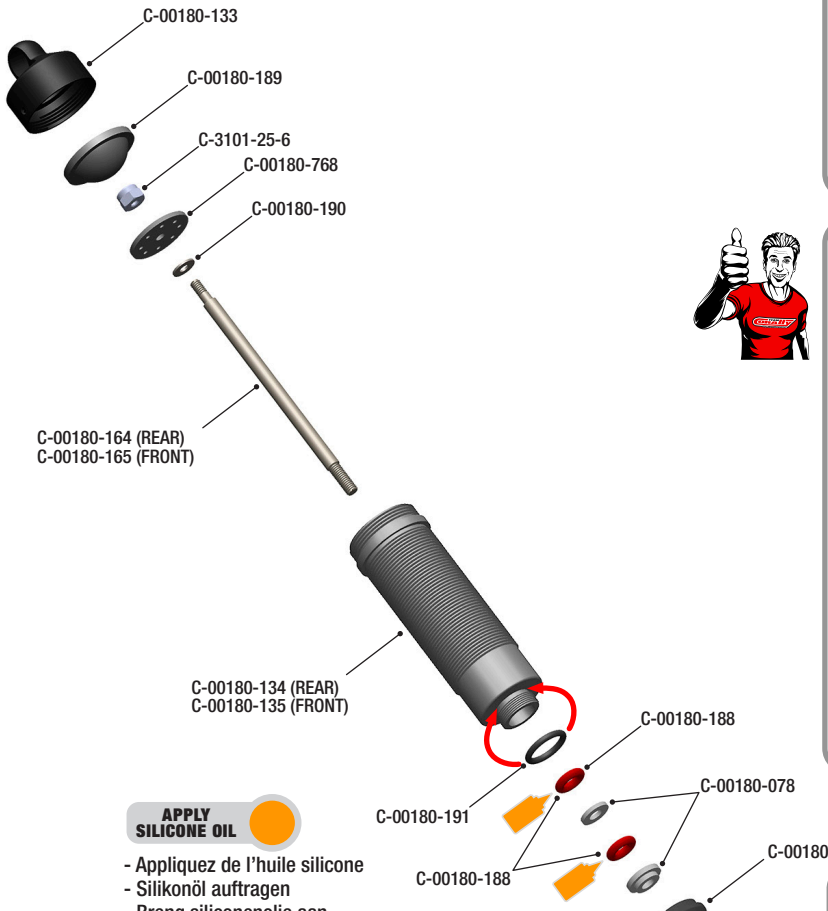



C-00180-768 Shock Piston (8pcs)
Shock Piston - **6 Holes 1.4**
Shock Piston - **8 Holes 1.2** (Factory installed)



- **Place all the small parts on a Ø3 mm screwdriver and push them into the shock body. All parts will be properly aligned.**
- *Placez toutes les petites pièces sur un tournevis (Ø3mm) et poussez-les dans le corps de l'amortisseur. Toutes les pièces seront correctement alignées.*
- Setzen Sie alle Kleinteile auf einen Schraubendreher (Ø3mm) und drücken Sie sie in den Dämpferkörper. Alle Teile werden richtig ausgerichtet.
- *Plaats alle kleine onderdelen op een schroevendraaier (Ø3mm) en duw ze in de behuizing van de schokdemper. Alle onderdelen zitten dan goed uitgelijnd zijn.*

APPLY SILICONE OIL
- Appliquez de l'huile silicone
- Silikonöl auftragen
- Breng siliconenolie aan

OPTION



C-00180-316
Shock Cap - Lower - Aluminium

OPTION

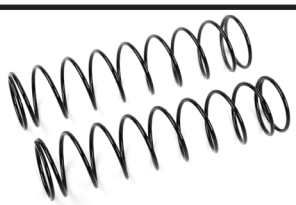

REF		TYPE	POSITION	THICKNESS	LENGTH
C-00180-626	Shock Spring	SOFT	**FR**	1.4mm	L: 75-77mm
C-00180-628	Shock Spring	HARD	**FR**	1.8mm	L: 75-77mm
C-00180-289	Shock Spring	SOFT	**RE**	1.4mm	L: 95-97mm
C-00180-291	Shock Spring	HARD	**RE**	1.8mm	L: 95-97mm

DIFFERENTIAL MAINTENANCE - ENTRETIEN DU DIFFÉRENTIEL - DIFFERENZIALWARTUNG - DIFFERENTIEELONDERHOUD

FRONT DIFFERENTIAL - DIFFÉRENTIEL AVANT - VORDERACHSDIFFERENTIAL - VOORSTE DIFFERENTIEEL

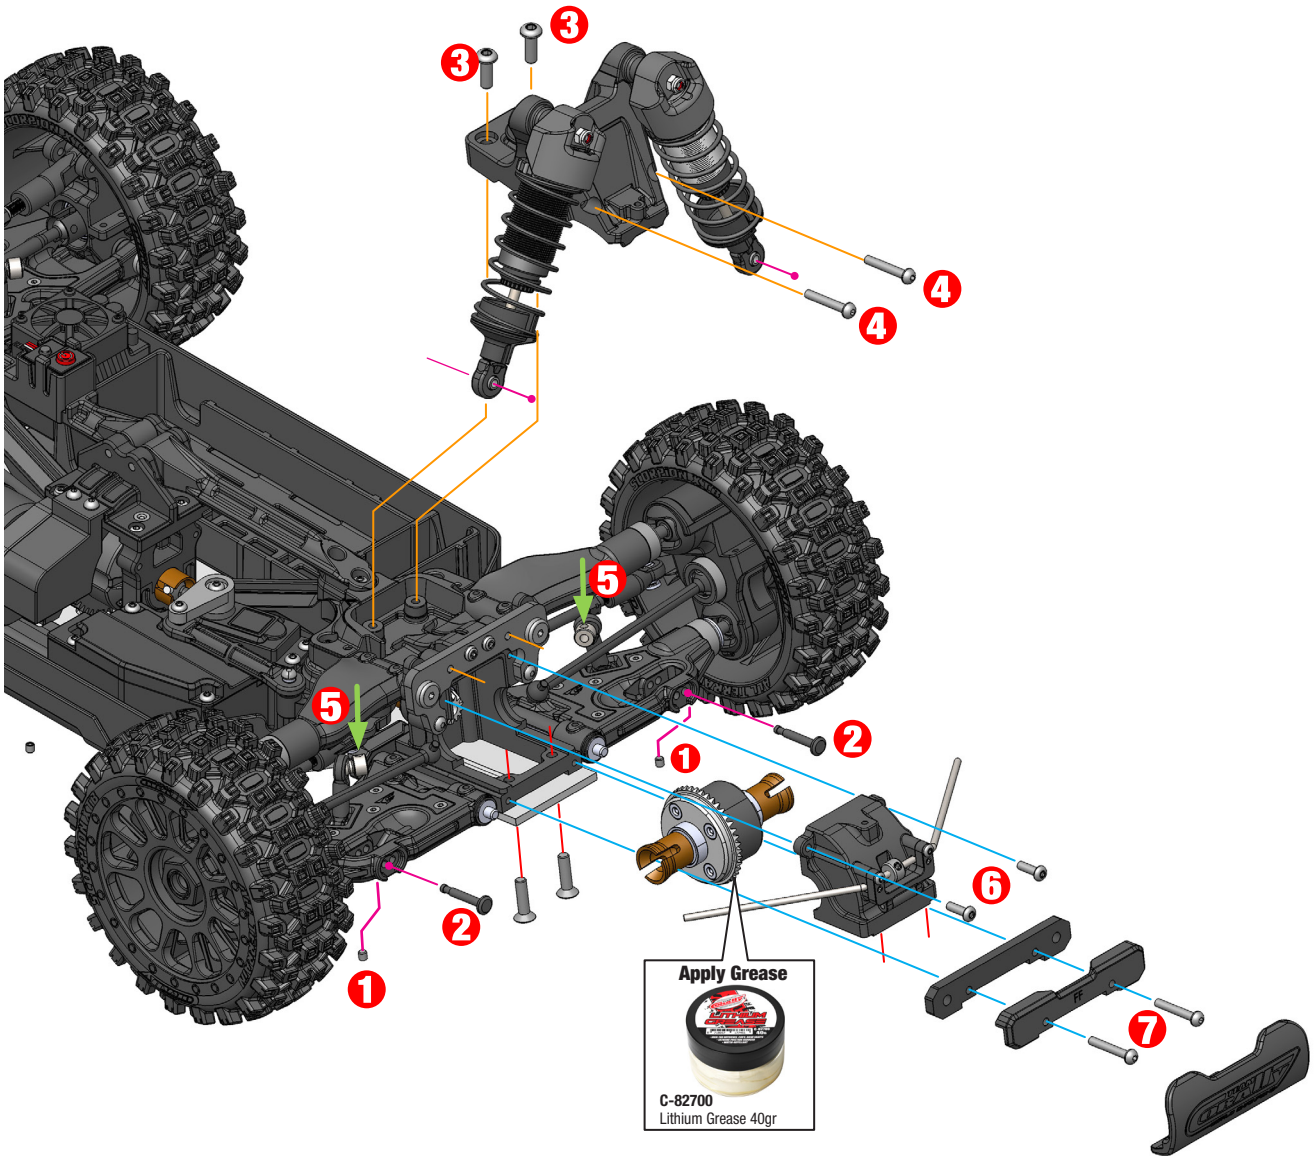

REAR DIFFERENTIAL - DIFFÉRENTIEL ARRIÈRE - HINTERES DIFFERENTIAL - ACHTERSTE DIFFERENTIEEL

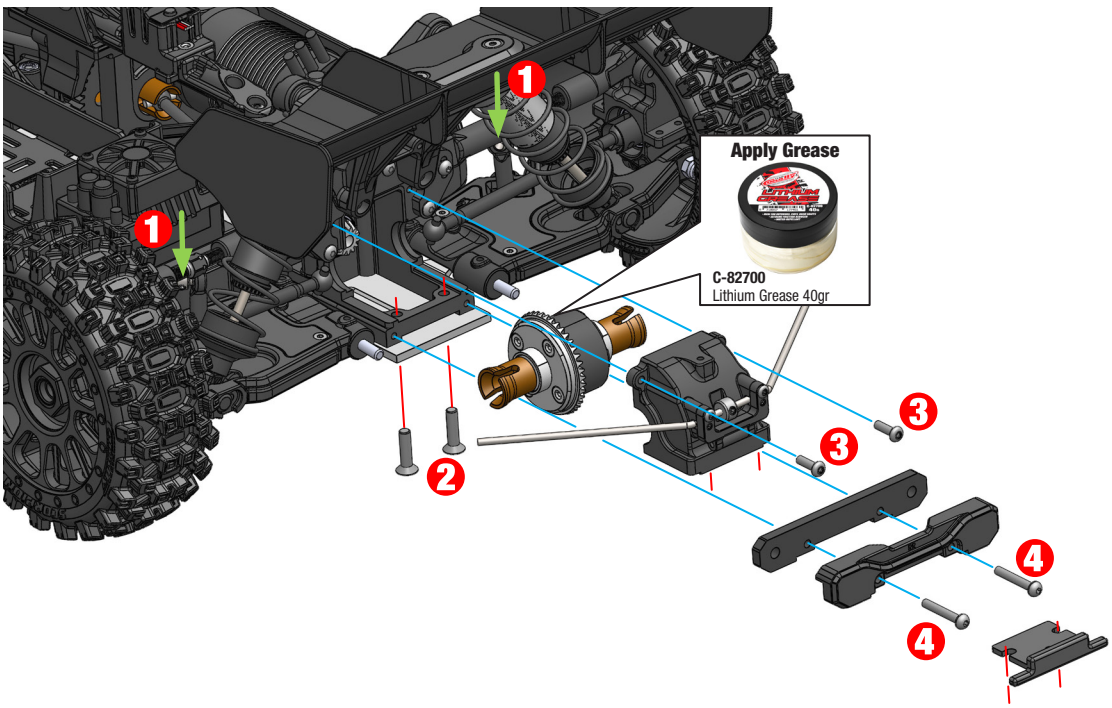

CENTRE DIFFERENTIAL - DIFFÉRENTIEL CENTRAL - MITTELDIFFERENTIAL - MIDDELSTE DIFFERENTIEELENTIEEL

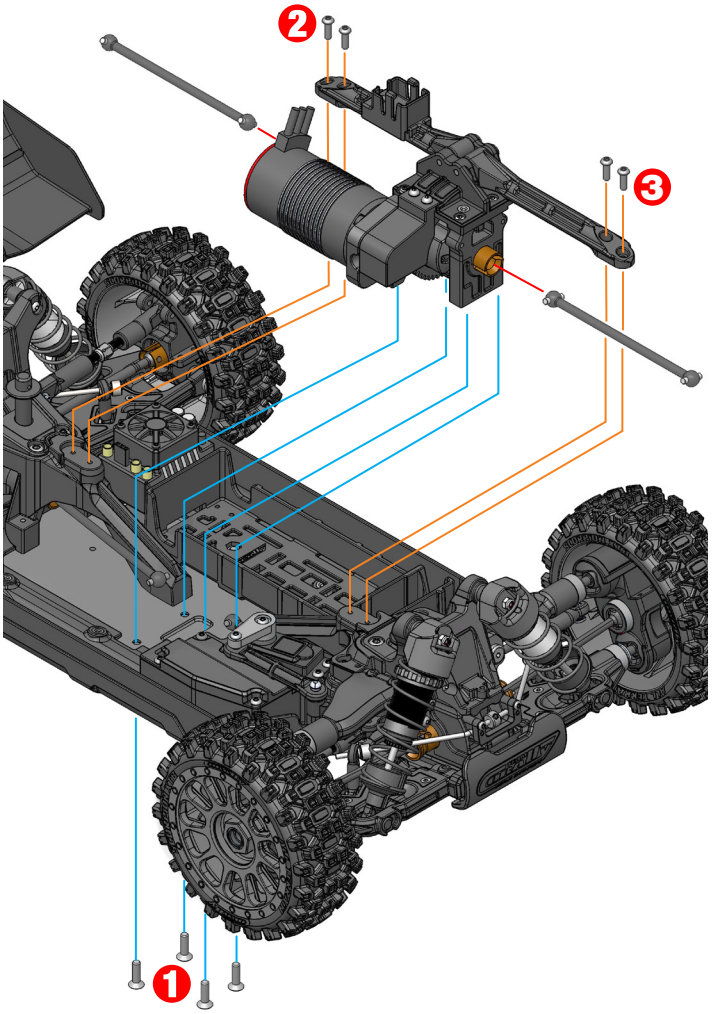

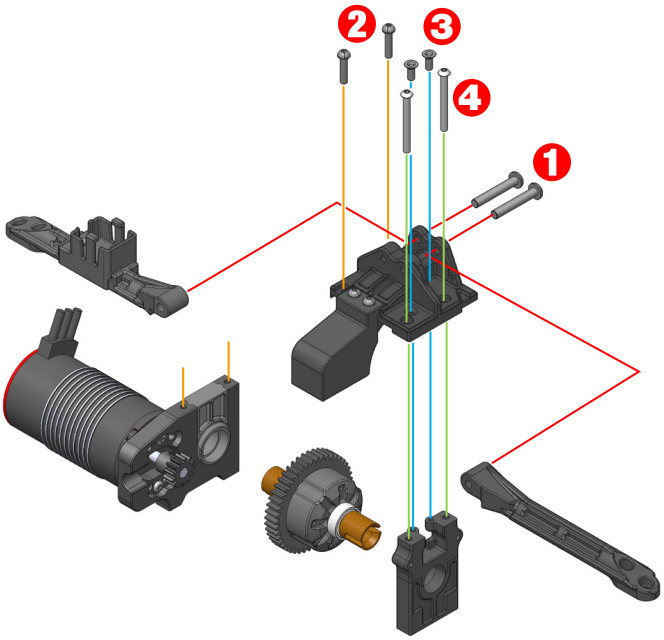

- **It may be necessary to replace the silicone oil every 50 runs (depending on your riding style and the type of terrain you ride on). To maintain the differentials, download the manuals below.**
- *Il peut être nécessaire de remplacer l'huile silicone toutes les 50 courses (cela dépend de votre conduite et du type de terrain sur lequel vous roulez). Pour entretenir les différentiels, téléchargez les manuels ci-dessous.*
- Es kann erforderlich sein, das Silikonöl alle 50 Fahrten zu wechseln (dies hängt von Ihrem Fahrstil und der Art des Geländes ab, auf dem Sie fahren). Laden Sie die folgenden Handbücher herunter, um die Differentiale zu warten.
- *Het kan nodig zijn om de siliconenolie na elke 50 ritten te verversen (dit hangt af van uw rijstijl en het soort terrein waarop u rijdt). Download de onderstaande handleidingen voor het onderhoud van de differentiëlen.*

CENTRE DIFFERENTIAL MANUAL



Download the maintenance manual for the centre differential.

- *Téléchargez le manuel de maintenance du différentiel central.*
- Laden Sie die Wartungsanleitung für das Zentraldifferenzial herunter.
- *Download de onderhoudshandleiding voor het centrale differentieel.*

FR&RE DIFFERENTIAL MANUAL



Download the maintenance manual for FR&RE differentials.

- *Téléchargez le manuel de maintenance des différentiels AV&AR.*
- Laden Sie die Wartungsanleitung für die vorderen und hinteren Differentiale herunter.
- *Download de onderhoudshandleiding voor de voor- en achterdifferentieel.*

FRONT & REAR DIFFERENTIAL - DIFFÉRENTIELS AV&AR - DIFFERENTIAL VORNE UND HINTEN - VOOR- EN ACHTERDIFFERENTIEEL

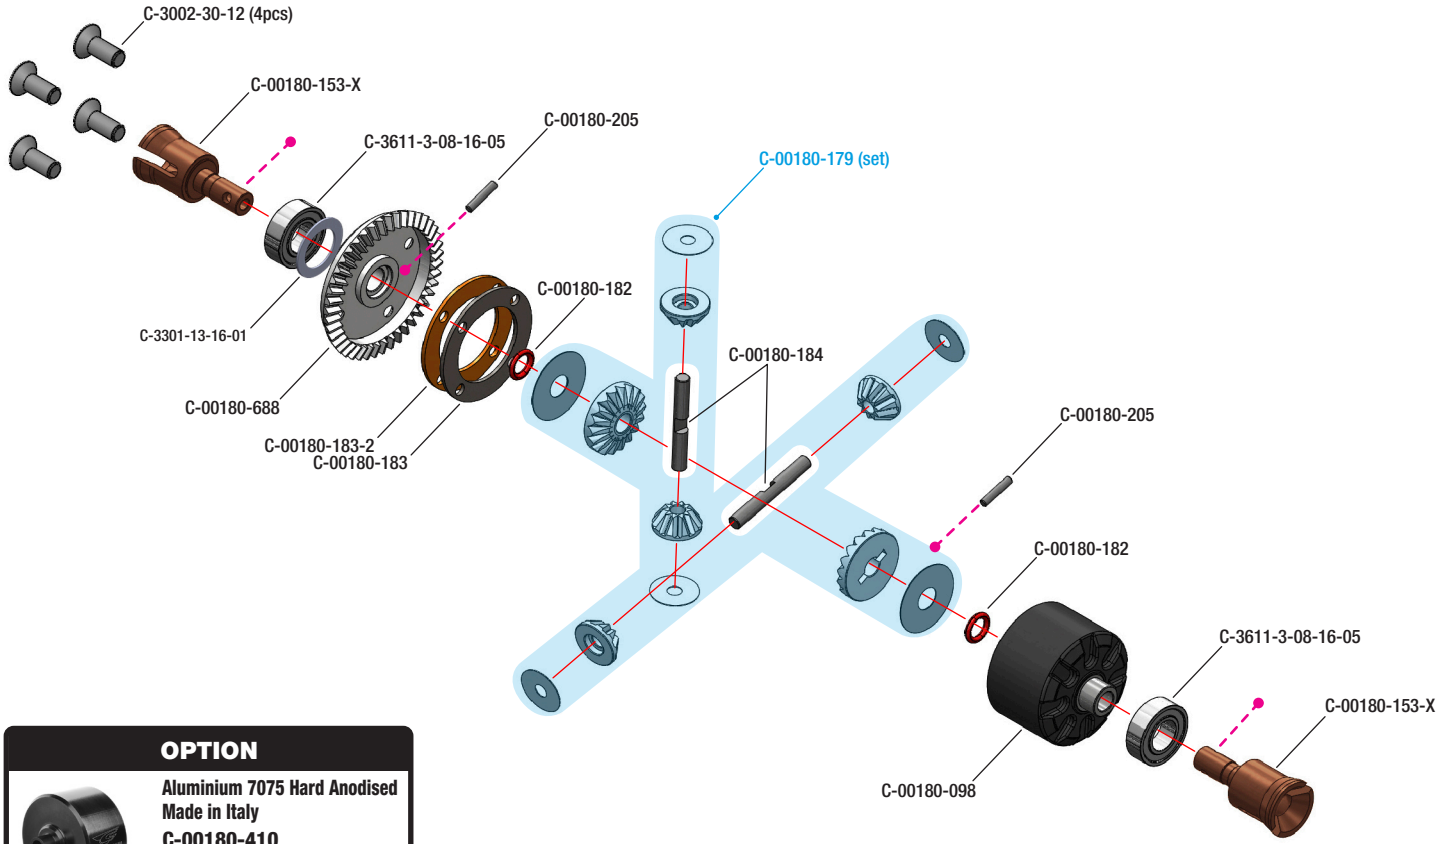

OPTION

Aluminium 7075 Hard Anodised
Made in Italy
C-00180-410
Xtreme Diff Case - 30mm - FR / RE - 1 pc

CENTRE DIFFERENTIAL - DIFFÉRENTIEL CENTRAL - MITTELDIFFERENTIAL - MIDDENDIFFERENTIEEL

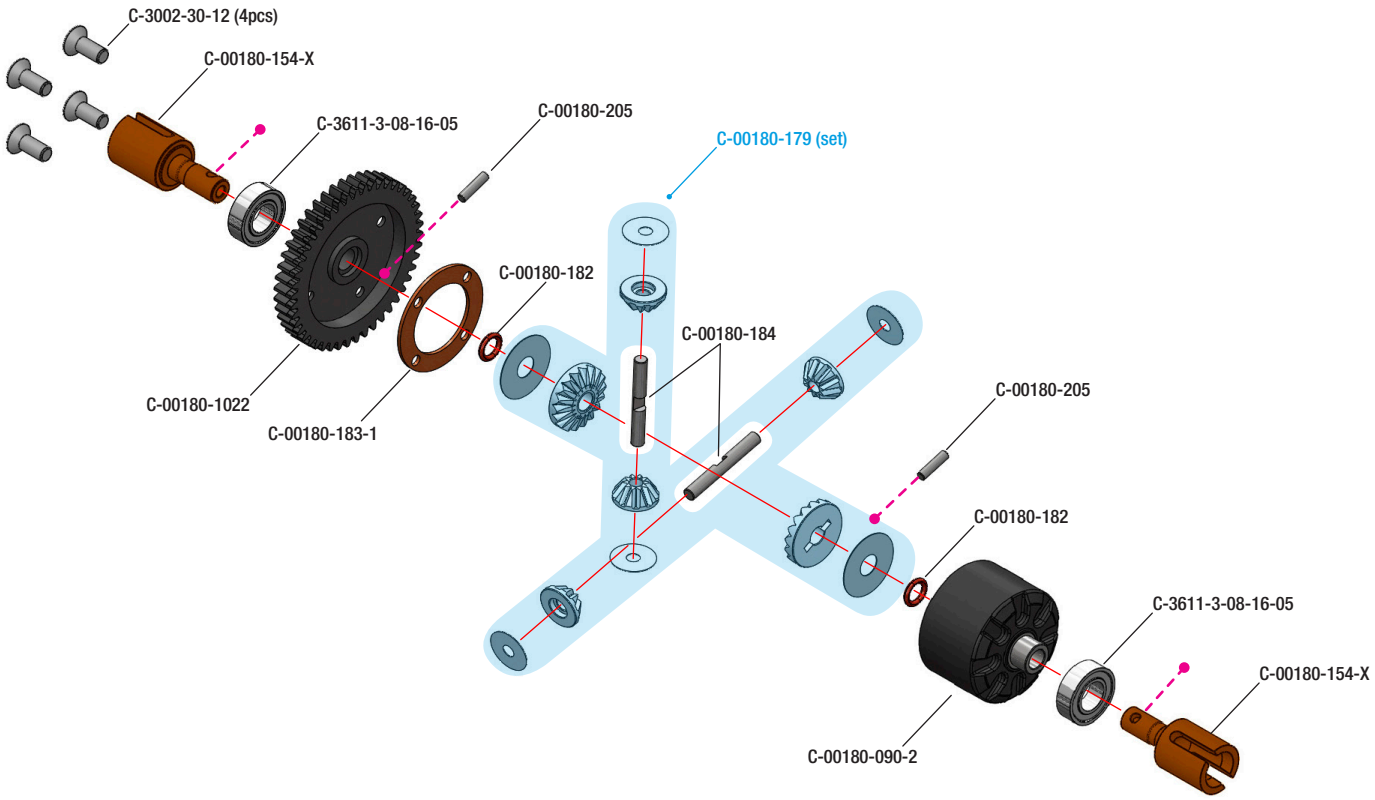



HEX BUTTON HEAD SCREWS
DIN 7380 - STEEL - 10 pcs

8	M3x8mm #C-3003-30-08
10	M3x10mm #C-3003-30-10
12	M3x12mm #C-3003-30-12
16	M3x16mm #C-3003-30-16
20	M3x20mm #C-3003-30-20
30	M3x30mm #C-3003-30-30
12	M4x12mm #C-3003-40-12

HEX FLAT HEAD SCREWS
DIN 7991 - STEEL - 10 pcs

6	M2.5x6mm #C-3002-30-14
15	M3x15mm #C-3002-30-15

OPTION

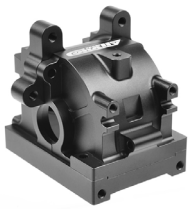

Aluminium 7075
Hard Anodised

C-00180-854
Gearbox Case Set
Fit FRONT or REAR

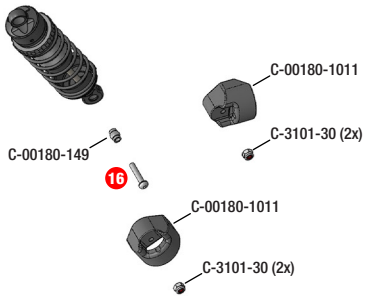

REAR DRIVE TRAIN - TRAIN ARRIÈRE - HINTERACHSANTRIEB - ACHTERSTE AANDRIJFLIJN



HEX BUTTON HEAD SCREWS DIN 7380 - STEEL - 10 pcs

8	M2.5x8mm #C-3003-25-08
18	M2.5x18mm #C-3003-25-18
8	M3x8mm #C-3003-30-08
10	M3x10mm #C-3003-30-10
14	M3x14mm #C-3003-30-14
16	M3x16mm #C-3003-30-16
20	M3x20mm #C-3003-30-20
25	M3x25mm #C-3003-30-25
30	M3x30mm #C-3003-30-30

HEX FLAT HEAD SCREWS DIN 7991 - STEEL - 10 pcs

6	M2.5x6mm #C-3002-25-06
15	M3x15mm #C-3002-30-15
16	M3x16mm #C-3002-30-16

OPTION

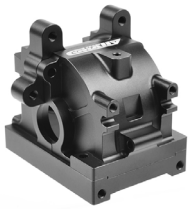

Aluminium 7075 Hard Anodised

C-00180-854
Gearbox Case Set
Fit FRONT or REAR

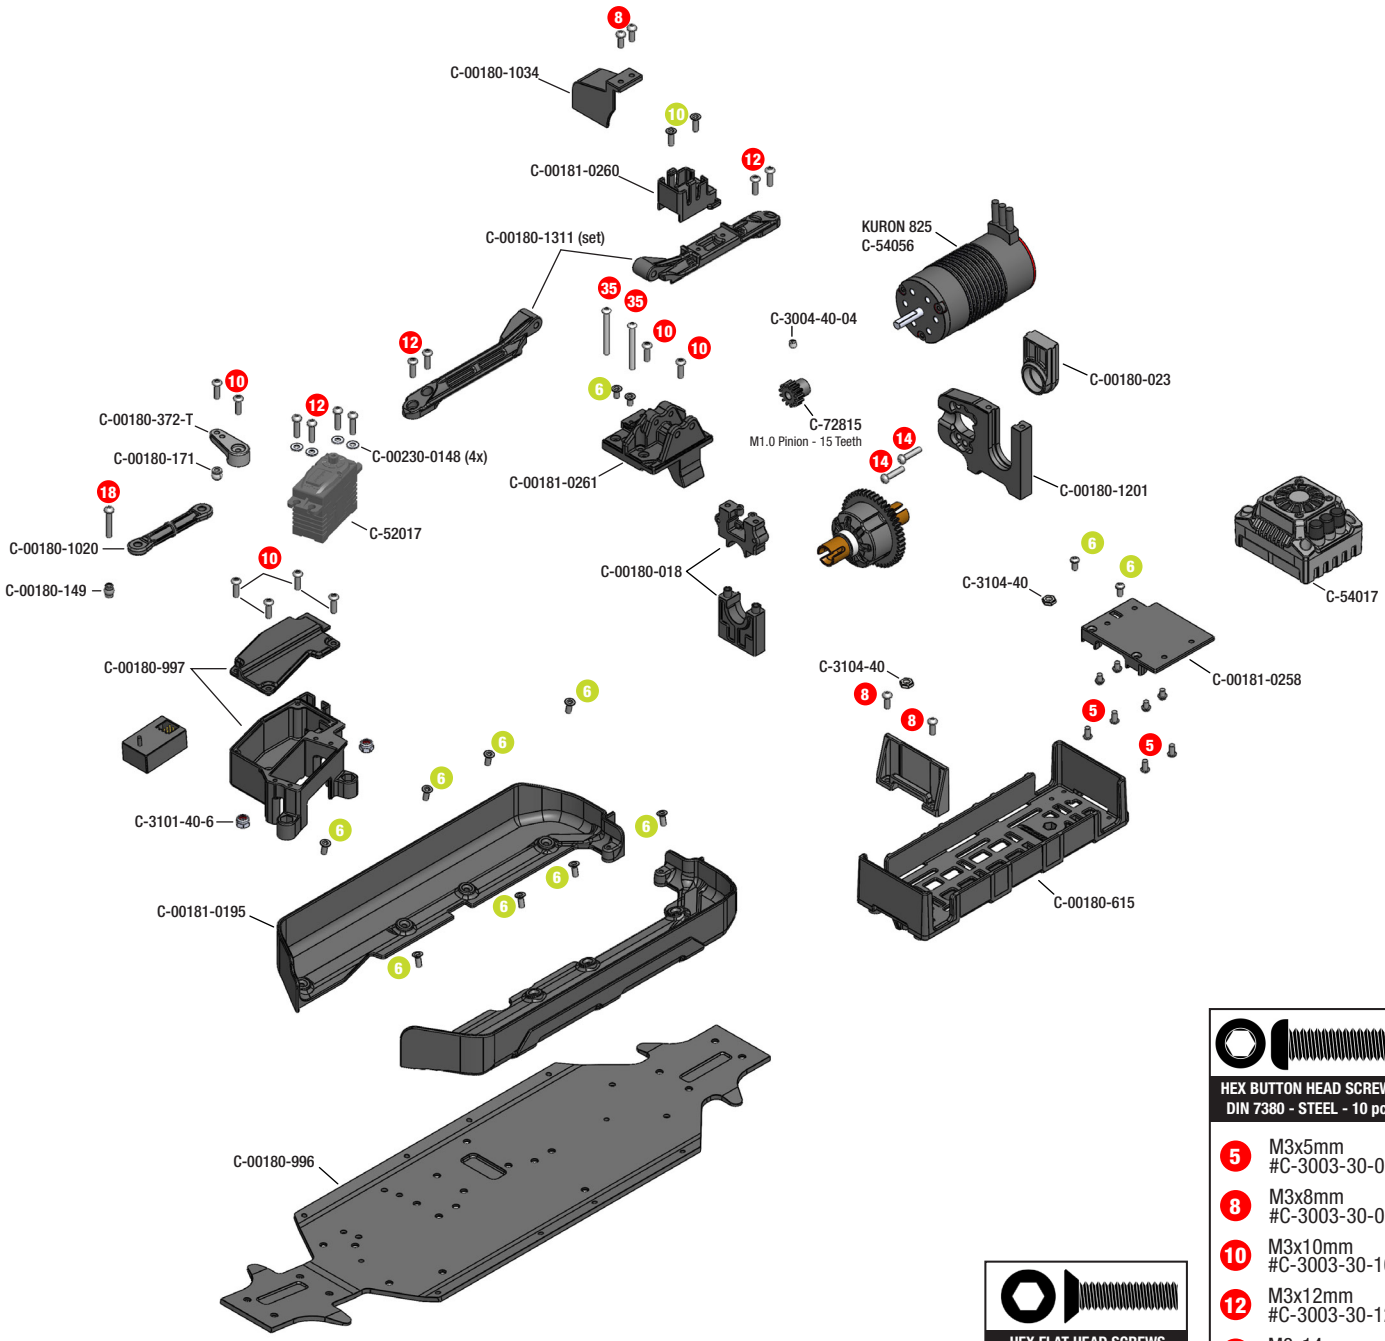

HEX BUTTON HEAD SCREWS DIN 7380 - STEEL - 10 pcs

5	M3x5mm #C-3003-30-05
8	M3x8mm #C-3003-30-08
10	M3x10mm #C-3003-30-10
12	M3x12mm #C-3003-30-12
14	M3x14mm #C-3003-30-14
18	M3x18mm #C-3003-30-18
35	M3x35mm #C-3003-30-35

HEX FLAT HEAD SCREWS DIN 7991 - STEEL - 10 Pcs

6	M3x6mm #C-3002-30-06
12	M3x12mm #C-3002-30-12

CHASSIS - SCREWS DESCRIPTION

- **M3x12mm DIN 7991** #C-3002-30-12
- **M3x8mm DIN 7991** #C-3002-30-08
- **M4x12mm DIN 7991** #C-3002-40-12
- **M4x14mm DIN 7991** #C-3002-40-14
- **M4x16mm DIN 7991** #C-3002-40-16

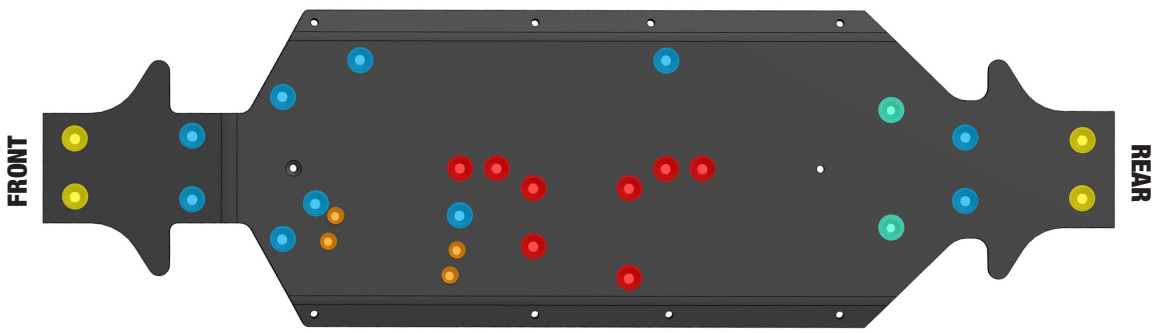

SERVO-SAVER - SAUVE-SERVO

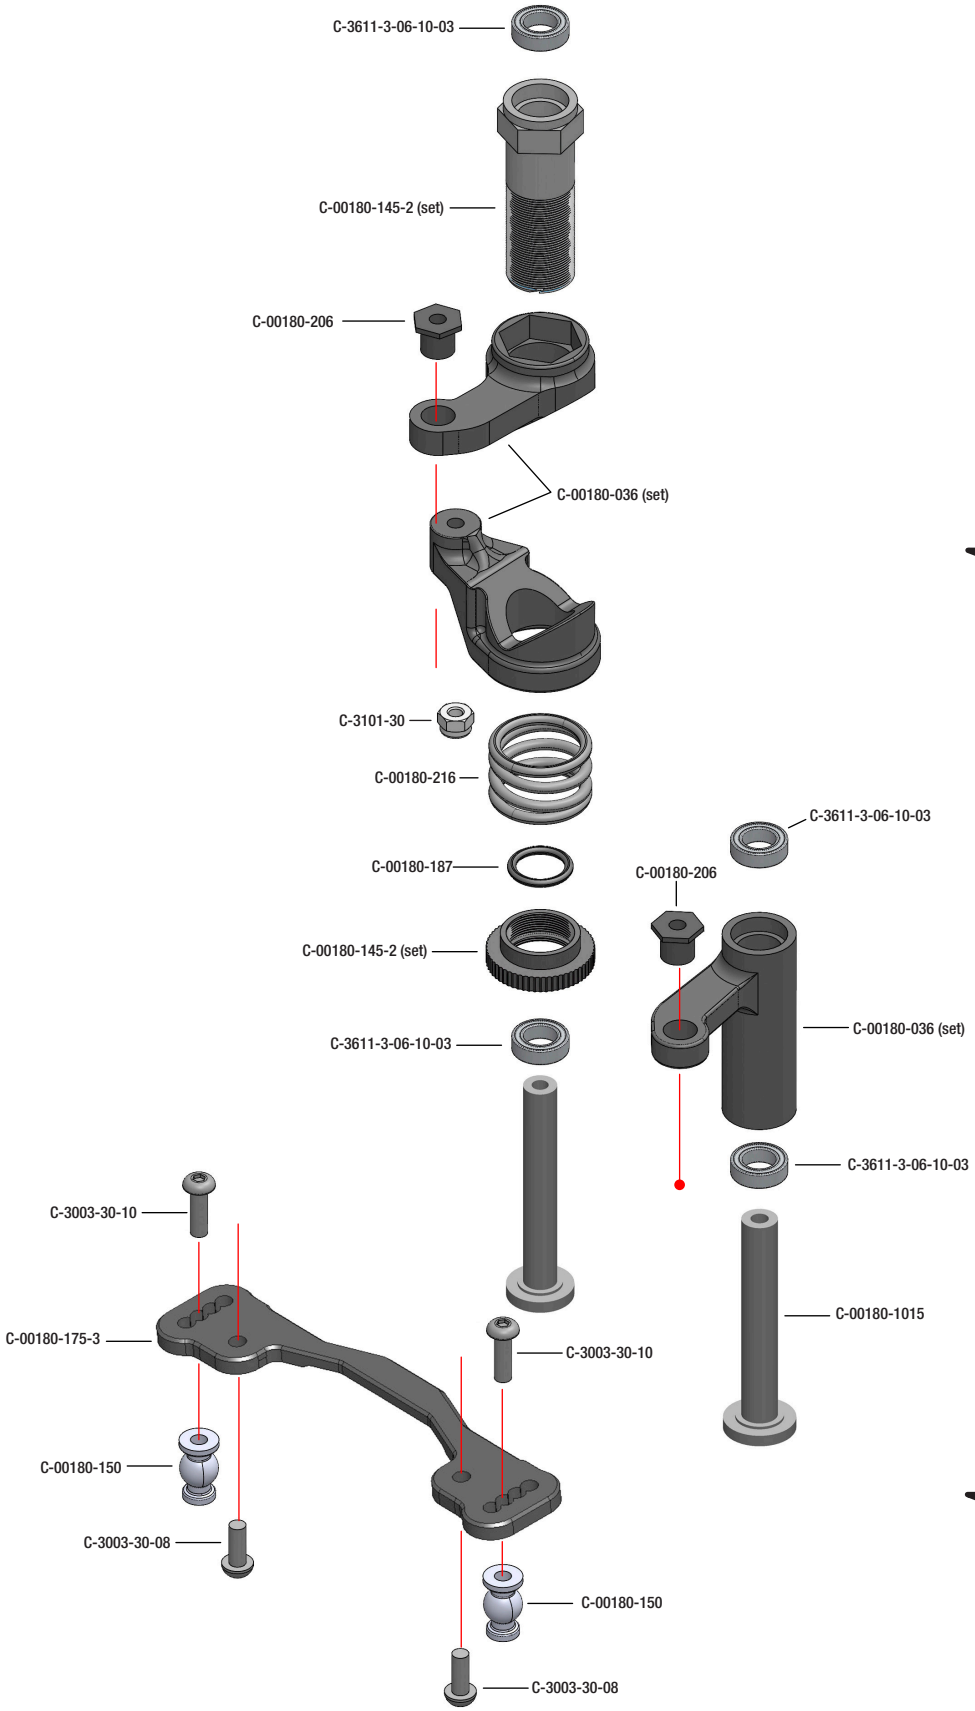

OPTION



C-00180-266
Servo Saver Steering Arm - Aluminium 7075 T6 - Hard Anodised - Black - 1 pc

OPTION



C-00180-831
Steering Rack - Dual Stiffener - Aluminium - 1 pc

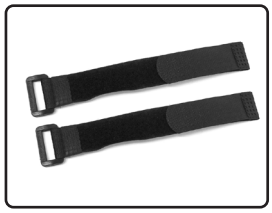

C-00180-004-1
Battery Strap - Hook & Loop - 2 pcs

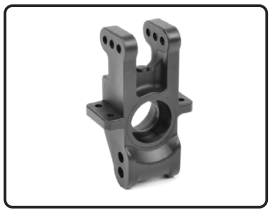

C-00180-008
Hub - Rear - Composite - 1 pc



C-00180-009-1
HD Steering Block (1pc) - Pillow Ball Cup (2pcs) - Composite

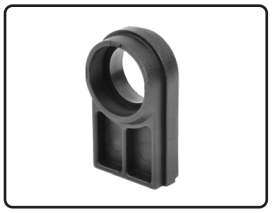

C-00180-023
Motor Mount Centre Diff Insert - Composite - 1 pc



C-00180-018
Centre Diff Bulkhead - Composite - 1 Set

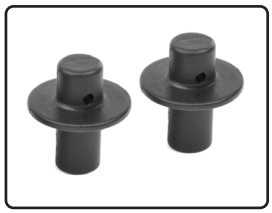

C-00180-024
Body Post - Composite - 2 pcs

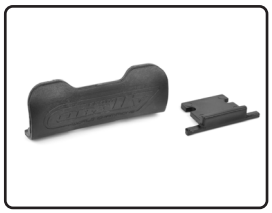

C-00180-032
Bumper - Front - Rear - Composite - 1 set

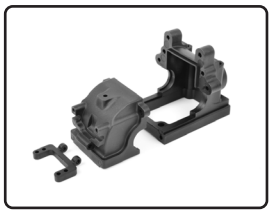

C-00180-033
Gearbox Case Set - Composite - 1 Set



C-00180-036
Steering Bellcrank - Parts A-B-C - Composite - 1 Set



C-00180-039
Steering Ball Joint - 1 Set



C-00180-041
Rear Camber Ball Joint - Outer - Inner - 1 Set

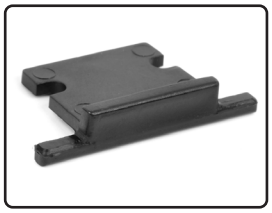

C-00180-045
Bumper Spacer - Front - Rear - 1pc

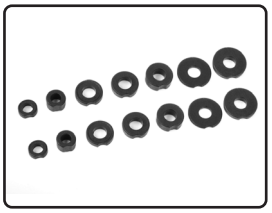

C-00180-055
Suspension Arm Shim - Composite - 1 Set

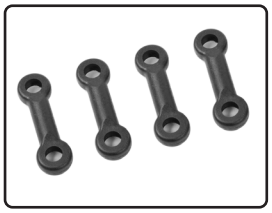

C-00180-089
Anti-Roll Bar Ball Cups - Composite - 4 pcs

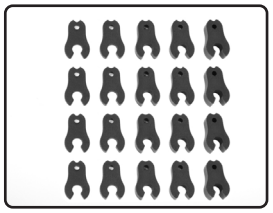

C-00180-109
Caster Clips Set - 1 to 4.5mm - 1 Set

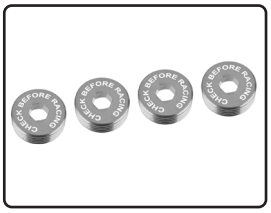

C-00180-117-2
Pivot Ball Adjusting Nut - Aluminium - 4 pcs

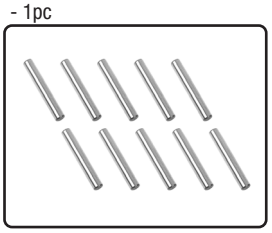

C-00180-122
Pin 2.5x17mm - Steel - 10 pcs

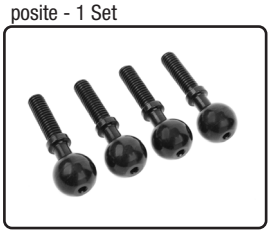

C-00180-123
Pivot Ball - Steel - 4 pcs

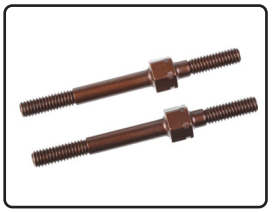

C-00180-128-3
Turnbuckle - M4 - 50mm - Spring Steel - 2 pcs



C-00180-145-2
Servo Saver Shaft w/ Nut - Aluminium - 1 pc



C-00180-149
Ball - 5.8mm - Steel - 4 pcs



C-00180-150
Ball Shouldered - 6.8mm - Steel - 4 pcs



C-00180-170
Ball - 6.8mm - Steel - 2 pcs



C-00180-171
Threaded Ball - 6mm - Steel - 2 pcs

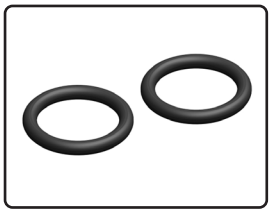

C-00180-187
O-Ring - Silicone - 12x14mm - 2 pcs



C-00180-206
Steering Rack Bushing - Steel - 2 pcs

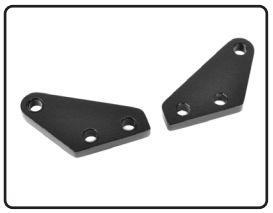

C-00180-207
Steering Block Arms - Aluminium - 2 pcs

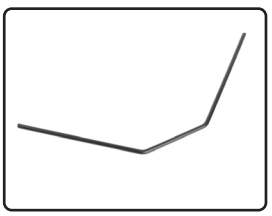

C-00180-197
Anti-Roll Bar - 2.4mm - Front - 1 pc

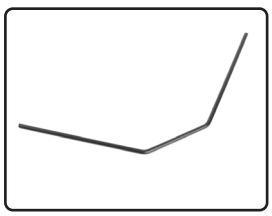

C-00180-200
Anti-Roll Bar - 2.4mm - Rear - 1 pc



C-00180-216
Servo Saver Spring - 1 pc



C-00180-220
Ball End 5.8mm - for Anti Roll Bar - Steel - 4 pcs



C-00180-231-2
Collar - for Anti-roll Bar - Aluminium - 1 pc



C-00180-293
Ball 6.8mm - Steel - 4 pcs

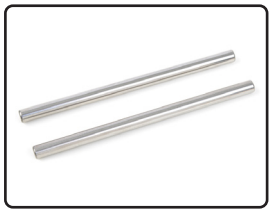

C-00180-322
Suspension Arm Pivot Pin - Lower Inner - Fr/Re - Steel - 2 pcs

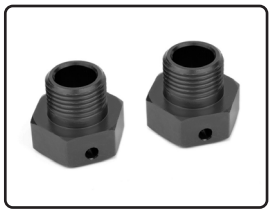

C-00180-329-B
Wheel Hex Adapter - Aluminum - Black - 2 Pcs

SPARE PARTS - PIÈCES DE RECHANGE • ERSATZTEILE • ONDERDELEN

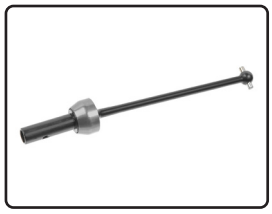

C-00180-360-T
Universal Joint Drive Shaft - Buggy - Front - 1 pc

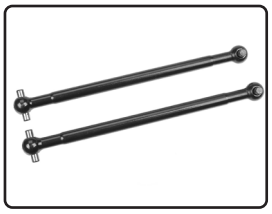

C-00180-369-2
Dogbones - Short - Rear - Steel - 2 pcs



C-00180-370-X
PRO Drive Axle - Short - Rear - Swiss Spring Steel - 2 pcs

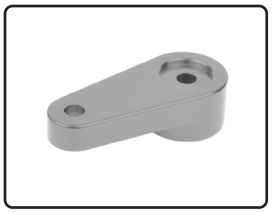

C-00180-372-T
Servo Arm - Steering - Alu - 1 pc



C-00180-532-2
HDA Susp. Arm Insert - Spacer 1.5mm - Alu. - Titanium - 2 pcs



C-00180-615
Battery Tray - Large - Composite - 1 pc

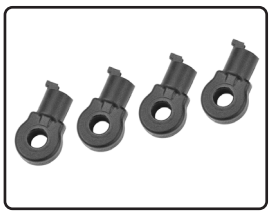

C-00180-770
HD Shock End - Short - Composite - 4 pcs



C-00180-175-3
Steering Rack - Aluminum - 1 pc



C-00180-973
Suspension Arm Mount - XB G2 - Front - Aluminum 4mm - 1 Set



C-00180-975
Suspension Arm Mount - XB G2 - Rear - Aluminum 4mm - 1 Set

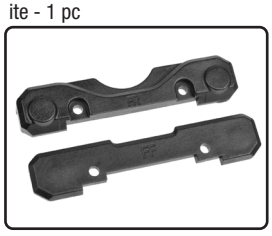

C-00180-977
Suspension Arm Mount Covers - XB G2 - Front - 1 Set

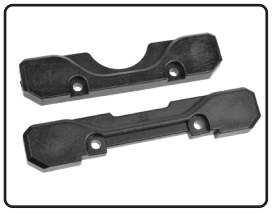

C-00180-979
Suspension Arm Mount Covers - XB G2 - Rear - 1 Set

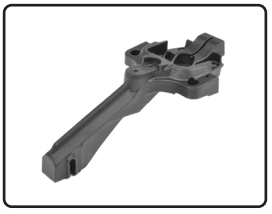

C-00180-989
Chassis Brace - EB - Front - Composite - 1 pc



C-00180-990
Chassis Brace - EB - Rear - Composite - 1 pc

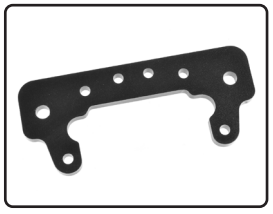

C-00180-991
Hinge Pin Plate - EB - Front - Aluminium 4mm - 1 pc

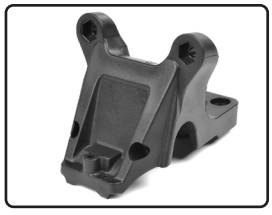

C-00180-992
Shock Tower - EB - Front - Composite - 1 pc

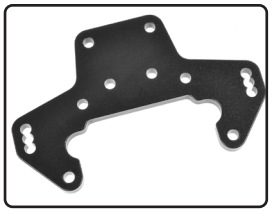

C-00180-993
Hinge Pin Plate - SB G2 - Rear - Aluminum 4mm - 1 Pc



C-00180-994
Shock Tower - Wing Mount - EB - Rear - Composite - 1 pc

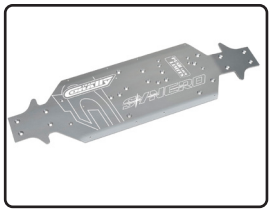

C-00180-996
Chassis - EB - Aluminium 3mm - Black - 1 pc

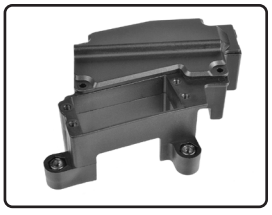

C-00180-997
Servo Mount - Receiver Box - M23 - Composite - 1 Set



C-00180-1003
Wing Washer - EB - Composite - 1 pc



C-00180-1006
Off-Road 1/8 Buggy Tires - Scorpion XTB - Rims - 1 pair



C-00180-1015
Servo Saver Post - EB - Steel - 2 pcs

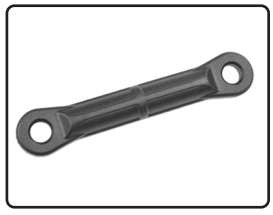

C-00180-1020
Servo Steering Link - Composite - 1 pc

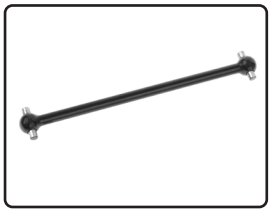

C-00180-1032
Drive Shaft - Centre - 97mm - Steel - 1 pc

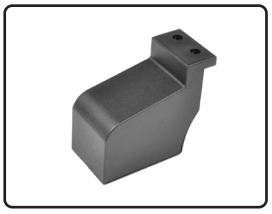

C-00180-1034
Pinion Cover for Centre Diff Plate - Composite - 1 pc

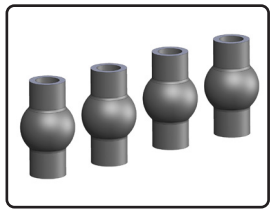

C-00180-1035
Ball 6.8mm - 12mm - Steel - 4 pcs



C-00180-1040-2
HDA Suspension Arm Insert - Outer - Aluminum - 2 pcs

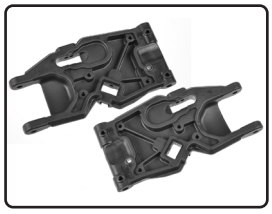

C-00180-1072
Rear Arm - Left & Right - Composite 1pc

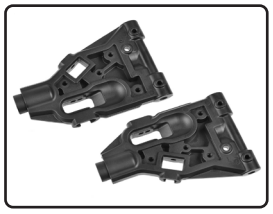

C-00180-1076
Front Lower Arm - Left & Right - Composite 1 set



C-00180-1080
Front Upper Arm - Left & Right - Composite 1 set



C-00180-1086
Stop Screw - Steel - 2 pcs



C-00180-1094
Shock absorber mounting screw - Steel - 4pcs

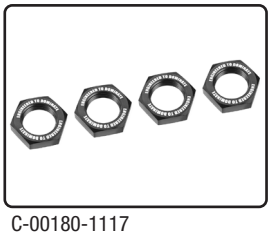

C-00180-1117
Wheel Nut - Serrated - Aluminum - Black - 4 pcs

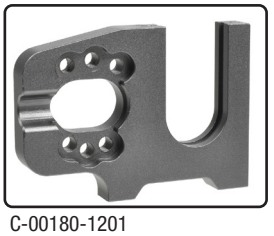

C-00180-1201
Motor Mount - Aluminium 1pc

SPARE PARTS - PIÈCES DE RECHANGE • ERSATZTEILE • ONDERDELEN

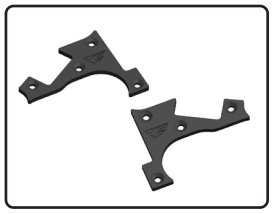

C-00180-1204
Suspension Arm Cover - Stiffener - Front - L/R - Composite

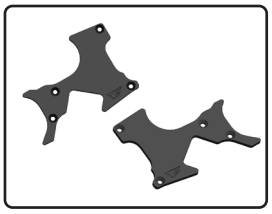

C-00180-1206
Suspension Arm Cover - Stiffener - Rear - L/R - Composite

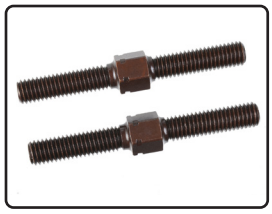

C-00180-1270
Turnbuckle - M5 - 45mm - Spring Steel - 2 pcs



C-00180-1311
Chassis Brace - Front-Rear - 2 pcs



C-00180-1358
Wing - Composite - 1 pc



C-00181-0195
Side Guards - EB - Left-Right - Composite - 1 Set



C-00181-0247
Shock Spacer - 4 pcs

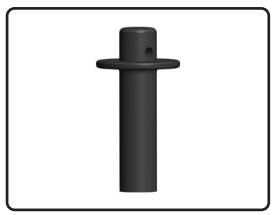

C-00181-0248
Body Post- Composite - 1 pc

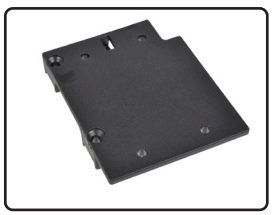

C-00181-0258
ESC support Plate - 1 pc

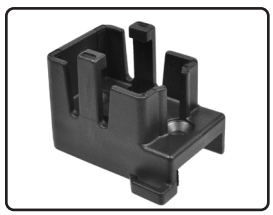

C-00181-0260
ESC Switch Holder - 1 pc

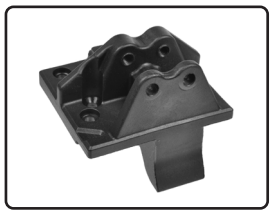

C-00181-0261
Centre Diff Plate - Composite - 1 pc



C-00181-0297
Hinge Pin - Outer - Steel - 2 pcs



C-00181-0308-P
SYNCRO-4 RS - Body - Painted - Pink - Buggy - 1 pc



C-00181-0308-G
SYNCRO-4 RS - Body - Painted - Green - Buggy - 1 pc



C-00181-0308-O
SYNCRO-4 RS - Body - Painted - Orange - Buggy - 1 pc

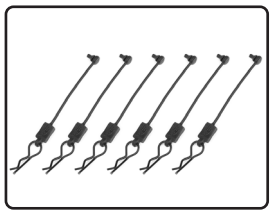

C-00180-614
Body Clip Retainer w/ Body clip - Black - 6 Pcs

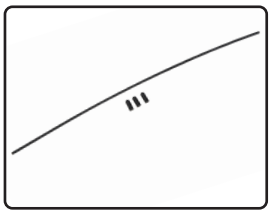

C-00181-0242
Antenna Tube and Cap Set

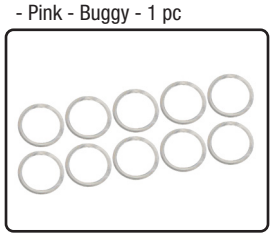

C-3301-13-16-01
Steel Metric Shim - 13x16x0,1mm - 10 pcs

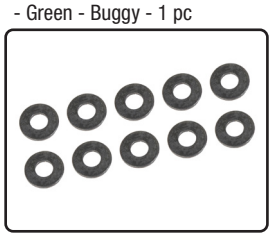

C-00230-0148
Washer 3x7x0,5mm - Steel - Black - 10pcs

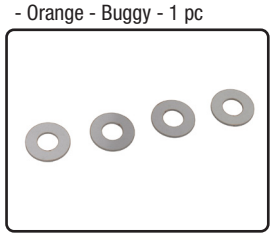

C-00181-0240
Steel Metric Shim - 4x9x0,5mm - 4 pcs

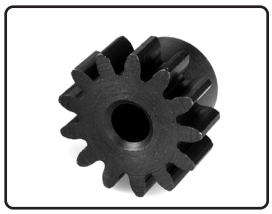

C-72815
M1.0 Pinion - Hardened Steel - 15 T - Shaft Diameter 5mm



C-3611-3-08-16-05
Ball Bearing - Abec 3 - 8x16x5 - 2 Pcs



C-3611-3-06-10-03
Ball Bearing - Abec 3 - 6x10x3 - 2 Pcs

ELECTRONICS - COMPOSANTS ÉLECTRONIQUES • ELEKTRONIKTEILE • ELEKTRONISCHE ONDERDELEN

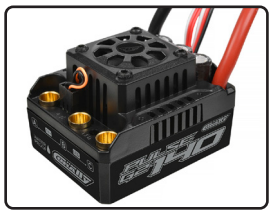

C-54017
Speed Controller PULSE G2 140 Sensorless Brushless - 3-4S



C-52017
Digital Servo - High Voltage - Metal Gear – 30 Kg Torque



C-54056
Brushless Motor - Kuron 825 - 4-Pole - 2050 KV - Sensorless



C-59066
CT2S 2-Channel 2.4GHZ Digital Radio Control System

FR & RE DIFFERENTIAL - SPARE PARTS

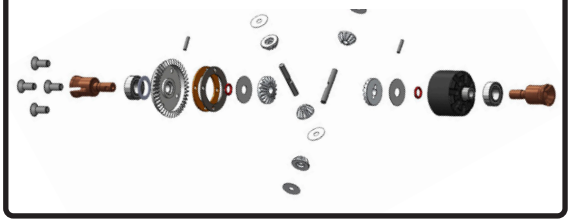



C-00180-688
Diff. Bevel Gear 43T - Molded Steel - 1 Pc

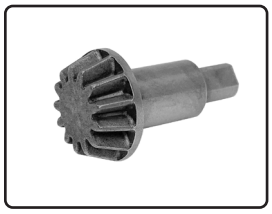

C-00180-689
Bevel Pinion 13T - Molded Steel - 1 Pc

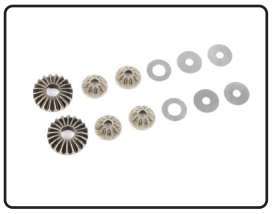

C-00180-179
Planetary Diff. Gears - Steel - 1 Set



C-00180-184
Gear Diff. Pin - Steel - 2 pcs

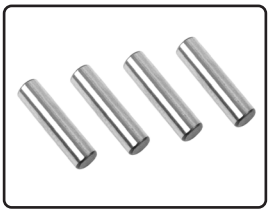

C-00180-205
Diff. Outdrive Pin - 2x11,8mm - Steel - 4 pcs

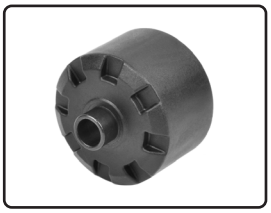

C-00180-098
Diff Case - FR-RE - Composite - 1 pc

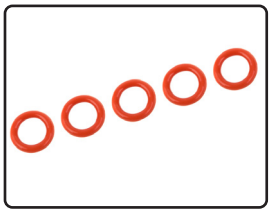

C-00180-182
O-Ring - Silicone - 5x8mm - 5 pcs

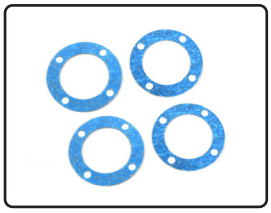

C-00180-183
Diff. Gasket - 30x0.5mm - Front and Rear Diff - 4 pcs

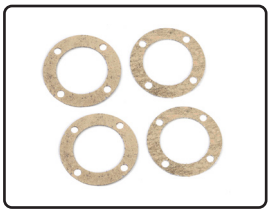

C-00180-183-2
Diff. Gasket - 30x0.3mm - Front and Rear Diff - 4 pcs



C-00180-153-X
PRO Diff. Outdrive Cup - Swiss Spring Steel - 2 pcs



C-00180-155-X
PRO Pinion Outdrive Cup - Swiss Spring Steel - 2 pcs

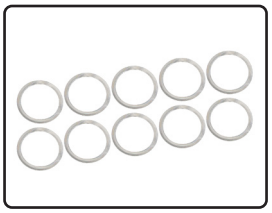

C-3301-13-16-01
Steel Metric Shim - 13x16x0,1mm - 10 pcs



C-3611-3-08-16-05
Ball Bearing - Abec 3 - 8x16x5 - 2 Pcs

CENTRE DIFFERENTIAL - SPARE PARTS



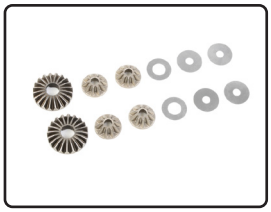

C-00180-179
Planetary Diff. Gears - Steel - 1 Set

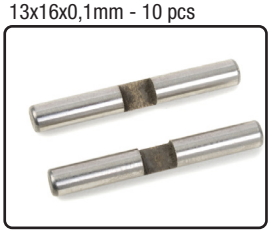

C-00180-184
Gear Diff. Pin - Steel - 2 pcs

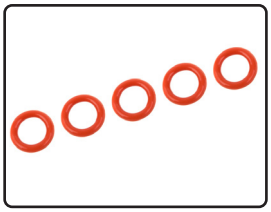

C-00180-182
O-Ring - Silicone - 5x8mm - 5 pcs

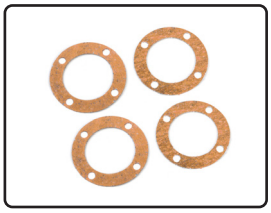

C-00180-183-1
Centre Diff. Gasket - 4 pcs

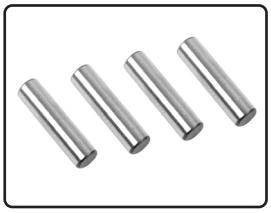

C-00180-205
Diff. Outdrive Pin - 2x11,8mm - Steel - 4 pcs



C-00180-154-X
PRO Centre Diff. Outdrive Cup - Swiss Spring Steel - 2 pcs

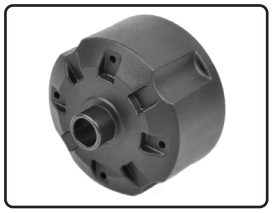

C-00180-090-2
Diff Case - Centre - Composite - 1 pc



C-00180-1022
Spur Gear 46T - MOD1.0 - Low Noise - Composite - 1 pc



C-3611-3-08-16-05
Ball Bearing - Abec 3 - 8x16x5 - 2 Pcs

SHOCK ABSORBER - SPARE PARTS

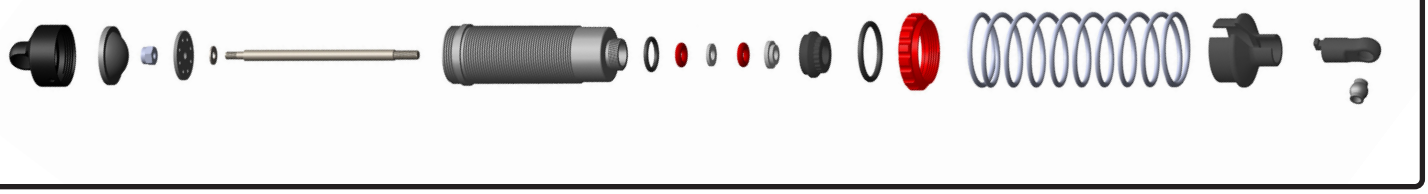

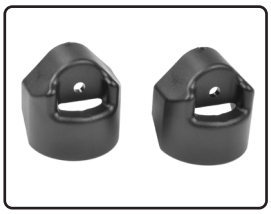

C-00180-1011
Shock Cap Cover - RTR - Composite - 2 pcs



C-00180-133
Shock Cap - Aluminium - Hard Anodised - 2 pcs

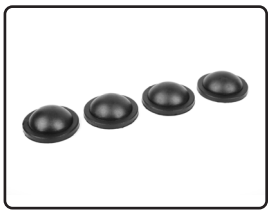

C-00180-189
Shock Bladders - Silicone - 4 pcs

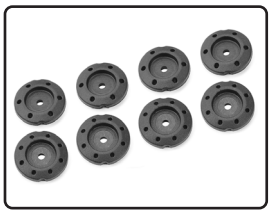

C-00180-768
Shock Piston Heavy Duty - 4mm thick - 8x1.2 + 6x1.4 - 1 Set

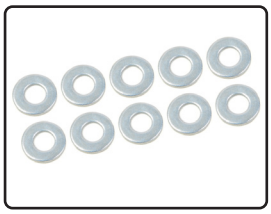

C-00180-190
Shock Washer - 2.5x6x0.5mm - Steel - 10 pcs

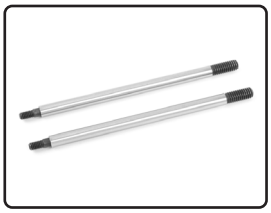

C-00180-164
Shock Shaft - 66mm - Rear - Steel - 2 pcs

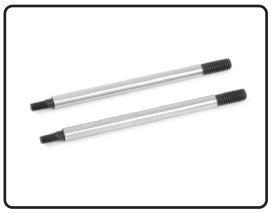

C-00180-165
Shock Shaft - 55mm - Front - Steel - 2 pcs



C-00180-134
Shock Body - Rear - Aluminium - Hard Anodised - 1 pc



C-00180-135
Shock Body - Front - Aluminium - Hard Anodised - 1 pc



C-00180-136-B
Shock Collar - Aluminium - Hard Anodised - 2 pcs

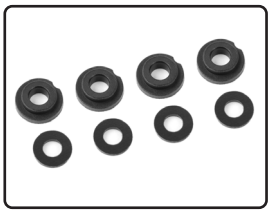

C-00180-078
Shock Body Insert - Washer - Composite - 1 set

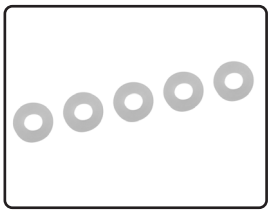

C-00180-188
O-Ring - Silicone - 4x8mm - 5 pcs



C-00180-138
Shock Cap - Lower - Composite - 2 pcs

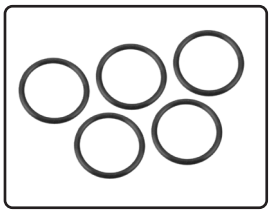

C-00180-191
O-Ring - Silicone - 9x12mm - 5 pcs

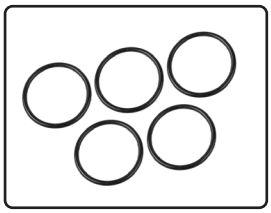

C-00180-192
O-Ring - Silicone - 16.2x19.8mm - 5 pcs

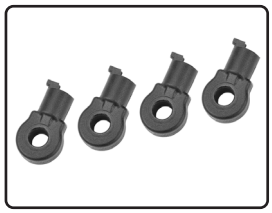

C-00180-770
HD Shock End - Short - Composite - 4 pcs

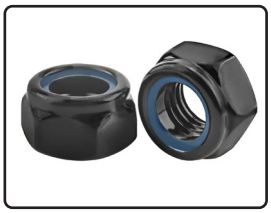

C-3101-25-6
Steel Nylstop Nut M2.5 - Black Coated - 10 pcs

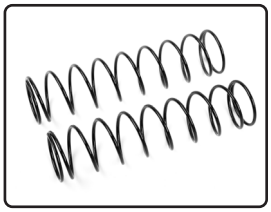

C-00180-290
Shock Spring - Medium - 84-86mm - 2 pcs

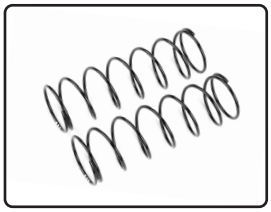

C-00180-627
Shock Spring - Medium -75-77mm - 2 pcs

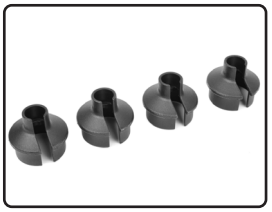

C-00180-029
Shock Spring Cup - Composite - 4 pcs

SPARE PARTS AVAILABLE ON
WWW.CORALLY.COM
TEAM CORALLY
WORLD CHAMPIONS
www.corally.com

OPTION PARTS - PIÈCES OPTIONNELLES - OPTIONSTEILE - OPTIES

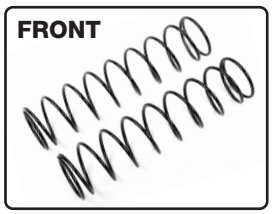

C-00180-626
Shock Spring - Soft - 1.4mm - 75-77mm - 2 pcs

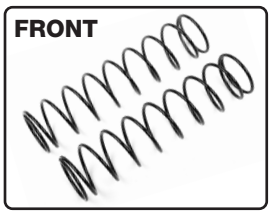

C-00180-628
Shock Spring - Hard - 1.8mm - 75-77mm - 2 pcs

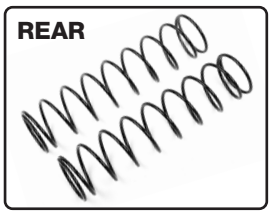

C-00180-289
Shock Spring - Soft - 1.4mm - 84-86mm - 2 pcs

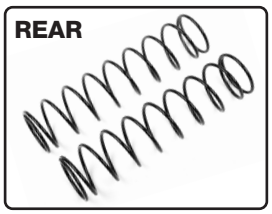

C-00180-291
Shock Spring - Hard - 1.8mm - 84-86mm - 2 pcs



C-00180-611
Off-Road 1/8 Buggy Tires - Xprit - Low Profile - Rims - 1 pair



C-00180-410
Xtreme Diff Case - 30mm - FR / RE - Made in Italy - 1 pc

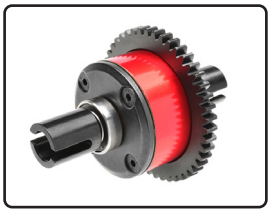

C-00180-685
Centre Diff Assembly - Alum. / Steel - 46T Main Gear

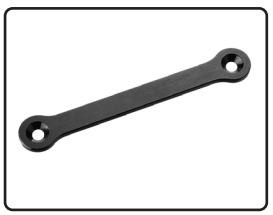

C-00180-831
Steering Rack - Dual Stiffener - Aluminium - 1 pc



C-00181-0314
Diff. Bevel Gear 43T - CNC Cut - Steel - 1 pc

C-00181-0313
Bevel Pinion 13T - CNC Cut Steel - 1 PC



C-00180-266
Servo Saver Steering Arm - Alu. 7075 T6 - Hard Anodised - 1 pc

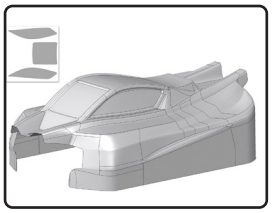

C-00181-0216
SYNCRO 4 - Body - Clear - Cut Buggy - 1 pc



C-00181-0309-P • Pink - 1 pc
C-00181-0309-G • Green - 1 pc
C-00181-0309-O • Orange - 1 pc

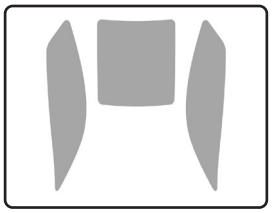

C-00181-0216-1
SYNCRO 4 - Body Window Paint Mask - 1 pc

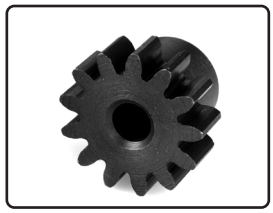

M1.0 Pinion - Hardened Steel - Shaft Diameter 5mm
C-72813 • 13 Teeth
C-72817 • 17 Teeth

For more tuning parts, visit the "Car Spares - Tuning / 1/8 Sport - RTR Series" section on www.corally.com.



https://corally.com/en/catalog/car-spares-tuning/18-sport-rtr-series

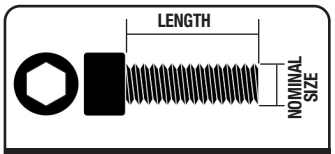

HEX SOCKET HEAD SCREWS
DIN 912 - STEEL - 10 pcs

REF	NOMINAL SIZE	LENGTH MM
C-3001-16-06	M1.6	6
C-3001-20-04	M2	4
C-3001-20-08	M2	8
C-3001-20-10	M2	10
C-3001-20-12	M2	12
C-3001-20-16	M2	16
C-3001-25-06	M2.5	6
C-3001-25-08	M2.5	8
C-3001-25-10	M2.5	10
C-3001-25-12	M2.5	12
C-3001-25-16	M2.5	16
C-3001-25-20	M2.5	20
C-3001-30-06	M3	6
C-3001-30-08	M3	8
C-3001-30-10	M3	10
C-3001-30-12	M3	12
C-3001-30-14	M3	14
C-3001-30-16	M3	16
C-3001-30-18	M3	18
C-3001-30-20	M3	20
C-3001-30-25	M3	25
C-3001-30-30	M3	30
C-3001-40-06	M4	6
C-3001-40-08	M4	8
C-3001-40-10	M4	10
C-3001-40-12	M4	12
C-3001-40-14	M4	14
C-3001-40-16	M4	16
C-3001-40-18	M4	18
C-3001-40-20	M4	20
C-3001-40-22	M4	22

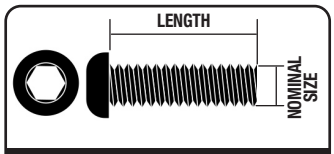

HEX BUTTON HEAD SCREWS
DIN 7380 - STEEL - 10 pcs

REF	NOMINAL SIZE	LENGTH MM
C-3003-25-04	M2.5	4
C-3003-25-06	M2.5	6
C-3003-25-08	M2.5	8
C-3003-25-18	M2.5	18
C-3003-30-06	M3	6
C-3003-30-08	M3	8
C-3003-30-10	M3	10
C-3003-30-12	M3	12
C-3003-30-14	M3	14
C-3003-30-16	M3	16
C-3003-30-18	M3	18
C-3003-30-20	M3	20
C-3003-30-23	M3	23
C-3003-30-25	M3	25
C-3003-30-28	M3	28
C-3003-30-35	M3	35
C-3003-30-40	M3	40
C-3003-40-08	M4	8
C-3003-40-10	M4	10
C-3003-40-12	M4	12
C-3003-40-14	M4	14
C-3003-40-16	M4	16
C-3003-40-18	M4	18
C-3003-40-20	M4	20
C-3003-40-25	M4	25

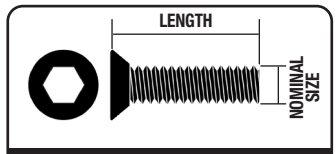

HEX FLAT HEAD SCREWS
DIN 7991 - STEEL - 10 pcs

REF	NOMINAL SIZE	LENGTH MM
C-3002-25-08	M2.5	8
C-3002-30-06	M3	6
C-3002-30-08	M3	8
C-3002-30-10	M3	10
C-3002-30-12	M3	12
C-3002-30-15	M3	15
C-3002-30-16	M3	16
C-3002-30-18	M3	18
C-3002-30-20	M3	20
C-3002-40-06	M4	6
C-3002-40-08	M4	8
C-3002-40-10	M4	10
C-3002-40-12	M4	12
C-3002-40-14	M4	14
C-3002-40-16	M4	16
C-3002-40-18	M4	18
C-3002-40-20	M4	20
C-3002-40-25	M4	25

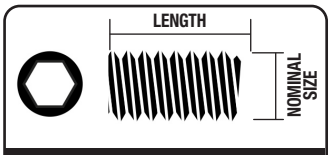

HEX SET SCREWS
DIN 916 - STEEL - 10 pcs

REF	NOMINAL SIZE	LENGTH MM
C-3004-25-03	M2.5	3
C-3004-30-03	M3	3
C-3004-30-05	M3	5
C-3004-30-08	M3	8
C-3004-30-10	M3	10
C-3004-30-12	M3	12
C-3004-30-20	M3	20
C-3004-40-04	M4	4
C-3004-40-06	M4	6
C-3004-40-08	M4	8
C-3004-40-10	M4	10
C-3004-40-12	M4	12
C-3004-50-05	M5	5

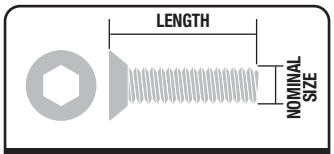

HEX FLAT HEAD SCREWS
TITANIUM - 10 pcs

REF	NOMINAL SIZE	LENGTH MM
C-3022-30-06	M3	6
C-3022-30-08	M3	8
C-3022-30-10	M3	10
C-3022-30-12	M3	12
C-3022-30-14	M3	14
C-3022-30-16	M3	16
C-3022-30-18	M3	18
C-3022-30-20	M3	20
C-3022-40-08	M4	8
C-3022-40-10	M4	10
C-3022-40-12	M4	12
C-3022-40-16	M4	16
C-3002-40-20	M4	20

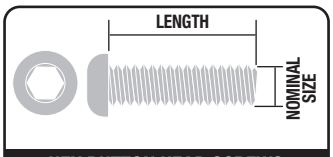

HEX BUTTON HEAD SCREWS
TITANIUM - 10 pcs

REF	NOMINAL SIZE	LENGTH MM
C-3023-30-06	M3	6
C-3023-30-08	M3	8
C-3023-30-10	M3	10
C-3023-30-12	M3	12
C-3023-30-16	M3	16
C-3023-30-20	M3	20
C-3023-30-25	M3	25
C-3023-40-06	M4	6
C-3023-40-08	M4	8
C-3023-40-10	M4	10
C-3023-40-12	M4	12
C-3023-40-16	M4	16
C-3023-40-20	M4	20
C-3023-40-25	M4	25



Download the full list of screws and bolts here!
Téléchargez la liste complète de visserie ici !
Laden Sie hier die komplette Liste der Schrauben herunter!
Download hier de volledige lijst met schroeven en bouten!

DECLARATION OF CONFORMITY

EU-Konformitätserklärung/ Déclaration de Conformité UE

(in accordance with ISO/IEC 17050-1) / (in Übereinstimmung mit ISO/IEC 17050-1) /
(Conformément à la norme ISO/IEC 17050-1)

Description : **SYNCRO-4 RS - BUGGY 4WD - 1/8 -RTR**
Item Number: **C-00296**

This declaration is issued under the sole responsibility of the manufacturer.
Die alleinige Verantwortung für die Ausstellung dieser Erklärung trägt der Hersteller.
La présente déclaration est établie sous la seule responsabilité du fabricant.

Product(s)/Produkt(e)/ Produit(s) : **SYNCRO-4 RS - BUGGY 4WD - 1/8 -RTR**

The object of declaration described above is in conformity with the relevant Union harmonisation legislation, specifically the requirements of the specifications listed below, following the provisions of the European RED Directive 2014/53/EU:
Der Gegenstand dieser Erklärung entspricht den Harmonisierungsrechtsvorschriften der Europäischen Union, insbesondere mit den unten aufgeführten Bestimmungen, und folgt der europäischen RED Richtlinie 2014/53/EU:
L'objet de la déclaration décrit ci-dessus est conforme à la législation pertinente en matière d'harmonisation de l'Union européenne, en particulier les exigences des spécifications énumérées ci-dessous, conformément aux dispositions de la directive européenne RED 2014/53/UE RED 2014/53/EU:

EN 301 489-1 V2.2.3:2019
EN 301 489-17 V3.2.4:2020
EN 62479:2010
EN 55032:2015
EN 61000-3-2:2014
EN 62368-1:2020+A11:2020
EN 301 489-3 V1.6.1:2013
EN 60950-1:2006+A11:2009+A1:2010+A12:2011+A2:2013
EN 55024:2010+A1:2015
EN 61000-3-3:2013
EN 300 328 V2.2.2:2019
EN 50581:2012

JSP GROUP INTL • Geelseweg, 80 • 2250 Olen • Belgium

Signed for and on behalf of/ Unterzeichnet für und im Namen von/ Signé pour et au nom de :

Place/Ort/Lieu and Date/Datum/Data : **Olen, Belgium, 30 October 2026**

Name/Nom: **Stefan Engelen**
Title/Titel/Titre : **CEO**

Signature :

FEDERAL COMMUNICATIONS COMMISSION

EQUIPMENT AUTHORIZATION is hereby issued to the named GRANTEE **JSP Group Intl BV / CORALLY**, and is VALID ONLY for the equipment identified hereon for use under the Commission's Rules and Regulations listed below.

FCC IDENTIFIER :	2ASZJ-C59065
Name of Grantee :	JSP Group Intl BV / CORALLY
Equipment Class :	Part 15 Low Power Communication Device Transmitter
Notes :	Corally CT-2-S
FCC Rules :	15C
Frequency Range (MHz) :	2410.0 - 2480.0

DISCOVER THE HIGH QUALITY TEAM CORALLY PRODUCTS

FACTORY PRO TOOL

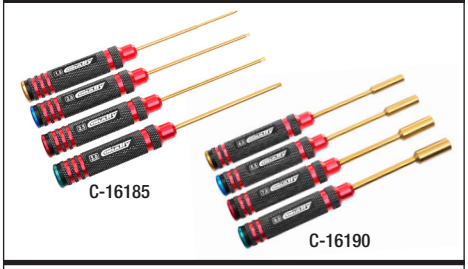

Pro Driver Set - Ti-Ni Coated

TEAM CORALLY - SHOCK PLIERS

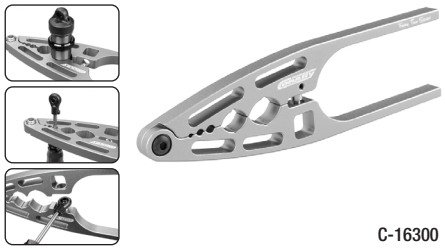

Team Corally - Shock Pliers

PINION & PINION CADDY M1.0



Discover our range of Precision CNC-Cut MOD-1.0 Pinions and Pinion Caddy.

TEAM CORALLY - GREASE



Lithium Grease - Blue Grease - Ball Diff Grease - Copper Grease

TEAM CORALLY - SILICONE OILS



Shock Oils: 60ml - 150ml - CST or WT - 100 >1000 CPS
Diff Oils: 60ml - 2000 >2 000 000 CPS

TEAM PIT GEAR



A range of quality equipment for the transport and protection of your equipment.

PLATINUM PRO TOOLS



Team Corally - Platinum Pro Tool

ELECTRIC SCREWDRIVER

C-16180 - Tool Hex Tips - 1.5 / 2.0 / 2.5 / 3.0 mm - 4 pcs



Torq Master - Cordless Screwdriver with Digital Torque Control - Li-Ion 3.6V - 1pc *(No tool Hex Tips included)*

SPORT RACING - LIPO



Team Corally - Sport Racing 50C - 6900Mah - 4S - 14,8V - XT-90 - **Hard Case**



Discover all these products and more on the website www.corally.com
Découvrez tous ces produits et bien plus encore sur le site web www.corally.com
Entdecken Sie all diese Produkte und mehr auf der Website www.corally.com
Ontdek al deze producten en meer op de website www.corally.com

This manual is an edition of Corally, a division of JSP GROUP INTL nv, Geelseweg 80, B-2250 Olen, Belgium. This manual is protected by a copyright and nothing from this edition may be reproduced or used without any prior written authorisation. Whilst every effort has been made to ensure the accuracy of the information in this manual, errors may creep in and Corally can accept no responsibility for failures, wrong specifications, accuracy of colours, losses or damages caused. Corally accepts no liability for claims or damages arising from the use of our products. Corally is not responsible for product, parts, specifications, Colour changes or availability of these products.



WWW.CORALLY.COM

Team Corally is a registered trademark licensed to
JSP Group Intl nv • Geelseweg 80 • B-2250 OLEN • Belgium
Tel: +32 14 25 92 83 • support@corally.com