
#73452 - *RPM* Rock Sliders for the Axial SCX10 - Not for use with models with less than a 12" (305mm) wheelbase

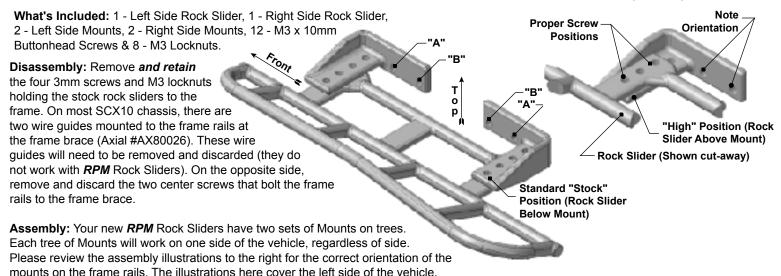

1) Using the stock 3mm screws removed earlier, slip them through holes labeled "A" in the illustration, through the frame rails and through the upper 4-link pivot balls and lock into place using the stock 3mm locknuts.

2) Using 2 of the included M3 x 10mm buttonhead screws, slip them through holes labeled "B" in the illustration, through the frame rails and into the frame brace (Axial #AX80026). Caution: Do not overtighten the screws.

3) Determine if you want to use the "Standard" position or the "High" position to mount your new **RPM** Rock Sliders, then determine how wide you'd like the Rock Sliders to sit. The "Standard" width is shown in the illustrations above.

4) Once the height and width selections have been chosen, slip one of the included M3 x 10mm buttonhead screws through the bottom part (depending upon "High" or "Standard", this could be either the Rock Slider or Mount) and into the top part at the outermost screw hole, then lock in place with one of the included M3 locknuts. Slip the second M3 x 10mm through the hole farthest away from the first (please reference "Proper Screw Positions" above) and lock in place with another M3 locknut. Repeat for the second mount, then repeat this process for the opposite side.