


1/10 LUXURY ELECTRIC OFF-ROAD BUGGY 4WD

# XRAY XB4

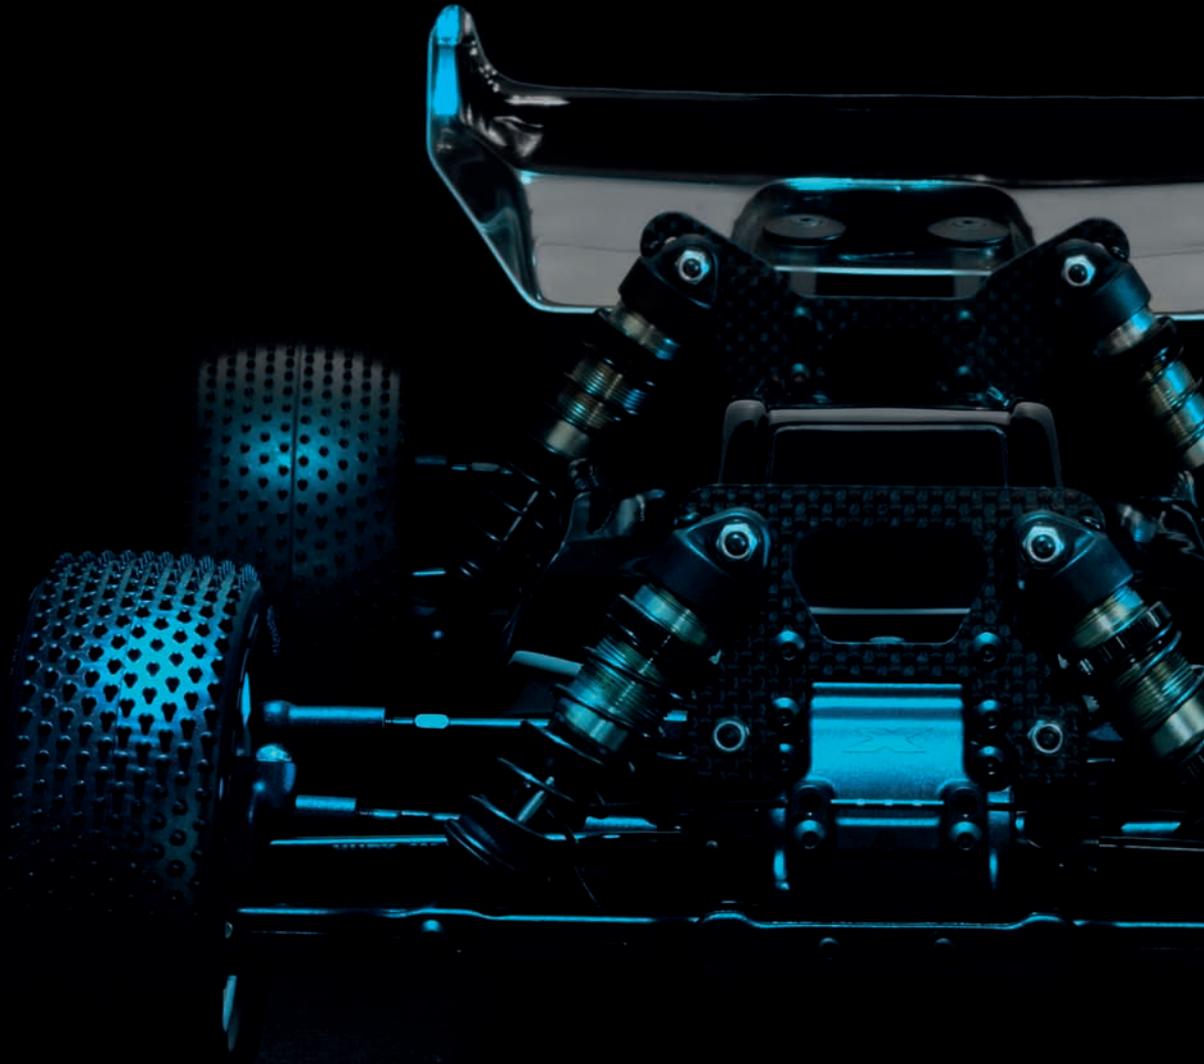

**INSTRUCTION MANUAL**  
FOR XB4'20 EDITION

## BEFORE YOU START

This is a high-competition, high-quality RC car intended for persons aged 16 years and older with previous experience building and operating RC model racing cars. This is not a toy; it is a precision racing model. This model racing car is not intended for use by beginners, inexperienced customers, or by children without direct supervision of a responsible, knowledgeable adult. If you do not fulfill these requirements, please return the kit in unused and unassembled form back to the shop where you have purchased it.

Before building and operating your XRAY, **YOU MUST** read through all of the operating instructions and instruction manual and fully understand them to get the maximum enjoyment and prevent unnecessary damage.

## CUSTOMER SUPPORT

We have made every effort to make these instructions as easy to understand as possible. However, if you have any difficulties, problems, or questions, please do not hesitate to contact the XRAY support team at [info@teamxray.com](mailto:info@teamxray.com). Also, please visit our Web site at [www.teamxray.com](http://www.teamxray.com) to find the latest updates, set-up information, option parts, and many other goodies. We pride ourselves on taking excellent care of our customers.

You can join thousands of XRAY fans and enthusiasts in our online community at: [www.teamxray.com](http://www.teamxray.com)

Read carefully and fully understand the instructions before beginning assembly.

Make sure you review this entire manual, download and use set-up book from the web, and examine all details carefully. If for some reason you decide this is not what you wanted or expected, **do not continue any further**. Your hobby dealer can not accept your kit for return or exchange after it has been partially or fully assembled.

Contents of the box may differ from pictures. In line with our policy of continuous product development, the exact specifications of the kit may vary without prior notice.

**XRAY Europe**  
K Vystavisku 6992  
91101 Trenčín  
Slovakia, EUROPE  
Phone: 421-32-7401100  
Fax: 421-32-7401109  
E-mail: [info@teamxray.com](mailto:info@teamxray.com)

**XRAY USA**  
RC America, 2030 Century Center Blvd #15  
Irving, TX 75062  
USA  
Phone: (214) 744-2400  
Fax: (214) 744-2401  
E-mail: [xray@rcamerica.com](mailto:xray@rcamerica.com)

**FAILURE TO FOLLOW THESE INSTRUCTIONS WILL BE CONSIDERED AS ABUSE AND/OR NEGLECT.**

## SAFETY PRECAUTIONS

Contains:

LEAD (CAS 7439-92-1) ANTIMONY (CAS 7440-36-0)

WARNING: This product contains a chemical known to the state of California to cause cancer and birth defects or other reproductive harm.

CAUTION: CANCER HAZARD

Contains lead, a listed carcinogen. Lead is harmful if ingested. Wash thoroughly after using. DO NOT use product while eating, drinking or using tobacco products. May cause chronic effects to gastrointestinal tract, CNS, kidneys, and blood. MAY CAUSE BIRTH DEFECTS.

When building, using and/or operating this model always wear protective glasses and gloves.

Take appropriate safety precautions prior to operating this model. You are responsible for this model's assembly and safe operation! Please read the instruction manual before building and operating this model and follow all safety precautions. Always keep the instruction manual at hand for quick

reference, even after completing the assembly. Use only genuine and original authentic XRAY parts for maximum performance. Using any third party parts on this model will void guaranty immediately.

Improper operation may cause personal and/or property damage. XRAY and its distributors have no control over damage resulting from shipping, improper construction, or improper usage. XRAY assumes and accepts no responsibility for personal and/or property damages resulting from the use of improper building materials, equipment and operations. By purchasing any item produced by XRAY, the buyer expressly warrants that he/she is in compliance with all applicable federal, state and local laws and regulation regarding the purchase, ownership and use of the item. The buyer expressly agrees to indemnify and hold harmless XRAY for all claims resulting directly or indirectly from the purchase, ownership or use of the product. By the act of assembling or operating this product, the user accepts all resulting liability. If the buyer is not prepared to accept this liability, then he/she should return this kit in new, unassembled, and unused condition to the place of purchase.

## IMPORTANT NOTES - GENERAL

- This product is not suitable for children under 16 years of age without the direct supervision of a responsible and knowledgeable adult.
- Carefully read all manufacturers warnings and cautions for any parts used in the construction and use of your model.
- Assemble this kit only in places away from the reach of very small children.
- First-time builders and users should seek advice from people who have building experience in order to assemble the model correctly and to allow the model to reach its performance potential.
- Exercise care when using tools and sharp instruments.
- Take care when building, as some parts may have sharp edges.
- Keep small parts out of reach of small children. Children must not be allowed to put any parts in their mouth, or pull vinyl bag over their head.
- Read and follow instructions supplied with paints and/or cement, if used (not included in kit).
- Immediately after using your model, do NOT touch equipment on the model such as the motor and speed controller, because they generate high temperatures. You may seriously burn yourself seriously touching them.
- Follow the operating instructions for the radio equipment at all times.
- Do not put fingers or any objects inside rotating and moving parts, as this may cause damage or serious injury as your finger, hair, clothes, etc. may get caught.
- Be sure that your operating frequency is clear before turning on or running your model, and never share the same frequency with somebody else at the same time. Ensure that others are aware of the operating frequency you are using and when you are using it.
- Use a transmitter designed for ground use with RC cars. Make sure that no one else is using the same frequency as yours in your operating area. Using the same frequency at the same time, whether it is driving, flying or sailing, can cause loss of control of the RC model, resulting in a serious accident.
- Always turn on your transmitter before you turn on the receiver in the car. Always turn off the receiver before turning your transmitter off.
- Keep the wheels of the model off the ground when checking the operation of the radio equipment.
- Disconnect the battery pack before storing your model.
- When learning to operate your model, go to an area that has no obstacles that can damage your model if your model suffers a collision.
- Remove any sand, mud, dirt, grass or water before putting your model away.
- If the model behaves strangely, immediately stop the model, check and clear the problem.
- To prevent any serious personal injury and/or damage to property, be responsible when operating all remote controlled models.
- The model car is not intended for use on public places and roads or areas where its operation can conflict with or disrupt pedestrian or vehicular traffic.
- Because the model car is controlled by radio, it is subject to radio interference from many sources that are beyond your control. Since radio interference can cause momentary loss of control, always allow a safety margin in all directions around the model in order to prevent collisions.
- Do not use your model:
  - Near real cars, animals, or people that are unaware that an RC car is being driven.
  - In places where children and people gather
  - In residential districts and parks
  - In limited indoor spaces
  - In wet conditions
  - In the street
  - In areas where loud noises can disturb others, such as hospitals and residential areas.
  - At night or anytime your line of sight to the model may be obstructed or impaired in any way.

To prevent any serious personal injury and/or damage to property, please be responsible when operating all remote controlled models.

## **IMPORTANT NOTES – ELECTRICAL**

- Insulate any exposed electrical wiring (using heat shrink tubing or electrical tape) to prevent dangerous short circuits. Take maximum care in wiring, connecting and insulating cables. Make sure cables are always connected securely. Check connectors for if they become loose. And if so, reconnect them securely. Never use RC models with damaged wires. A damaged wire is extremely dangerous, and can cause short-circuits resulting in fire. Please have wires repaired at your local hobby shop.
- Low battery power will result in loss of control. Loss of control can occur due to a weak battery in either the transmitter or the receiver. Weak running battery may also result in an out of control car if your car's receiver power is supplied by the running battery. Stop operation immediately if the car starts to slow down.
- When not using RC model, always disconnect and remove battery.
- Do not disassemble battery or cut battery cables. If the running battery short-circuits, approximately 300W of electricity can be discharged, leading to fire or burns. Never disassemble battery or cut battery cables.
- Use a recommended charger for the receiver and transmitter batteries and follow the instructions correctly. Over-charging, incorrect charging,

- or using inferior chargers can cause the batteries to become dangerously hot. Recharge battery when necessary. Continual recharging may damage battery and, in the worst case, could build up heat leading to fire. If battery becomes extremely hot during recharging, please ask your local hobby shop for check and/or repair and/or replacement.
- Regularly check the charger for potential hazards such as damage to the cable, plug, casing or other defects. Ensure that any damage is rectified before using the charger again. Modifying the charger may cause short-circuit or overcharging leading to a serious accident. Therefore do not modify the charger.
- Always unplug charger when recharging is finished.
- Do not recharge battery while battery is still warm. After use, battery retains heat. Wait until it cools down before charging.
- Do not allow any metal part to short circuit the receiver batteries or other electrical/electronic device on the model.
- Immediately stop running if your RC model gets wet as may cause short circuit.
- Please dispose of batteries responsibly. Never put batteries into fire.

## **R/C & BUILDING TIPS**

- Make sure all fasteners are properly tightened. Check them periodically.
- Make sure that chassis screws do not protrude from the chassis.
- For the best performance, it is very important that great care is taken to ensure the free movement of all parts.
- Clean all ball-bearings so they move very easily and freely.
- Tap or pre-thread the plastic parts when threading screws.
- Self-tapping screws cut threads into the parts when being tightened. Do not use excessive force when tightening the self-tapping screws because you may strip out the thread in the plastic. We recommended you stop tightening a screw when you feel some resistance.
- Ask your local hobby shop for any advice.

Please support your local hobby shop. We at XRAY Model Racing Cars support all local hobby dealers. Therefore we ask you, if at all possible, to purchase XRAY products at your hobby dealer and give them your support like we do. If you have difficulty finding XRAY products, please check out [www.teamxray.com](http://www.teamxray.com) to get advice, or contact us via email at [info@teamxray.com](mailto:info@teamxray.com), or contact the XRAY distributor in your country.

## **WARRANTY**

XRAY guarantees this model kit to be free from defects in both material and workmanship within 30 days of purchase. The total monetary value under warranty will in no case exceed the cost of the original kit purchased. This warranty does not cover any components damaged by use or modification or as a result of wear. Part or parts missing from this kit must be reported within 30 days of purchase. No part or parts will be sent under warranty without proof of purchase. Should you find a defective or missing part, contact the local distributor. Service and customer support will be provided through local hobby store where you have purchased the kit, therefore make sure to purchase any XRAY products at your local hobby store. This model racing car is considered to be a high-performance racing vehicle. As such this vehicle will be used in an extreme range of conditions and situations, all which may cause premature wear or failure of any component. XRAY has no control over usage of vehicles once they leave the dealer, therefore XRAY can only offer warranty against all manufacturer's defects in materials, workmanship, and assembly at point of sale and before use. No warranties are expressed or implied that cover damage caused by what is considered normal use, or cover or imply how long any model cars' components or electronic components will last before requiring replacement.

Due to the high performance level of this model car you will need to periodically maintain and replace consumable components. Any and all warranty coverage will not cover replacement of any part or component damaged by neglect, abuse, or improper or unreasonable use. This includes

but is not limited to damage from crashing, chemical and/or water damage, excessive moisture, improper or no maintenance, or user modifications which compromise the integrity of components. Warranty will not cover components that are considered consumable on RC vehicles. XRAY does not pay nor refund shipping on any component sent to XRAY or its distributors for warranty. XRAY reserves the right to make the final determination of the warranty status of any component or part.

### **Limitations of Liability**

XRAY makes no other warranties expressed or implied. XRAY shall not be liable for any loss, injury or damages, whether direct, indirect, special, incidental, or consequential, arising from the use, misuse, or abuse of this product and/or any product or accessory required to operate this product. In no case shall XRAY's liability exceed the monetary value of this product.

**Take adequate safety precautions prior to operating this model. You are responsible for this model's assembly and safe operation.**

**Disregard of the any of the above cautions may lead to accidents, personal injury, or property damage. XRAY MODEL RACING CARS assumes no responsibility for any injury, damage, or misuse of this product during assembly or operation, nor any additions that may arise from the use of this product.**

**All rights reserved.**

## **QUALITY CERTIFICATE**

XRAY MODEL RACING CARS uses only the highest quality materials, the best compounds for molded parts and the most sophisticated manufacturing processes of TQM (Total Quality Management). We guarantee that all parts of a newly-purchased kit are manufactured with the highest regard to quality. However, due to the many factors inherent in model racecar competition, we

cannot guarantee any parts once you start racing the car. Products which have been worn out, abused, neglected or improperly operated will not be covered under warranty.

We wish you enjoyment of this high-quality and high-performance RC car and wish you best success on the track!

**In line with our policy of continuous product development, the exact specifications of the kit may vary. In the unlikely event of any problems with your new kit, you should contact the model shop where you purchased it, quoting the part number.**

**We do reserve all rights to change any specification without prior notice. All rights reserved.**

## SYMBOLS USED

<p>Part bags used</p>	<p>Assemble in the specified order</p>	<p>Assemble left and right sides the same way</p>	<p>Pay attention here</p>	<p>Assemble as many times as specified (here twice)</p>	<p>Apply threadlock</p>	<p>Apply CA glue</p>	<p>Apply oil</p>
<p>Scale</p>	<p>Apply grease</p>	<p>Optional parts</p>	<p>Ensure smooth non-binding movement</p>	<p>Tighten screw gently</p>	<p>Completed assembly</p>	<p>Detail</p>	<p>Apply cleaner</p>

## TOOLS REQUIRED

<p>Scissors (HUDY #188990)</p>	<p>Special Tool for turnbuckles, nuts (HUDY #181090)</p>	<p>Turnbuckle Wrench 3mm (HUDY #181030)</p>	<p>Pocket Hobby Knife (HUDY #188981)</p>	<p>Side Cutters (HUDY #189010)</p>	<p>Combination Pliers (HUDY #189020)</p>	<p>RC Shock-Plier Uni Tool (HUDY #183011)</p>
<p>Tweezer</p>	<p>HUDY TOOLS:</p> <p>Allen 1.5mm </p> <p>Allen 2.0mm </p> <p>Socket 5.5mm </p> <p>Socket 7.0mm </p>			<p>Arm Reamer 3.0mm </p> <p>Reamer (HUDY #107600) or (HUDY #107601) </p>		

## ITEMS INCLUDED

<p>HUDY Premium Silicone Oils Oil 500cSt (#106350)</p>	<p>HUDY Premium Silicone Oils Oil 700cSt (#106370)</p>	<p>HUDY Premium Silicone Oils Oil 10.000cSt (#106510)</p>	<p>Graphite Grease (HUDY #106210)</p>
--	--	---	---------------------------------------

## EQUIPMENT REQUIRED

<p>Transmitter</p>	<p>Receiver</p>	<p>Steering Servo</p>	<p>Electric Motor &amp; Pinion Gear with Set-screw</p>	<p>Bearing Oil (HUDY #106230)</p>	<p>CA glue</p>
<p>Speed Controller</p>	<p>LiPo Battery</p>	<p>Lexan™ Paint</p>	<p>Battery Charger</p>	<p>Double-sided Tape (HUDY #107875)</p>	<p>Tires &amp; Inserts</p>

# NOT INCLUDED

## Set-up Book

To ensure that you always have access to the most up-to-date version of the HUDY Set-up Book, you can download it from the HUDY website at [www.hudy.net]. By offering this online version instead of including a hardcopy printed version in kits, you will always be assured of having the most current updated version.



XRAY offers wide range of optional tuning parts which are listed in tables like these. Please refer to the exploded view of each main section to verify which part is included in the kit while all other parts are available only as an optional part and must be purchased separately.



### SAMPLE OF OPTIONAL PARTS

OPTION	#36XXXX	TYPE	OPTION 1
	#36XXXX	TYPE	OPTION 2
	#36XXXX	TYPE	INCLUDED
	#36XXXX	TYPE	OPTION 3

# COLOR INDICATIONS

At the beginning of each section is an exploded view of the parts to be assembled. There is also a list of all the parts and part numbers that are related to the assembly of that section.

The part descriptions are color-coded to make it easier for you to identify the source of a part. Here are what the different colors mean:

365884

**STYLE A** - indicates parts that are included in the bag marked for the section.

361100

**STYLE B** - indicates parts that are included in the box.

364900

**STYLE C** - indicates parts that are already assembled from previous steps.

# XB4 TECH TIPS

## TIP DRIVE SHAFT PIN SERVICING

To enjoy the longest possible lifespan of the drive shafts and diff outdrives, it is extremely important to properly service the drive shaft pins. Inspect the pins after every 3 hours of runtime. If the pins show any wear, replace them with new pins.



Do not use drive shafts when the pins are worn.

Press out the worn pins.

Press in new pins and regularly inspect for wear.



For quick & easy drive pin replacements use #106000 HUDY Drive Pin Replacement Tool together with #106036 Ejector Pivot Pin & Alternating Pivot 2.5mm.



To replace the worn pins use only premium HUDY drive pins (#106051 3.0mm dia x 10mm length) (#106053 2.5mm dia x 10mm length)

## TIP GRAPHITE PARTS PREPARATION


Follow this Tech Tip to prepare the graphite parts. Sand the edges with sandpaper, and then seal the edges with CA glue to reinforce them and help prevent delamination.

### Prepare all XB4 Graphite Parts:


- Front shock tower
- Rear shock tower

### Fine sandpaper

Use fine sandpaper to sand smooth the edges of all graphite parts.

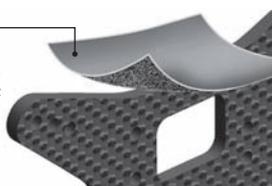


Apply CA glue to all edges of the graphite parts.

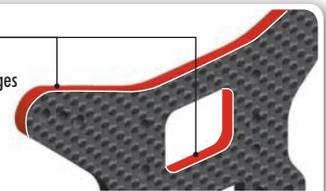

# 1. FRONT & REAR DIFFERENTIAL

**#364941**  
**OPTION**  
 STEEL DIFFERENTIAL BEVEL GEAR  
 FOR LARGE VOLUME DIFF 41T

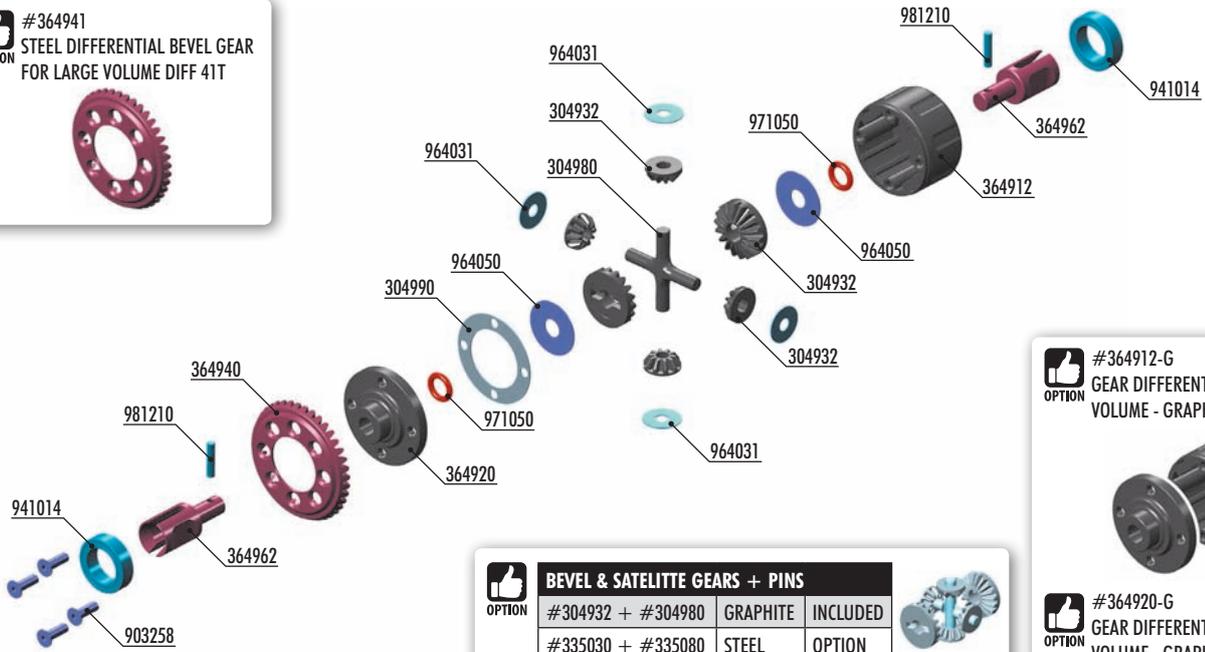

BEVEL & SATELLITE GEARS + PINS		
#304932 + #304980	GRAPHITE	INCLUDED
#335030 + #335080	STEEL	OPTION

**#364912-G**  
**OPTION**  
 GEAR DIFFERENTIAL CASE - LARGE  
 VOLUME - GRAPHITE



**#364920-G**  
**OPTION**  
 GEAR DIFFERENTIAL COVER - LARGE  
 VOLUME - GRAPHITE

**BAG**  
**01**

304932 GRAPHITE GEAR DIFF BEVEL & SATELLITE GEARS (2+4)  
 304980 COMPOSITE GEAR DIFF CROSS PIN  
 304990 DIFF GASKET (4)  
 364903 GEAR DIFFERENTIAL - LARGE VOLUME - SET  
 364912 COMPOSITE GEAR DIFFERENTIAL CASE - LARGE VOLUME  
 364920 COMPOSITE GEAR DIFFERENTIAL COVER - LARGE VOLUME  
 364940 STEEL DIFFERENTIAL BEVEL GEAR FOR LARGE VOLUME DIFF 40T

364962 GEAR DIFF OUTDRIVE ADAPTER FOR LARGE VOLUME DIFF (2)  
 903258 HEX SCREW SFH M2.5x8 (10)  
 941014 BALL-BEARING 10x15x4 RUBBER SEALED - GREASE (8)  
 964031 WASHER S 3.5x10x0.2 (10)  
 964050 WASHER S 5x15x0.3 (10)  
 971050 SILICONE O-RING 5x1.5 (10)  
 981210 PIN 2x10 (10)



964050  
 S 5x15x0.3




971050  
 O 5x1.5



981210  
 P 2x10

**2x**

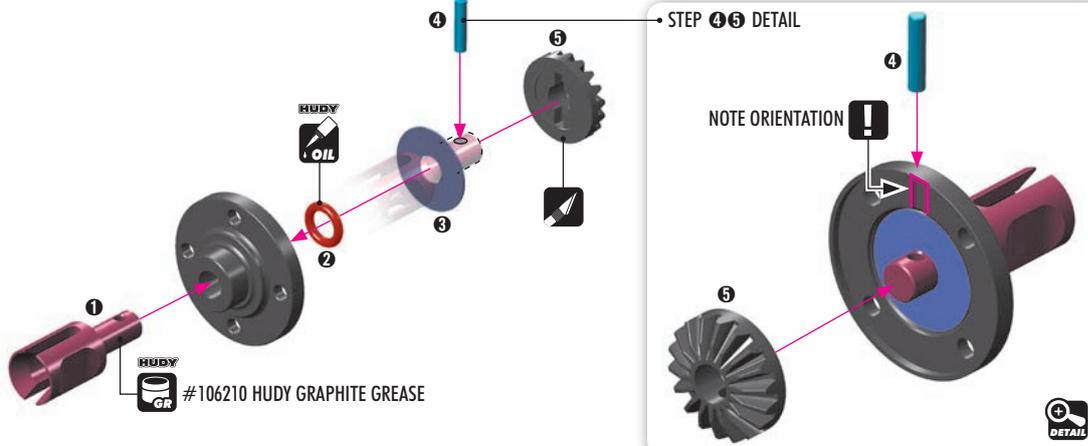

964050  
 S 5x15x0.3




971050  
 O 5x1.5



981210  
 P 2x10


**2x**

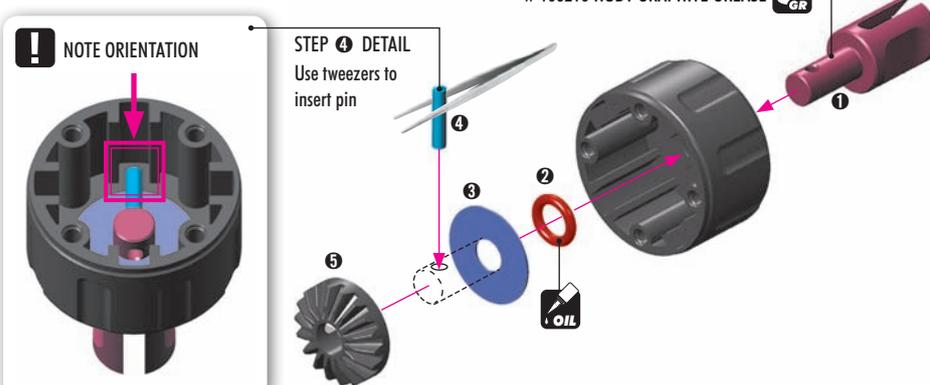

# 1. FRONT & REAR DIFFERENTIAL



964031  
S 3.5x10x0.2

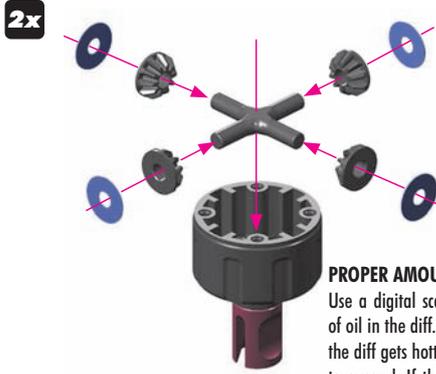

2x

## Front diff

Silicone oil 10.000cSt  
Fill just above the cross-pins.



## Rear diff

Silicone oil 10.000cSt  
Fill just above the cross-pins.



Fill differential up to the top of the diff cross-pins. DO NOT fill the diff to the top of the housing.

### PROPER AMOUNT OF OIL IN THE DIFFS

Use a digital scale to measure the exact amount of oil in the diff. Remember that during operation the diff gets hotter and the heat may allow the oil to expand. If there is too much oil inside it may interfere with the diff operation and damage the internal gears.

TO ENSURE YOU HAVE THE SAME AMOUNT OF OIL FROM REBUILD TO REBUILD, DO THE FOLLOWING:



1 Put the diff (without oil) on the scale and check the weight (approximately 11.47g)



2 Slowly pour oil into the diff and watch the weight. Add 1.83g of oil into the diff. The approximate weight of the diff including oil is 13.30g.

### TIPS FOR DIFFERENTIALS

**TIP**

#### FRONT DIFFERENTIAL

LOW TRACTION 7.000cSt (HUDY #106470)  
MEDIUM-HIGH TRACTION 10.000cSt (HUDY #106510)  
SUPER-HIGH TRACTION 15.000cSt (HUDY #106515)

**NOTE:**

Softer oil increases steering, harder oil increases stability.

#### REAR DIFFERENTIAL

LOW TRACTION 7.000cSt (HUDY #106470)  
MEDIUM-HIGH TRACTION 10.000cSt (HUDY #106510)  
SUPER-HIGH TRACTION 15.000cSt (HUDY #106515)

**NOTE:**

Softer oil increases rear traction, harder oil increases on-power steering.


**TIP**

**SET-UP BOOK**

**DIFFERENTIAL OIL**




903258  
SFH M2.5x8

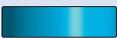

941014  
BB 10x15x4

2x

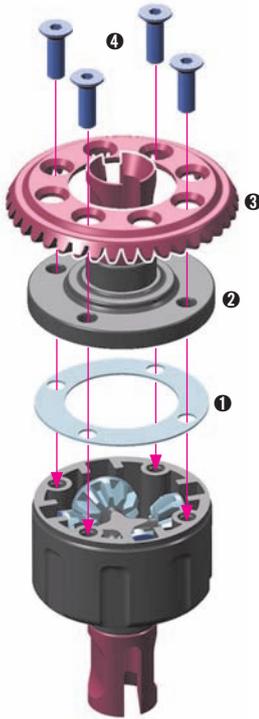

2x

Tighten the screws equally but do NOT tighten them completely.




Finish tightening in this order.


2x

Use HUDY Ball-Bearing Grease

HUDY #106220 - STANDARD  
GR #106221 - BLUE  
GR #106222 - RED

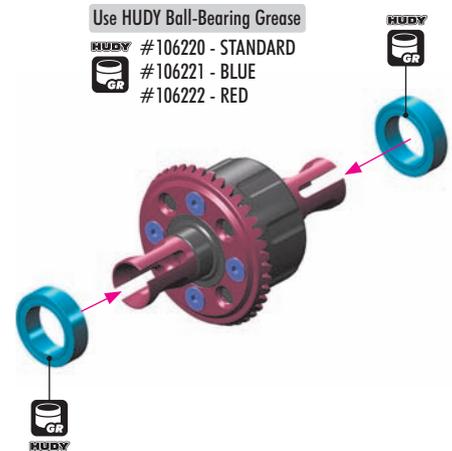

# 2. REAR CENTRAL TRANSMISSION

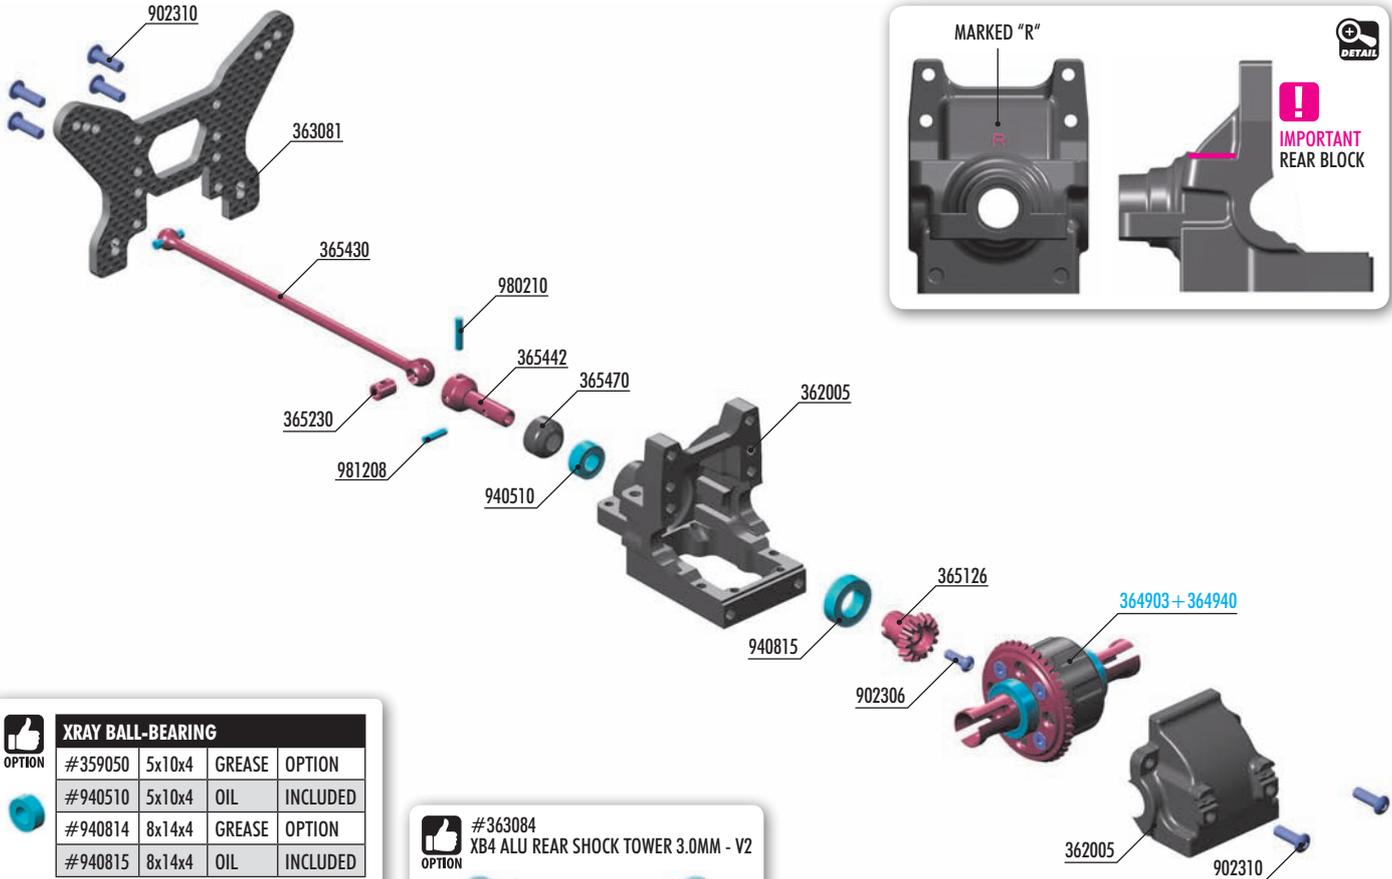

XRAY BALL-BEARING			
OPTION	#359050	5x10x4	GREASE
	#940510	5x10x4	OIL
	#940814	8x14x4	GREASE
	#940815	8x14x4	OIL

DRIVE SHAFT COLLAR		
OPTION	#365470	COMPOSITE
	#365471-K	ALU - BLACK
	#365471-O	ALU - ORANGE



362005	DIFF BULKHEAD BLOCK SET REAR - NARROW	902306	HEX SCREW SH M3x6 (10)
363081	GRAPHITE SHOCK TOWER REAR 3.0MM - V2	902310	HEX SCREW SH M3x10 (10)
365126	STEEL BEVEL DRIVE GEAR - CNC-MACHINED - 16T	940510	BALL-BEARING 5x10x4 RUBBER SEALED - OIL (2)
365230	DRIVE SHAFT COUPLING - HUDY SPRING STEEL™	940815	BALL-BEARING 8x14x4 RUBBER SEALED - OIL (2)
365430	CENTRAL DRIVE SHAFT 108MM WITH 2.5MM PIN - HUDY SPRING STEEL™	980210	PIN 2x10 (10)
365442	CENTRAL SHAFT UNIVERSAL JOINT	981208	PIN 2x8 (10)
365470	COMPOSITE DRIVE SHAFT SAFETY COLLAR - V2 (3)	364903	GEAR DIFFERENTIAL - LARGE VOLUME - SET
		364940	STEEL DIFFERENTIAL BEVEL GEAR FOR LARGE VOLUME DIFF 40T



**! DRIVE SHAFT COVER CAPS**  
Lubricate the drive shaft connecting joint properly so the drive shaft turns freely. In the event that not enough grease is used, the connecting pin may lock and may even, in extreme situations, push through the drive shaft cover cap.

DRIVE SHAFT COLLAR		
OPTION	#365470	COMPOSITE
	#365471-K	ALU - BLACK
	#365471-O	ALU - ORANGE

#106210 HUDY GRAPHITE GREASE  
#106213 HUDY JOINT GREASE - OPTION

## 2. REAR CENTRAL TRANSMISSION

902306  
SH M3x6

940510  
BB 5x10x4

940815  
BB 8x14x4

981208  
P 2x8

Bearing with BLUE rubber covers

Bearing Oil (HUDY #106230)

5x10x4mm

8x14x4mm

GRAPHITE GREASE (HUDY #106210)

THREAD LOCK

NOTE ORIENTATION

**IMPORTANT** REAR BLOCK

XRAY BALL-BEARING			
OPTION #359050	5x10x4	GREASE	OPTION
#940510	5x10x4	OIL	INCLUDED
#940814	8x14x4	GREASE	OPTION
#940815	8x14x4	OIL	INCLUDED

902310  
SH M3x10

FRONT

REAR

REAR DIFF 10.000 c/s

**IMPORTANT** Cut the edge on both sides

902310  
SH M3x10

### ALTERNATIVE 1

Rear shock tower mounted from the **FRONT**

**INITIAL SETTING**

Follow the TECH TIP on page 5 to prepare graphite parts

**TIP**

REAR

FRONT

#363084  
XB4 ALU REAR SHOCK TOWER 3.0MM - V2

OPTION



### ALTERNATIVE 2

Rear shock tower mounted from the **REAR**

REAR

FRONT

# 2. FRONT CENTRAL TRANSMISSION

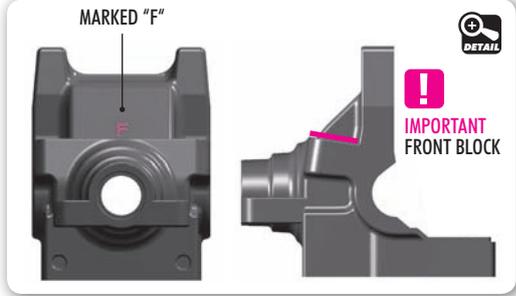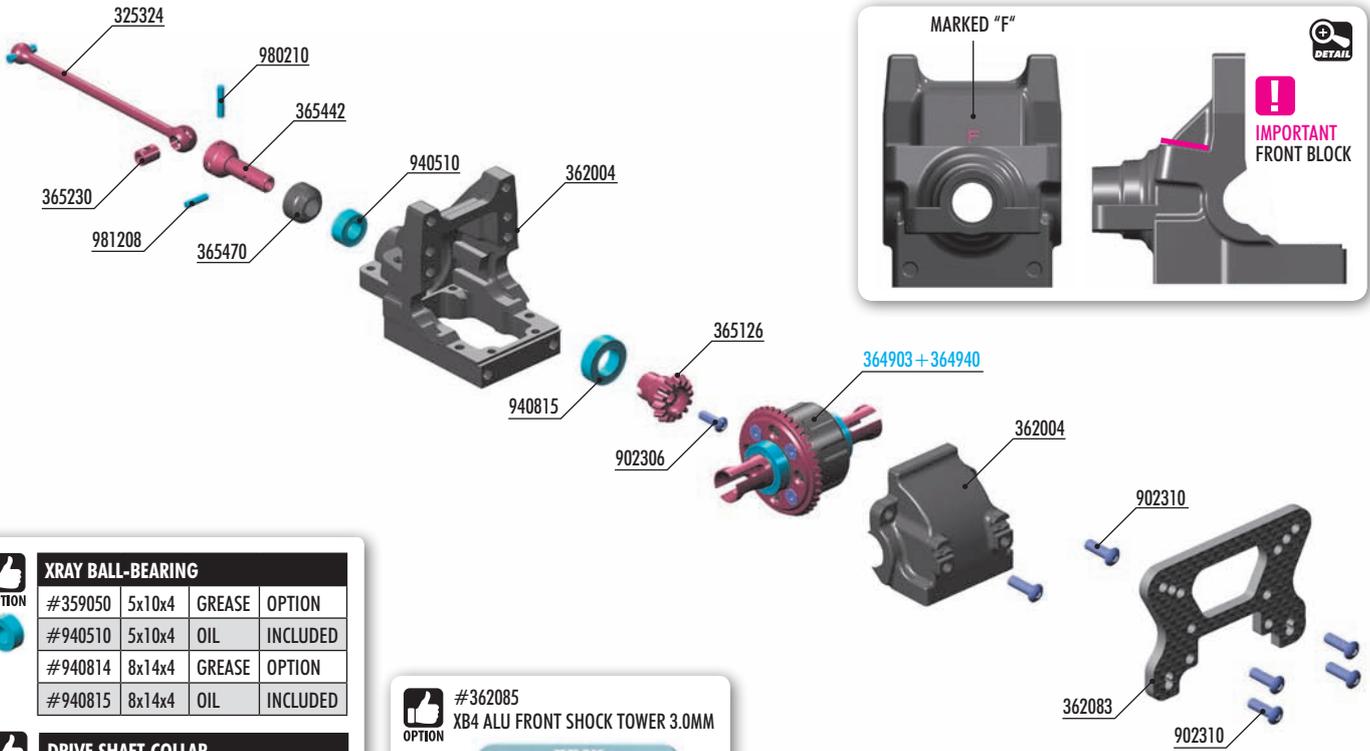

XRAY BALL-BEARING				
OPTION	#359050	5x10x4	GREASE	OPTION
	#940510	5x10x4	OIL	INCLUDED
	#940814	8x14x4	GREASE	OPTION
	#940815	8x14x4	OIL	INCLUDED

DRIVE SHAFT COLLAR		
OPTION	#365470	COMPOSITE INCLUDED
	#365471-K	ALU - BLACK OPTION
	#365471-O	ALU - ORANGE OPTION




- 325324 DRIVE SHAFT 75MM WITH 2.5MM PIN - HUDY SPRING STEEL™
- 362004 DIFF BULKHEAD BLOCK SET FRONT - NARROW
- 362083 GRAPHITE SHOCK TOWER FRONT 3.5MM
- 365126 STEEL BEVEL DRIVE GEAR - CNC-MACHINED - 16T
- 365230 DRIVE SHAFT COUPLING - HUDY SPRING STEEL™
- 365442 CENTRAL SHAFT UNIVERSAL JOINT
- 365470 COMPOSITE DRIVE SHAFT SAFETY COLLAR - V2 (3)
- 902306 HEX SCREW SH M3x6 (10)

- 902310 HEX SCREW SH M3x10 (10)
- 940510 BALL-BEARING 5x10x4 RUBBER SEALED - OIL (2)
- 940815 BALL-BEARING 8x14x4 RUBBER SEALED - OIL (2)
- 980210 PIN 2x10 (10)
- 981208 PIN 2x8 (10)
- 364903 GEAR DIFFERENTIAL - LARGE VOLUME - SET
- 364940 STEEL DIFFERENTIAL BEVEL GEAR FOR LARGE VOLUME DIFF 40T



**! DRIVE SHAFT COVER CAPS**  
Lubricate the drive shaft connecting joint properly so the drive shaft turns freely. In the event that not enough grease is used, the connecting pin may lock and may even, in extreme situations, push through the drive shaft cover cap.

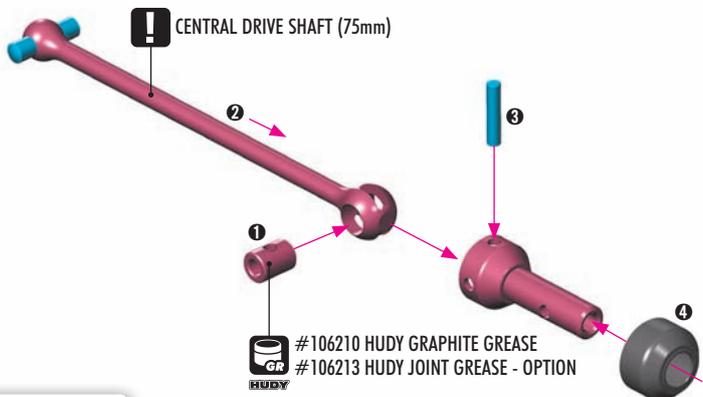

DRIVE SHAFT COLLAR		
OPTION	#365470	COMPOSITE INCLUDED
	#365471-K	ALU - BLACK OPTION
	#365471-O	ALU - ORANGE OPTION

## 2. FRONT CENTRAL TRANSMISSION

902306  
SH M3x6

940510  
BB 5x10x4

940815  
BB 8x14x4

981208  
P 2x8

Bearing with BLUE rubber covers

Bearing Oil (HUDY #106230)

5x10x4mm

Bearing Oil (HUDY #106230)

8x14x4mm

THREAD LOCK

GRAPHITE GREASE (HUDY #106210)

**IMPORTANT FRONT BLOCK**

XRAY BALL-BEARING			
OPTION			
#359050	5x10x4	GREASE	OPTION
#940510	5x10x4	OIL	INCLUDED
#940814	8x14x4	GREASE	OPTION
#940815	8x14x4	OIL	INCLUDED

902310  
SH M3x10

**REAR**

**NOTE ORIENTATION**

**FRONT DIFF 10.000 c/s**

**FRONT**

902310  
SH M3x10

**REAR**

**NOTE ORIENTATION**


Follow the TECH TIP on page 5 to prepare graphite parts

**TIP**

**FRONT**

#362085  
XB4 ALU FRONT SHOCK TOWER 3.0MM

### 3. REAR SUSPENSION

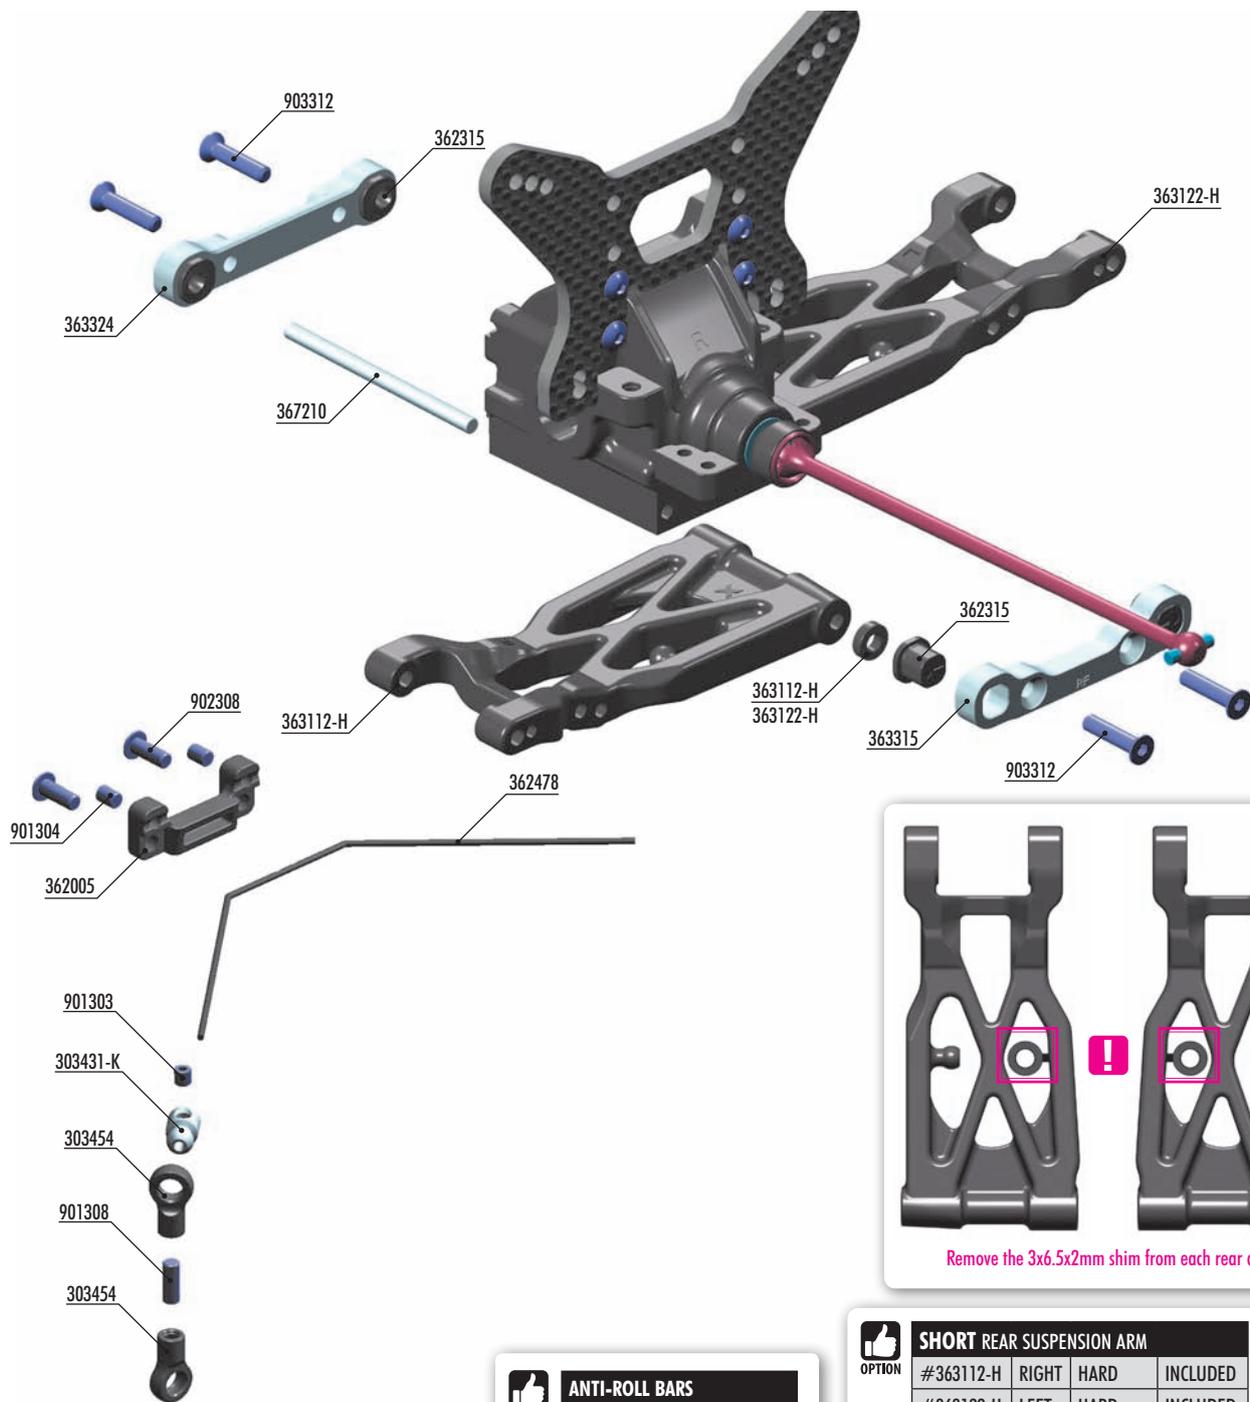

ANTI-ROLL BARS			
#362470	1.0mm	OPTION	
#362471	1.1mm	OPTION	
#362472	1.2mm	OPTION	
#362473	1.3mm	OPTION	
#362474	1.4mm	OPTION	
#362476	1.6mm	OPTION	
#362478	1.8mm	INCLUDED	
#362480	2.0mm	OPTION	

SHORT REAR SUSPENSION ARM			
#363112-H	RIGHT	HARD	INCLUDED
#363122-H	LEFT	HARD	INCLUDED
#363112-G	RIGHT	GRAPHITE	OPTION
#363122-G	LEFT	GRAPHITE	OPTION

LONG REAR SUSPENSION ARM			
#363113-H	RIGHT	HARD	OPTION
#363123-H	LEFT	HARD	OPTION
#363113-G	RIGHT	GRAPHITE	OPTION
#363123-G	LEFT	GRAPHITE	OPTION

#### BAG

03

- 303431-K ALU 4.9MM BALL END - BLACK (2)
- 303454 BALL JOINT 4.9MM - OPEN (4)
- 362005 DIFF BULKHEAD BLOCK SET REAR - NARROW
- 362315 ECCENTRIC BUSHING SET (2)
- 362478 ANTI-ROLL BAR 1.8 MM
- 363112-H COMPOSITE SUSPENSION ARM REAR LOWER RIGHT - HARD
- 363122-H COMPOSITE SUSPENSION ARM REAR LOWER LEFT - HARD
- 363315 ALU LOWER SUSP. HOLDER 1° REAR-FRONT - NARROW - 7075 T6
- 363324 ALU LOWER SUSP. HOLDER REAR-REAR - NARROW - 7075 T6
- 367210 SUSPENSION PIVOT PIN (2)

- 901303 HEX SCREW SB M3x3 (10)
- 901304 HEX SCREW SB M3x4 (10)
- 901308 HEX SCREW SB M3x8 (10)
- 902308 HEX SCREW SH M3x8 (10)
- 903312 HEX SCREW SFH M3x12 (10)

# 3. REAR SUSPENSION

**IO**  
From Rear Arm SHIM 3x6.5x2  
903312 SFH M3x12

**REAR**

**IMPORTANT REAR BLOCK**

**#363314 ALU LOWER SUSP. HOLDER 3° REAR-FRONT NARROW - 7075 T6**  
OPTION 3° 1-DOT

Marked "L"

Marked "R"

RR 1°

LEFT

RIGHT

2mm from rear arm

2mm from rear arm

RF

FRONT

Composite eccentric bushings

INITIAL SETTING

**TIP** **L=R**  
If the suspension arm does not move freely use a HUDY Arm Reamer to size the holes of the arms.  
Arm Reamer 3.0mm (HUDY #107633)

**For SHORT arms use only OUTER positions.**

**For SHORT arms do not use INNER positions.**

**SHORT REAR SUSPENSION ARM**

Part #	Side	Material	Status
#363112-H	RIGHT	HARD	INCLUDED
#363122-H	LEFT	HARD	INCLUDED
#363112-G	RIGHT	GRAPHITE	OPTION
#363122-G	LEFT	GRAPHITE	OPTION

**For LONG arms use only INNER positions.**

**For LONG arms do not use OUTER positions.**

**LONG REAR SUSPENSION ARM**

Part #	Side	Material	Status
#363113-H	RIGHT	HARD	OPTION
#363123-H	LEFT	HARD	OPTION
#363113-G	RIGHT	GRAPHITE	OPTION
#363123-G	LEFT	GRAPHITE	OPTION

Check for free movement

**SET-UP BOOK**

TOE-IN  
ANTI-SQUAT  
ROLL CENTER  
TRACK-WIDTH

ECCENTRIC BUSHINGS HAVE TWO DIFFERENT OFFSETS FROM THE CENTER.



The XRAY rear alu lower suspension holders provide great range of adjustment for the rear suspension. Using different combinations of eccentric bushings, fine adjustment of rear anti-squat, rear toe-in, rear roll center, and rear track-width can be obtained. For more information about the influence of rear anti-squat, rear toe-in, rear roll center and rear track width on car handling, please refer to HUDY Set-up Book (#209100).

ANTI-SQUAT		(°)
RR	RF	
○	○	= 2°
○	○	= 3°
○	○	= 1°
○	○	= 3°
○	○	= 2°
○	○	= 4°
○	○	= 1°
○	○	= 2°
○	○	= 0°

ROLL CENTER		(mm)
RR	RF	
○	○	= +0.75mm
○	○	= 0mm
○	○	= -0.75mm

TRACK-WIDTH		(mm)
RR	RF	
○	○	= +1.5mm
○	○	= 0mm
○	○	= -1.5mm

TOE-IN		(°)
RR	RF	
○	○	= 1°
○	○	= 2°
○	○	= 0°
○	○	= 2°
○	○	= 1°
○	○	= -1°
○	○	= 2°
○	○	= 3°
○	○	= 1°

The track-width is directly influenced by the size of the wheels and tires used.



The tables describe the amounts of adjustment using the center and outside positions of the eccentric bushings. The middle position eccentric bushings allow for finer adjustment increments.

# 3. REAR SUSPENSION



901308  
SB M3x8

2x  
L=R

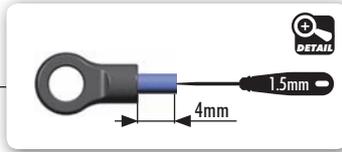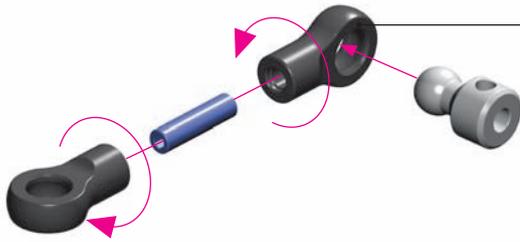

901303  
SB M3x3







901304  
SB M3x4



902308  
SH M3x8

ANTI-ROLL BARS			
OPTION	#362470	1.0mm	OPTION
	#362471	1.1mm	OPTION
	#362472	1.2mm	OPTION
	#362473	1.3mm	OPTION
	#362474	1.4mm	OPTION
	#362476	1.6mm	OPTION
	#362478	1.8mm	INCLUDED
	#362480	2.0mm	OPTION


FRONT

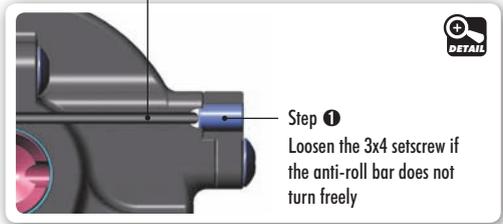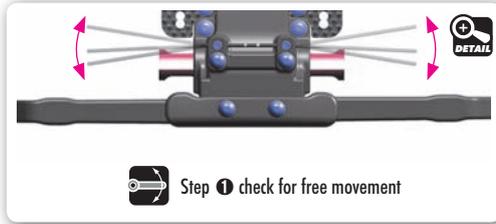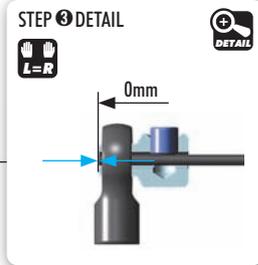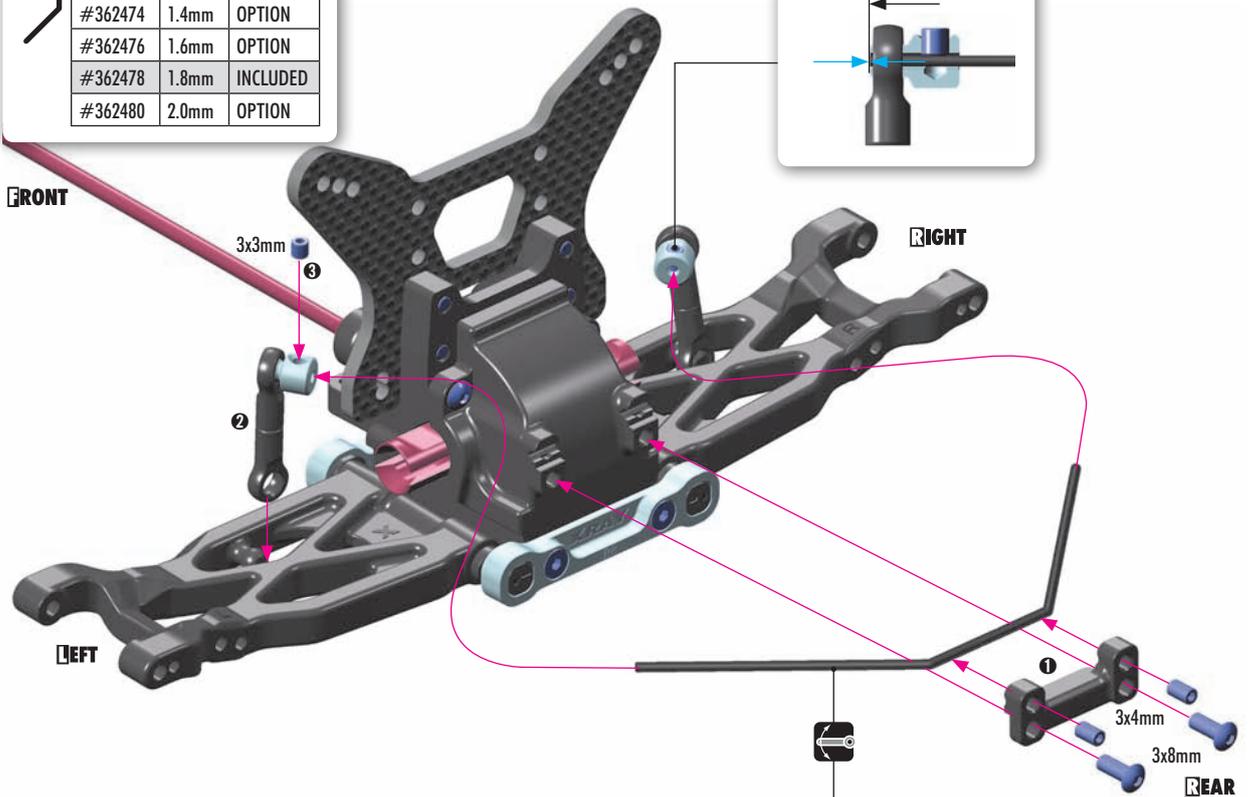


SET-UP BOOK

ANTI-ROLL BAR

# 3. FRONT SUSPENSION

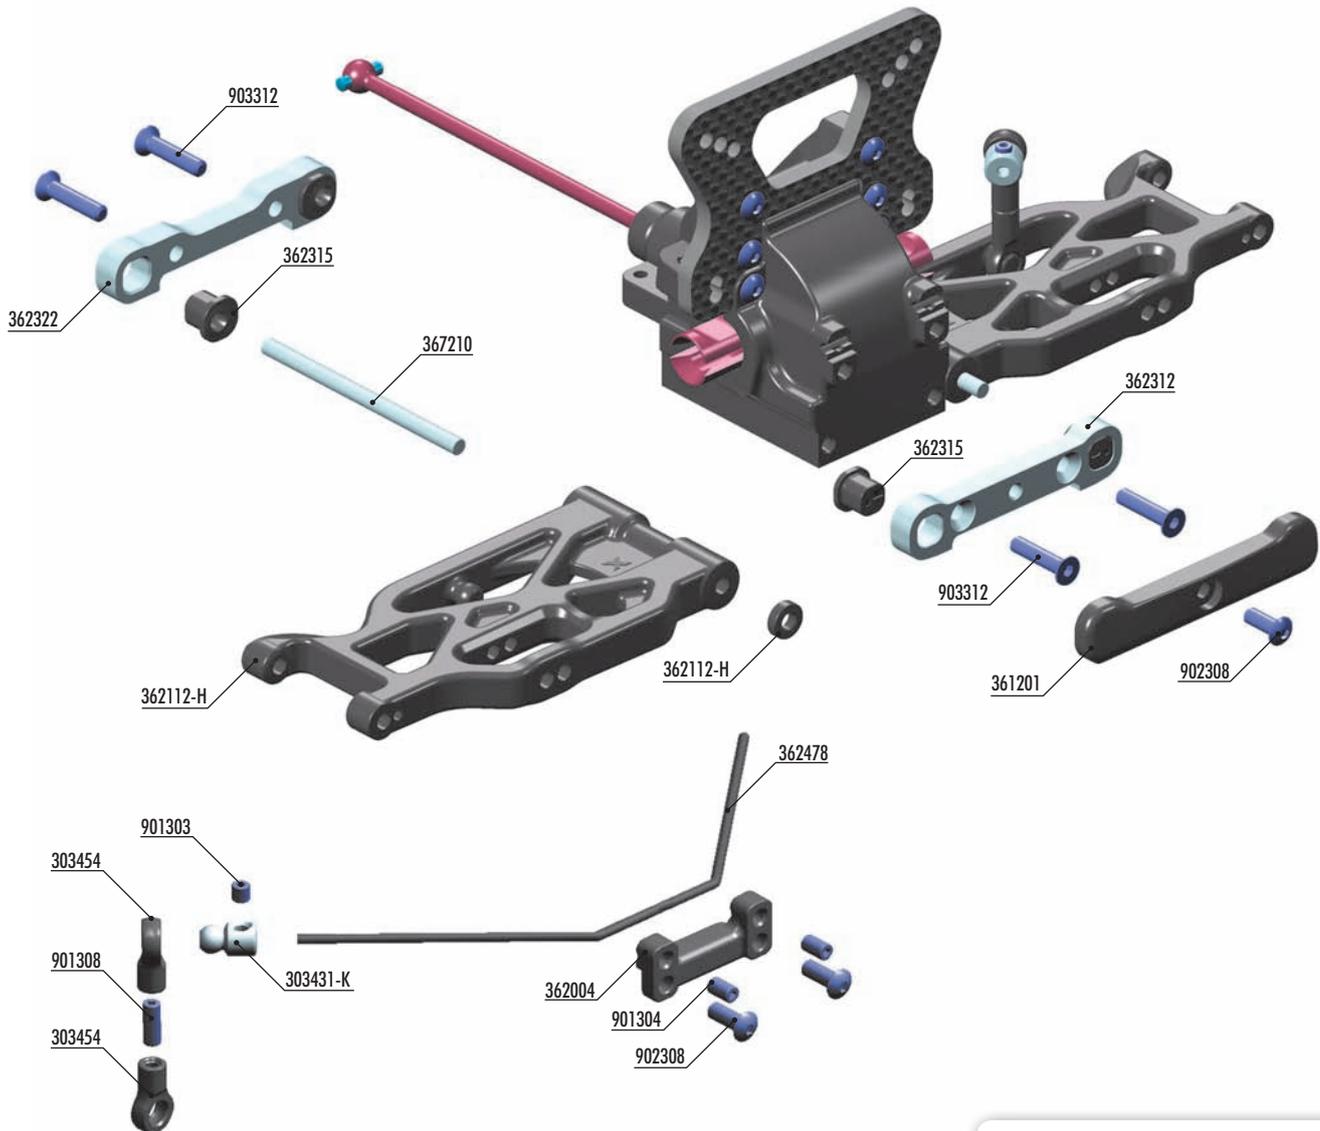

Remove the 3x6.5x2mm shim from each front arm.

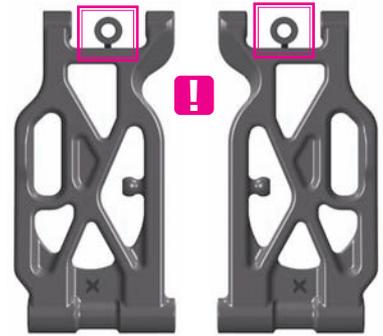

ANTI-ROLL BARS			
#362470	1.0mm	OPTION	
#362471	1.1mm	OPTION	
#362472	1.2mm	OPTION	
#362473	1.3mm	OPTION	
#362474	1.4mm	OPTION	
#362476	1.6mm	OPTION	
#362478	1.8mm	INCLUDED	
#362480	2.0mm	OPTION	

SHORT FRONT SUSPENSION ARM			
#362112	MEDIUM	OPTION	
#362112-H	HARD	INCLUDED	
#362112-G	GRAPHITE	OPTION	

LONG FRONT SUSPENSION ARM			
#362113-H	HARD	OPTION	
#362113-G	GRAPHITE	OPTION	

**BAG**  
**03**


303431-K	ALU 4.9MM BALL END - BLACK (2)	901303	HEX SCREW SB M3x3 (10)
303454	BALL JOINT 4.9MM - OPEN (4)	901304	HEX SCREW SB M3x4 (10)
361201	COMPOSITE FRONT BUMPER - ONE HOLE	901308	HEX SCREW SB M3x8 (10)
362004	DIFF BULKHEAD BLOCK SET FRONT - NARROW	902308	HEX SCREW SH M3x8 (10)
362112-H	COMPOSITE SUSPENSION ARM FRONT LOWER - HARD	903312	HEX SCREW SFH M3x12 (10)
362312	ALU LOWER SUSP. HOLDER FRONT-FRONT - NARROW - 7075 T6		
362315	ECCENTRIC BUSHING SET (2)		
362322	ALU LOWER SUSP. HOLDER FRONT-REAR - NARROW - 7075 T6		
362478	ANTI-ROLL BAR 1.8 MM		
367210	SUSPENSION PIVOT PIN (2)		

# 3. FRONT SUSPENSION

**10**  
From Front Arm  
SHIM 3x6.5x2




903312  
SFH M3x12

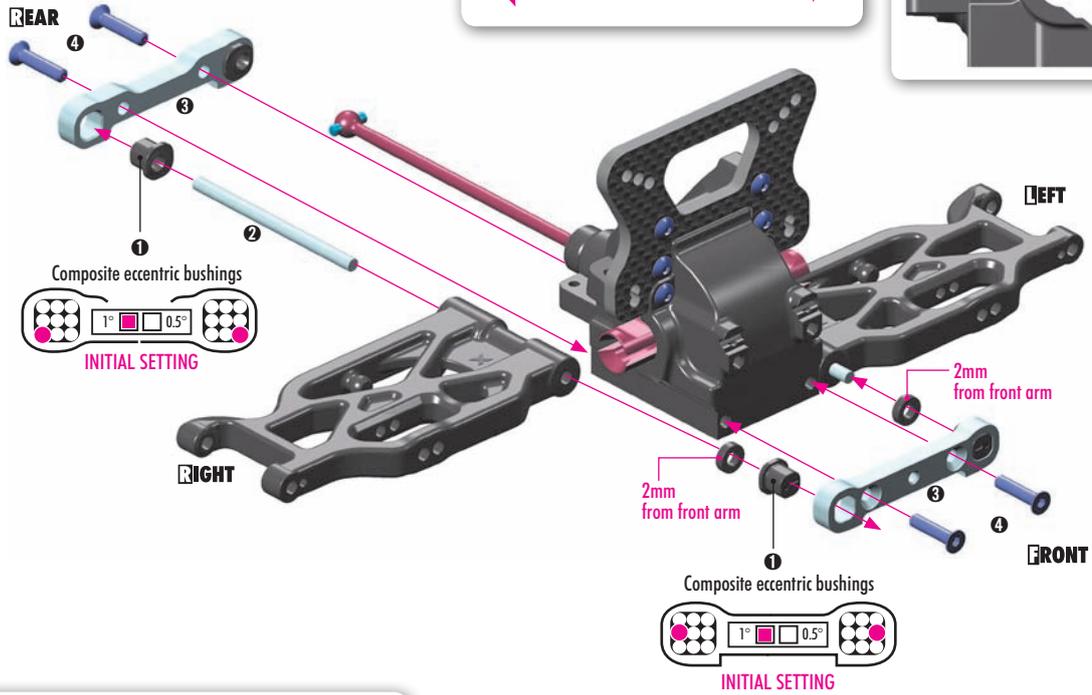

**TIP** If the suspension arm does not move freely use a HUDY Arm Reamer to size the holes of the arms

Arm Reamer 3.0mm (HUDY #107633)

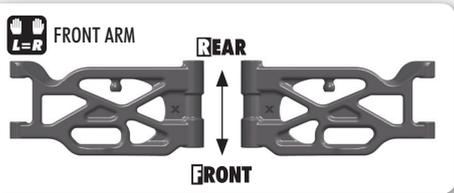

**✓ For SHORT arms use only OUTER positions.** **OPTION**

SHORT FRONT SUSPENSION ARM		
#362112	MEDIUM	OPTION
#362112-H	HARD	INCLUDED
#362112-G	GRAPHITE	OPTION

**✗ For SHORT arms do not use INNER positions.**

---

**✓ For LONG arms use only INNER positions.** **OPTION**

LONG FRONT SUSPENSION ARM		
#362113-H	HARD	OPTION
#362113-G	GRAPHITE	OPTION

**✗ For LONG arms do not use OUTER positions.**

**SET-UP BOOK**  
KICK UP  
ROLL CENTER  
TRACK-WIDTH

**ECCENTRIC BUSHINGS HAVE TWO DIFFERENT OFFSETS FROM THE CENTER.**



The XRAY alu front lower suspension holders provide great range of adjustment for the front suspension. Using different combinations of eccentric bushings, fine adjustment of front kick-up, roll-center, and front track-width can be obtained. For more information about the influence of kick-up, front track-width, and roll centers on car handling, please refer to HUDY Set-up Book (#209100).

KICK-UP		
FF	FR	(°)
		= 7°
		= 6°
		= 8°
		= 6°
		= 5°
		= 7°
		= 8°
		= 7°
		= 9°

ROLL CENTER		
FF	FR	(mm)
		= +0.75mm
		= 0mm
		= -0.75mm

TRACK-WIDTH		
FF	FR	(mm)
		= +1.5mm
		= 0mm
		= -1.5mm

The tables describe the amounts of adjustment using the center and outside positions of the eccentric bushings. The middle position eccentric bushings allow for finer adjustment increments.

The track-width is directly influenced by the size of the wheels and tires used.

TOTAL CASTER=C-HUB CASTER+KICK UP						
C-HUB CASTER	KICK-UP					
	6°	7°	8°	9°	10°	
6°	12°	13°	14°	15°	16°	
9°	15°	16°	17°	18°	19°	

Caster is the angle between the steering pivot axis and the vertical plane. Caster is affected not only by the C-Hub caster, but also by the front kick-up angle relative to the flat chassis bottom. The table indicates how kick up angle effects total caster.



The XB4's stock caster blocks are 9°, but 6° blocks are available as an option.

# 3. FRONT SUSPENSION



901308  
SB M3x8

2x  
L=R

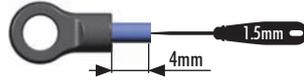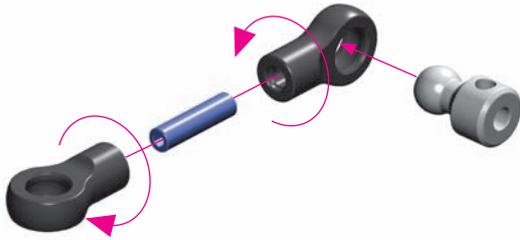

DETAIL



902308  
SH M3x8




901303  
SB M3x3




901304  
SB M3x4



902308  
SH M3x8

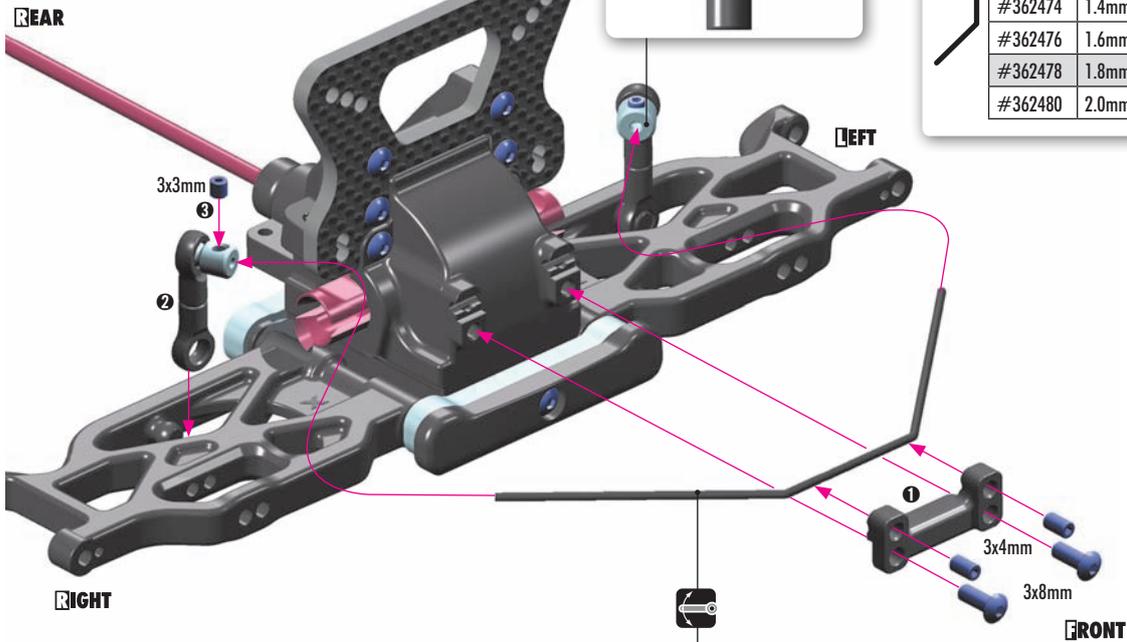

STEP 1 DETAIL

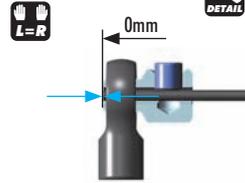


DETAIL




ANTI-ROLL BARS

OPTION	ANTI-ROLL BARS		
#362470	1.0mm	OPTION	
#362471	1.1mm	OPTION	
#362472	1.2mm	OPTION	
#362473	1.3mm	OPTION	
#362474	1.4mm	OPTION	
#362476	1.6mm	OPTION	
#362478	1.8mm	INCLUDED	
#362480	2.0mm	OPTION	

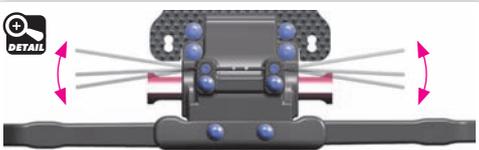

Step 1 check for free movement

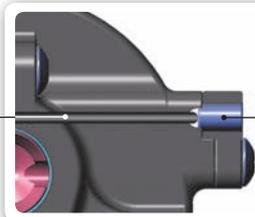


Step 1  
Loosen the 3x4 setscrew if the anti-roll bar does not turn freely

SET-UP BOOK

ANTI-ROLL BAR

# 4. REAR TRANSMISSION

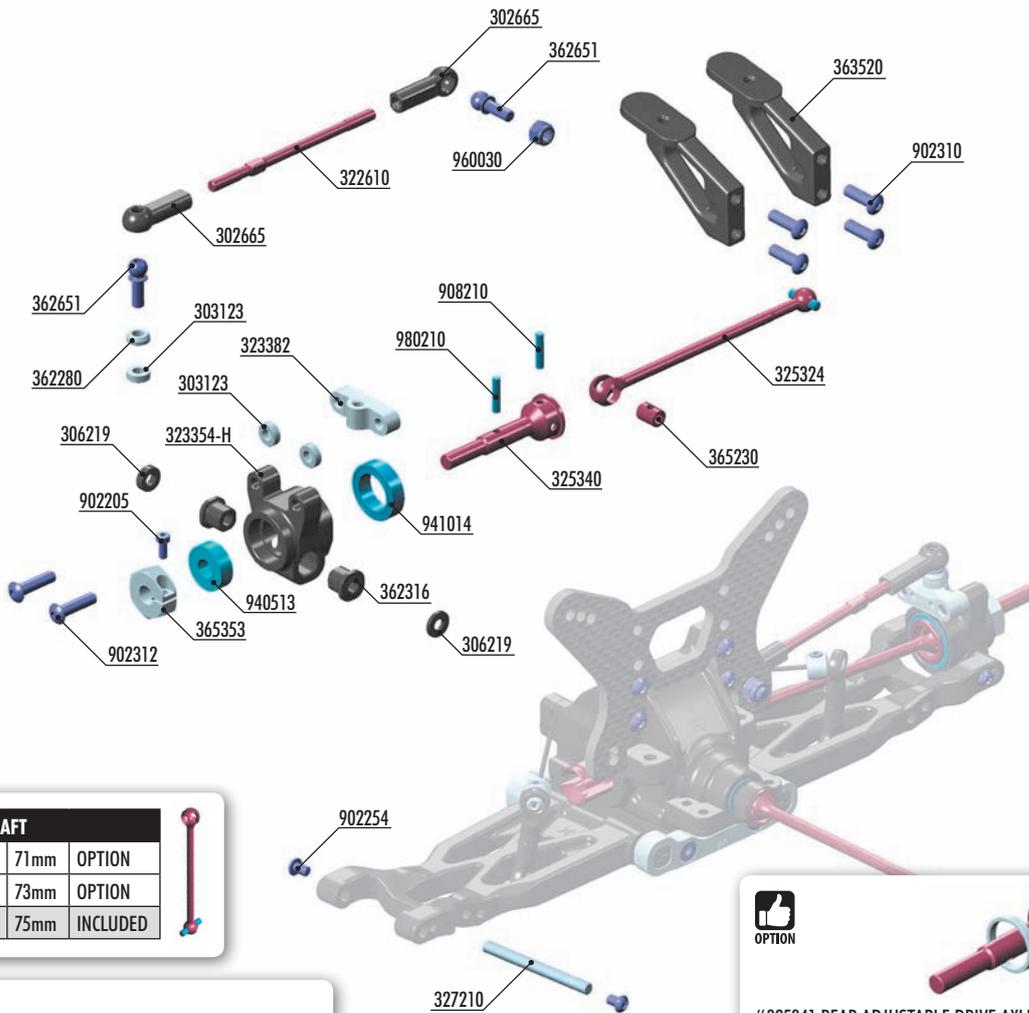

**DRIVE SHAFT**

#325323	71mm	OPTION
#325326	73mm	OPTION
#325324	75mm	INCLUDED

**#32381**  
ALU REAR HUB PLATE FOR MULTI ADJUSTABLE UPRIGHT - SWISS 7075 T6

**XRAY BALL-BEARING**

#940512	5x12x4	OIL	OPTION
#941015	10x15x4	OIL	OPTION
#940513	5x12x4	GREASE	INCLUDED
#941014	10x15x4	GREASE	INCLUDED

**REAR UPRIGHTS**

#323354-H	COMPOSITE - H	INCLUDED
#323354-G	COMPOSITE - G	OPTION
#323355	ALU	OPTION

**ALU CONICAL SHIM**

#362280	SILVER	INCLUDED
#362280-K	BLACK	OPTION
#362280-O	ORANGE	OPTION

**ALU NUTS M3**

#296530-B	BLUE	OPTION
#296530-K	BLACK	OPTION
#296530-O	ORANGE	OPTION
#960031	SILVER	INCLUDED

**#325341** REAR ADJUSTABLE DRIVE AXLE LB - HUDY SPRING STEEL™  
#325390 ALU SHIM 10x12x2MM (2)

**WHEEL HUBS 12MM**

#365360	+4.5mm - (6 slots)	OPTION
#365359	+3.75mm (5 slots)	OPTION
#365358	+3.0mm (4 slots)	OPTION
#365357	+2.25mm (3 slots)	OPTION
#365356	+1.5mm (2 slots)	OPTION
#365355	+0.75mm (1 slot)	OPTION
#365353	0mm (0 slots)	INCLUDED
#365354	-0.75mm (Lightw.)	OPTION
#365361	-1.25mm (Lightw.)	OPTION

**WHEEL HUBS 14MM**


#365352	+0.75mm	OPTION
#365350	0mm	OPTION
#365351	-0.75mm	OPTION



- 302665 COMPOSITE BALL JOINT 4.9MM - CLOSED WITH HOLE (4)
- 303123 ALU SHIM 3x6x2.0MM (10)
- 306219 CCOMPOSITE SET OF SERVO SHIMS (4)
- 322610 ADJ. TURNBUCKLE M3 L/R 55 MM - SPRING STEEL (2)
- 323354-H COMPOSITE UPRIGHT REAR - HARD
- 323382 ALU REAR HUB PLATE FOR MULTI ADJ. UPRIGHT - 1-HOLE
- 325324 REAR DRIVE SHAFT 75MM WITH 2.5MM PIN - SPRING STEEL™
- 325340 REAR DRIVE AXLE LB - HUDY SPRING STEEL™
- 327210 FRONT SUSPENSION PIVOT PIN (2)
- 362280 ALU CONICAL SHIM 3x6x2.0MM (10)
- 362316 OPEN ECCENTRIC BUSHING SET (2)
- 362651 BALL END 4.9MM WITH THREAD 8MM (2)
- 363520 REAR WING POST - V2 (2)

- 365230 DRIVE SHAFT COUPLING - HUDY SPRING STEEL™
- 365353 ALU WHEEL HUB 12MM (2)
- 902205 HEX SCREW SH M2x5 (10)
- 902254 HEX SCREW SH M2.5x4 (10)
- 902310 HEX SCREW SH M3x10 (10)
- 902312 HEX SCREW SH M3x12 (10)
- 940513 BALL-BEARING 5x12x4 RUBBER SEALED - GREASE (2)
- 941014 BALL-BEARING 10x15x4 RUBBER SEALED - GREASE (2)
- 960030 NUT M3 (10)
- 980210 PIN 2x10 (10)

# 4. REAR TRANSMISSION

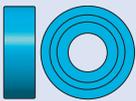

940513  
BB 5x12x4



941014  
BB 10x15x4




980210  
P 2x10



902205  
SH M2x5

2x  
L=R

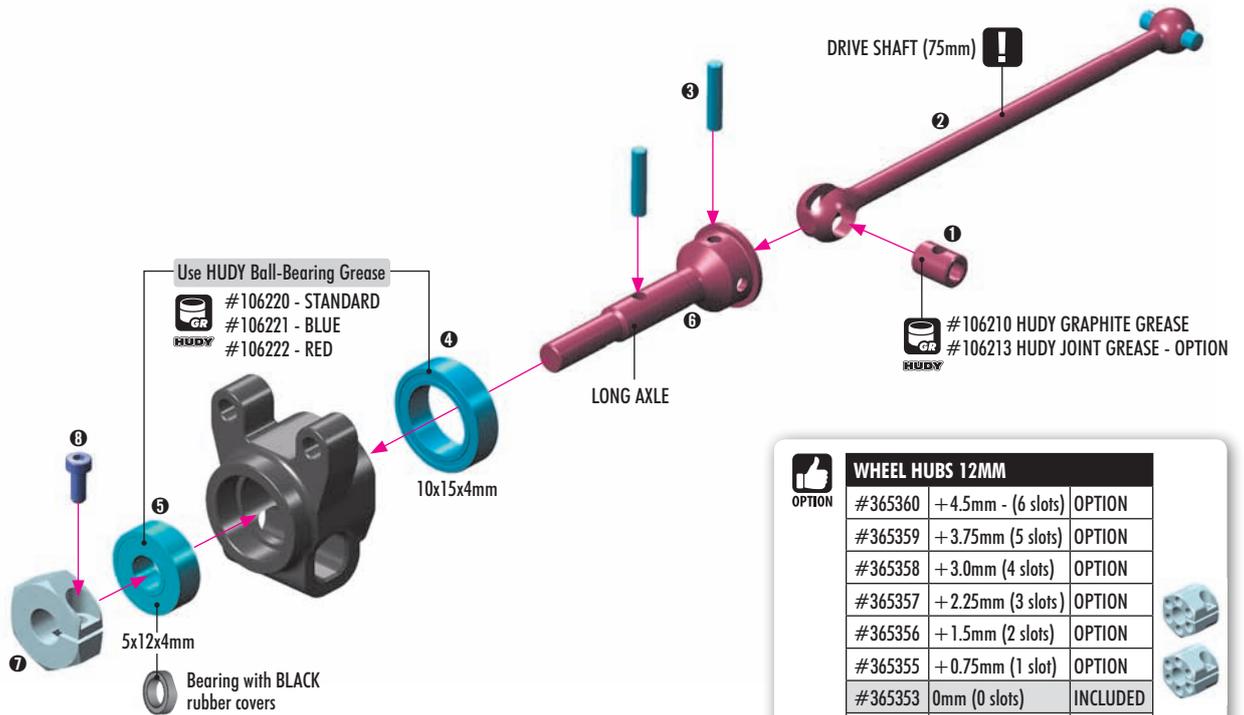

**DRIVE SHAFT**

OPTION	#325323	71mm	OPTION
	#325326	73mm	OPTION
	#325324	75mm	INCLUDED

**XRAY BALL-BEARING**

OPTION	#940512	5x12x4	OIL	OPTION
	#941015	10x15x4	OIL	OPTION
	#940513	5x12x4	GREASE	INCLUDED
	#941014	10x15x4	GREASE	INCLUDED

**WHEEL HUBS 12MM**

OPTION	#365360	+4.5mm - (6 slots)	OPTION
	#365359	+3.75mm (5 slots)	OPTION
	#365358	+3.0mm (4 slots)	OPTION
	#365357	+2.25mm (3 slots)	OPTION
	#365356	+1.5mm (2 slots)	OPTION
	#365355	+0.75mm (1 slot)	OPTION
	#365353	0mm (0 slots)	INCLUDED
	#365354	-0.75mm (Lightw.)	OPTION
	#365361	-1.25mm (Lightw.)	OPTION

**WHEEL HUBS 14MM**

OPTION	#365352	+0.75mm	OPTION
	#365350	0mm	OPTION
	#365351	-0.75mm	OPTION

**OPTIONAL HEX HUB EFFECTS**

Different offset hex hubs are used to increase or decrease the track-width.

**LESS OFFSET**                      **MORE OFFSET**  
 Rear - more traction              Rear - less traction  
 Front - more steering              Front - less steering

**REAR UPRIGHTS**

OPTION	#323354-H	HARD	INCLUDED
	#323354-G	GRAPHITE	OPTION
	#323355	ALU	OPTION




303123  
SHIM 3x6x2



902312  
SH M3x12

2x  
L=R

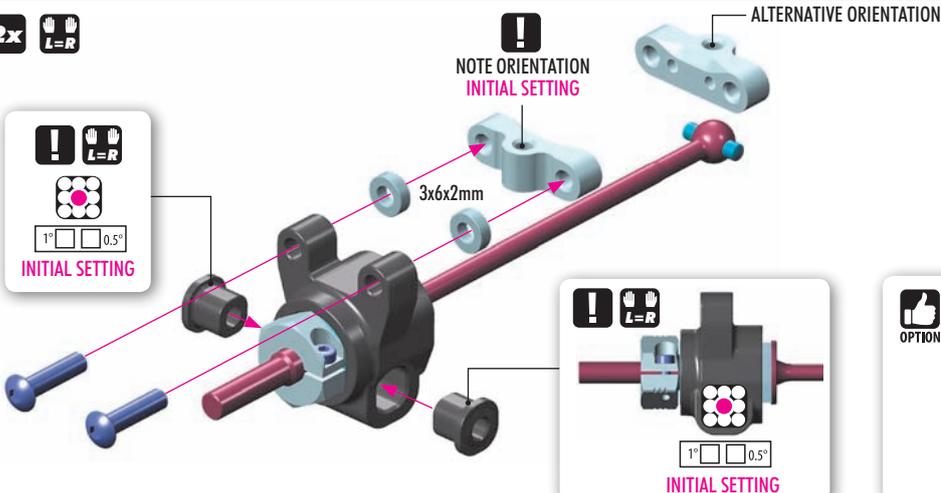

**#323381**  
 OPTION ALU REAR HUB PLATE FOR MULTI ADJUSTABLE UPRIGHT - SWISS 7075 T6

# 4. REAR TRANSMISSION

**IO**  
306219  
SHIM 3x6x1

**IO**  
306219  
SHIM 3x6x2

**902254**  
SH M2.5x4

**SET-UP BOOK**  
WHEELBASE

**TIP** Ensure that the rear upright moves freely. If it does not move freely, use sandpaper to thin both wheelbase adjustment shims.

**LONGER WHEELBASE**  
Adjustment Shim IN FRONT OF HUB moves hub rearward.

**SHORTER WHEELBASE**  
Adjustment Shim BEHIND HUB moves hub forward.

**Check for free movement**

**TIGHTEN GENTLY**

**SET-UP BOOK**  
CAMBER

**2x** **L=R** **NOTE ORIENTATION**

**8mm THREAD**

**LEFT THREAD**

**RIGHT THREAD**

**TIP** Install the pivot balls with Professional Multi Tool (HUDY #183011)

**37mm**

**2x** **L=R**

**SET-UP BOOK**  
ROLL CENTER

**2x** **L=R** **NOTE ORIENTATION**

**NOTE ORIENTATION**

**NOTE ORIENTATION**

**CONICAL SHIM**

**2mm**

**2mm**

**INITIAL SETTING**

OPTION	ALU CONICAL SHIM		
	#362280	SILVER	INCLUDED
	#362280-K	BLACK	OPTION
	#362280-O	ORANGE	OPTION

**902310**  
SH M3x10

**2x** **L=R**

**REAR**

# 4. FRONT TRANSMISSION



## WHEEL HUBS 12MM

#365360	+4.5mm - (6 slots)	OPTION
#365359	+3.75mm (5 slots)	OPTION
#365358	+3.0mm (4 slots)	OPTION
#365357	+2.25mm (3 slots)	OPTION
#365356	+1.5mm (2 slots)	OPTION
#365355	+0.75mm (1 slot)	OPTION
#365353	0mm (0 slots)	INCLUDED
#365354	-0.75mm (Lightw.)	OPTION
#365361	-1.25mm (Lightw.)	OPTION



## WHEEL HUBS 14MM

#365352	+0.75mm	OPTION
#365350	0mm	OPTION
#365351	-0.75mm	OPTION




## XRAY BALL-BEARING

#940510	5x10x4	OIL	OPTION
#940512	5x12x4	OIL	OPTION
#359050	5x10x4	GREASE	INCLUDED
#940513	5x12x4	GREASE	INCLUDED



## DRIVE SHAFT COLLAR

#365470	COMPOSITE	INCLUDED
#365471-K	ALU - BLACK	OPTION
#365471-O	ALU - ORANGE	OPTION

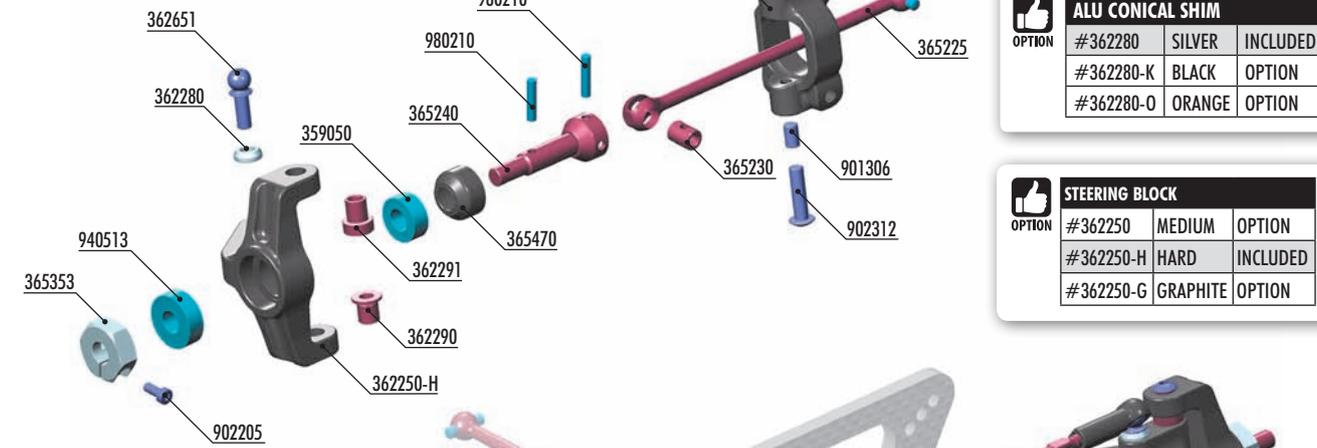

## C-HUBS

#362210	RIGHT 9° - M	OPTION
#362210-H	RIGHT 9° - H	INCLUDED
#362210-G	RIGHT 9° - G	OPTION
#362211	RIGHT 6°	OPTION
#362234	ALU RIGHT 12°	OPTION
#362220	LEFT 9° - M	OPTION
#362220-H	LEFT 9° - H	INCLUDED
#362210-G	LEFT 9° - G	OPTION
#362221	LEFT 6°	OPTION
#362244	ALU LEFT 12°	OPTION



BAG

04

- 302665 COMPOSITE BALL JOINT 4.9MM - CLOSED WITH HOLE (4)
- 362210-H COMPOSITE C-HUB 9° DEG. RIGHT - HARD
- 362220-H COMPOSITE C-HUB 9° DEG. LEFT - HARD
- 362250-H COMPOSITE STEERING BLOCK - HARD
- 362280 ALU CONICAL SHIM 3x6x2.0MM (10)
- 362290 STEEL STEERING BUSHING - SHORT (2)
- 362291 STEEL STEERING BUSHING - LONG (2)
- 362610 ADJ. TURNBUCKLE M3 L/R 50 MM - SPRING STEEL (2)
- 362651 BALL END 4.9MM WITH THREAD 8MM (2)
- 362652 BALL END 4.9MM WITH THREAD 10MM (2)
- 365225 FRONT DRIVE SHAFT 83MM WITH 2.5MM PIN - HUDY SPRING STEEL™
- 365230 DRIVE SHAFT COUPLING - HUDY SPRING STEEL™
- 365240 FRONT DRIVE AXLE - HUDY SPRING STEEL™

- 365353 ALU WHEEL HUB 12MM (2)
- 365470 COMPOSITE DRIVE SHAFT SAFETY COLLAR (3)
- 367220 FRONT ARM PIVOT PIN (2)
- 359050 BALL-BEARING 5x10x4 STEEL SEALED - GREASE (2)
- 901306 HEX SCREW SB M3x6 (10)
- 902205 HEX SCREW SH M2x5 (10)
- 902312 HEX SCREW SH M3x12 (10)
- 902314 HEX SCREW SH M3x14 (10)
- 940513 BALL-BEARING 5x12x4 RUBBER SEALED - GREASE (2)
- 960030 NUT M3 (10)
- 980210 PIN 2x10 (10)



## ALU NUTS M3

#296530-B	BLUE	OPTION
#296530-K	BLACK	OPTION
#296530-O	ORANGE	OPTION
#960031	SILVER	INCLUDED



## ALU CONICAL SHIM

#362280	SILVER	INCLUDED
#362280-K	BLACK	OPTION
#362280-O	ORANGE	OPTION



## STEERING BLOCK

#362250	MEDIUM	OPTION
#362250-H	HARD	INCLUDED
#362250-G	GRAPHITE	OPTION



#365201  
ECS FRONT DRIVE SHAFT 81mm (2.5mm PIN)  
- HUDY SPRING STEEL™



#365202  
ECS FRONT DRIVE SHAFT 83mm (2.5mm PIN)  
- HUDY SPRING STEEL™




#365222  
CVD FRONT DRIVE SHAFT 81mm (2.5mm PIN)  
- HUDY SPRING STEEL™



# 4. FRONT TRANSMISSION

980210  
P 2x10

2x L=R

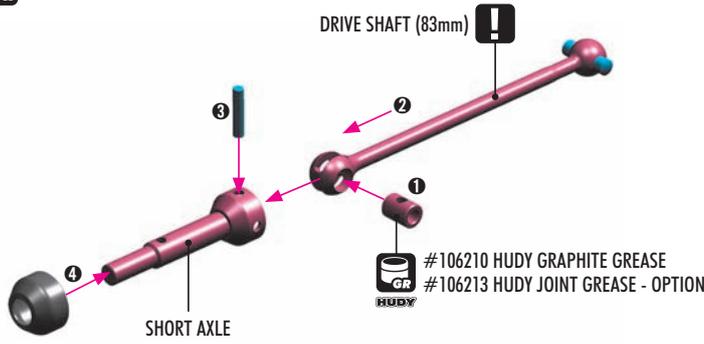

**OPTION** #365201  
ECS FRONT DRIVE SHAFT 81mm (2.5mm PIN)  
- HUDY SPRING STEEL™

**OPTION** #365202  
ECS FRONT DRIVE SHAFT 83mm (2.5mm PIN)  
- HUDY SPRING STEEL™

**OPTION** #365222  
CVD FRONT DRIVE SHAFT 81mm (2.5mm PIN)  
- HUDY SPRING STEEL™

359050  
BB 5x10x4

940513  
BB 5x12x4

Use HUDY Ball-Bearing Grease

#106220 - STANDARD  
#106221 - BLUE  
#106222 - RED



**OPTION**


### XRAY BALL-BEARING

#940510	5x10x4	OIL	OPTION
#940512	5x12x4	OIL	OPTION
#359050	5x10x4	GREASE	INCLUDED
#940513	5x12x4	GREASE	INCLUDED

902205  
SH M2x5

980210  
P 2x10

2x L=R

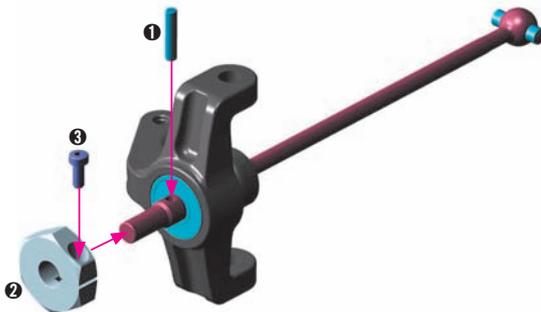

**OPTION**

### WHEEL HUBS 12MM

#365360	+4.5mm (6 slots)	OPTION
#365359	+3.75mm (5 slots)	OPTION
#365358	+3.0mm (4 slots)	OPTION
#365357	+2.25mm (3 slots)	OPTION
#365356	+1.5mm (2 slots)	OPTION
#365355	+0.75mm (1 slot)	OPTION
#365353	0mm (0 slots)	INCLUDED
#365354	-0.75mm (Lightw.)	OPTION
#365361	-1.25mm (Lightw.)	OPTION

### OPTIONAL HEX HUB EFFECTS

Different off-set hex hubs are used to increase or decrease the track-width.

### LESS OFF-SET

Rear - more traction  
Front - more steering

### MORE OFF-SET

Rear - less traction  
Front - less steering


362280  
CON. SHIM 3x6x2

902312  
SH M3x12


902314  
SH M3x14

### IMPORTANT


Be sure to use the shorter screw with shorter bushing and longer screw with longer bushing.

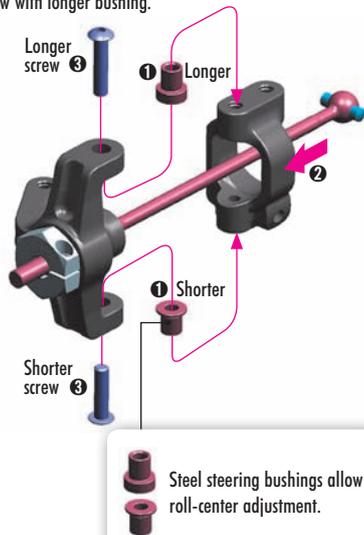

**DETAIL**

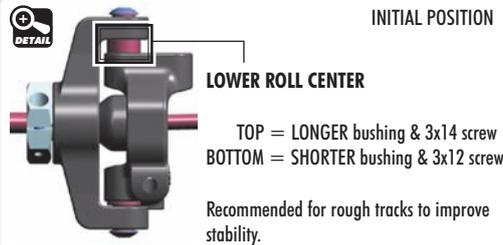

**DETAIL**

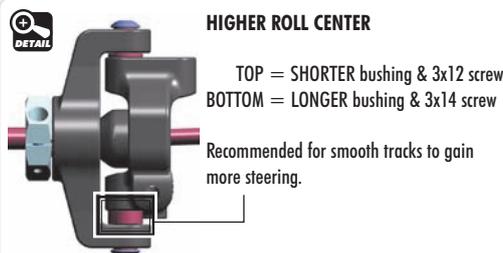

8mm  
THREAD

**NOTE**  
ORIENTATION

CONICAL SHIM  
3x6x2mm



### IMPORTANT

When inserting the bushings, make sure that bushings are inserted equally on both right and left hub to give the same roll center position.

**SET-UP BOOK**  
CASTER  
ROLL CENTER

# 4. FRONT TRANSMISSION




901306  
SB M3x6

2x

L=R




DO NOT OVERTIGHTEN

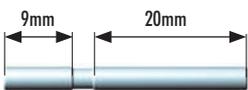

7:1 NOTE ORIENTATION

RIGHT

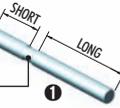

ARM REAMER (HUDY #107633) TIP L=R

If the C-hub does not move freely, use a HUDY Arm Reamer to resize the hole.



2x

L=R



TIP Install the pivot balls with Professional Multi Tool (HUDY #183011)



SET-UP BOOK

CAMBER




362280  
CON. SHIM 3x6x2



960030  
N M3


2x

L=R

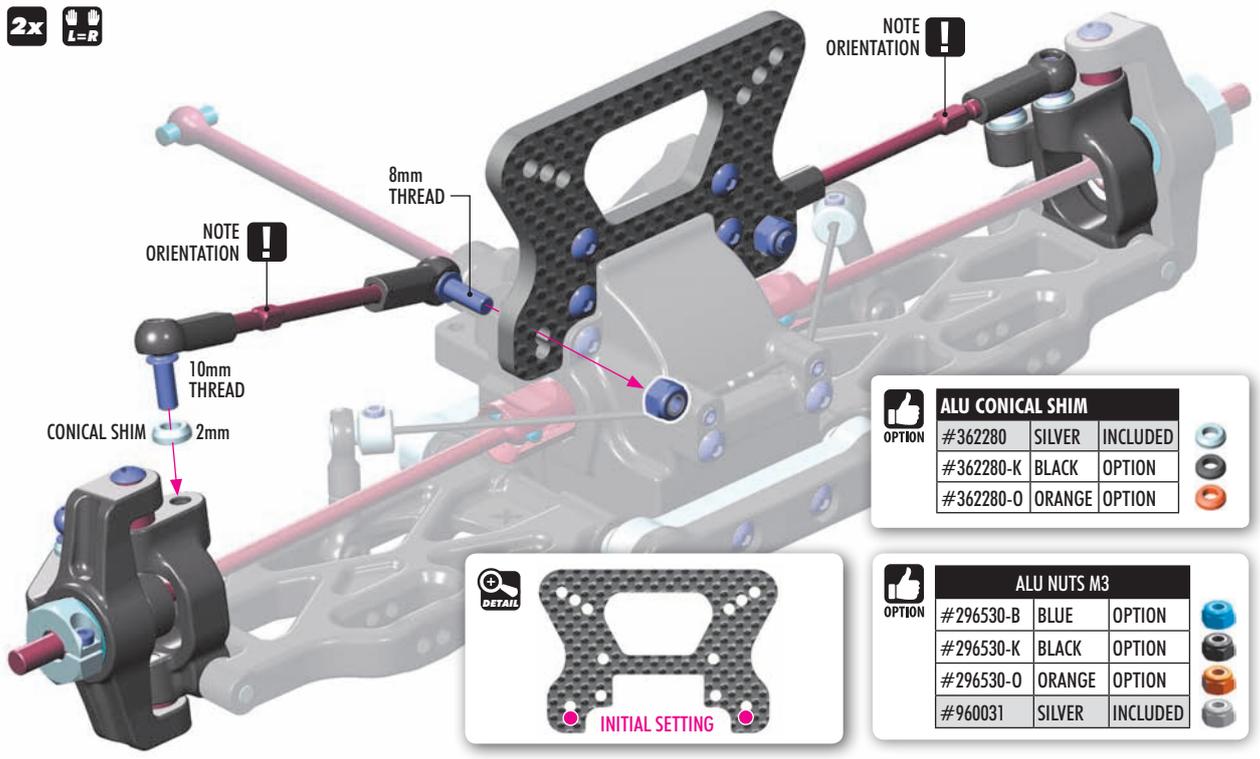

OPTION	ALU CONICAL SHIM		
	#362280	SILVER	INCLUDED
	#362280-K	BLACK	OPTION
	#362280-O	ORANGE	OPTION

OPTION	ALU NUTS M3		
	#296530-B	BLUE	OPTION
	#296530-K	BLACK	OPTION
	#296530-O	ORANGE	OPTION
	#960031	SILVER	INCLUDED

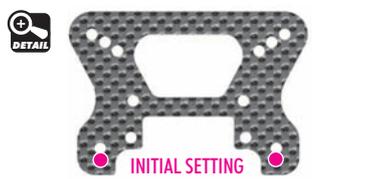

SET-UP BOOK

ROLL CENTER



# 4. FRONT & REAR ASSEMBLY



903308  
SFH M3x8



903310  
SFH M3x10




903314  
SFH M3x14



960030  
N M3

**SET-UP BOOK**  
CHASSIS FLEX

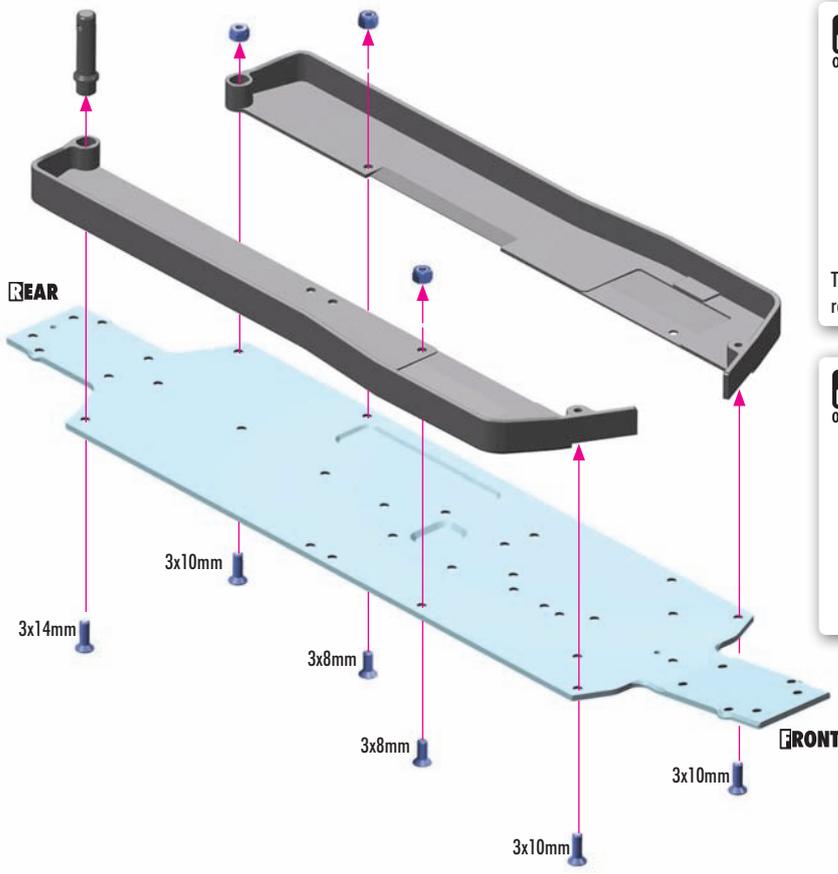

**#361269-M**  
COMPOSITE CHASSIS SIDE GUARDS L+R (MEDIUM)  
OPTION

The medium side guards increase chassis flex and are recommended for low-traction tracks.

**#361108**  
ALU CHASSIS - SWISS 7075 T6 (2.5MM)  
OPTION

**ALU NUTS M3**

#296530-B	BLUE	OPTION	
#296530-K	BLACK	OPTION	
#296530-O	ORANGE	OPTION	
#960031	SILVER	INCLUDED	




902308  
SH M3x8



902310  
SH M3x10



903310  
SFH M3x10

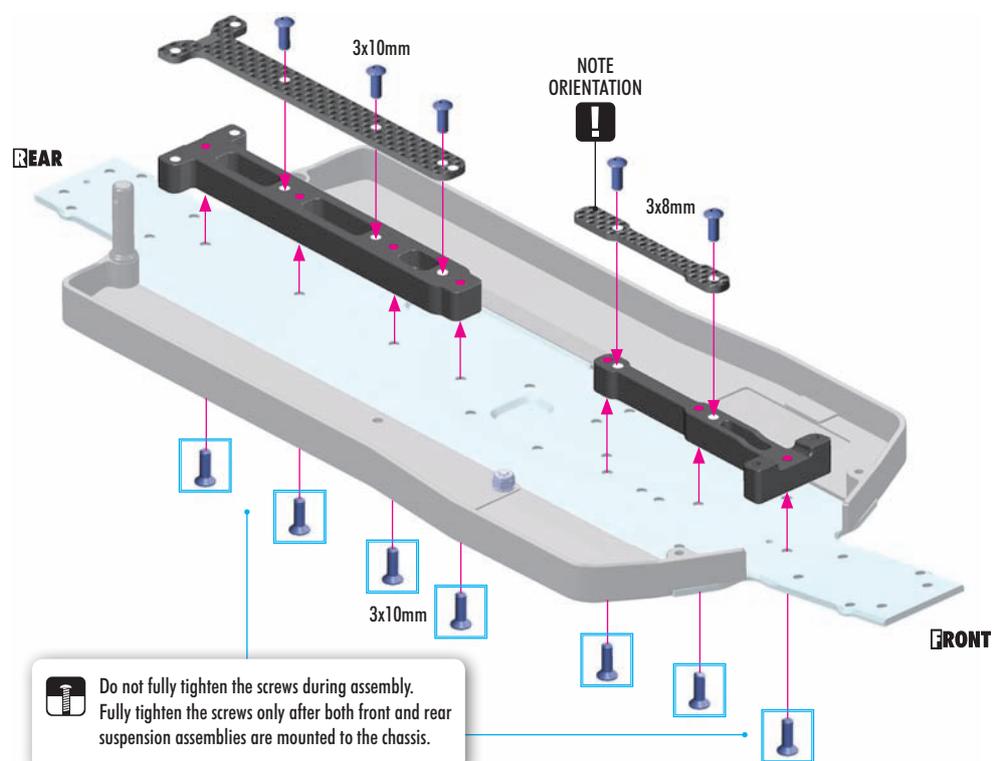

**NOTE ORIENTATION**

Do not fully tighten the screws during assembly. Fully tighten the screws only after both front and rear suspension assemblies are mounted to the chassis.

**#361179**  
BRASS CHASSIS BRACE REAR (40g)  
OPTION

**#361295**  
COMPOSITE CHASSIS BRACE REAR - MEDIUM  
OPTION

**#361294**  
COMPOSITE CHASSIS BRACE FRONT - MEDIUM  
OPTION

# 4. FRONT & REAR ASSEMBLY




902316  
SH M3x16



903310  
SFH M3x10



903316  
SFH M3x16

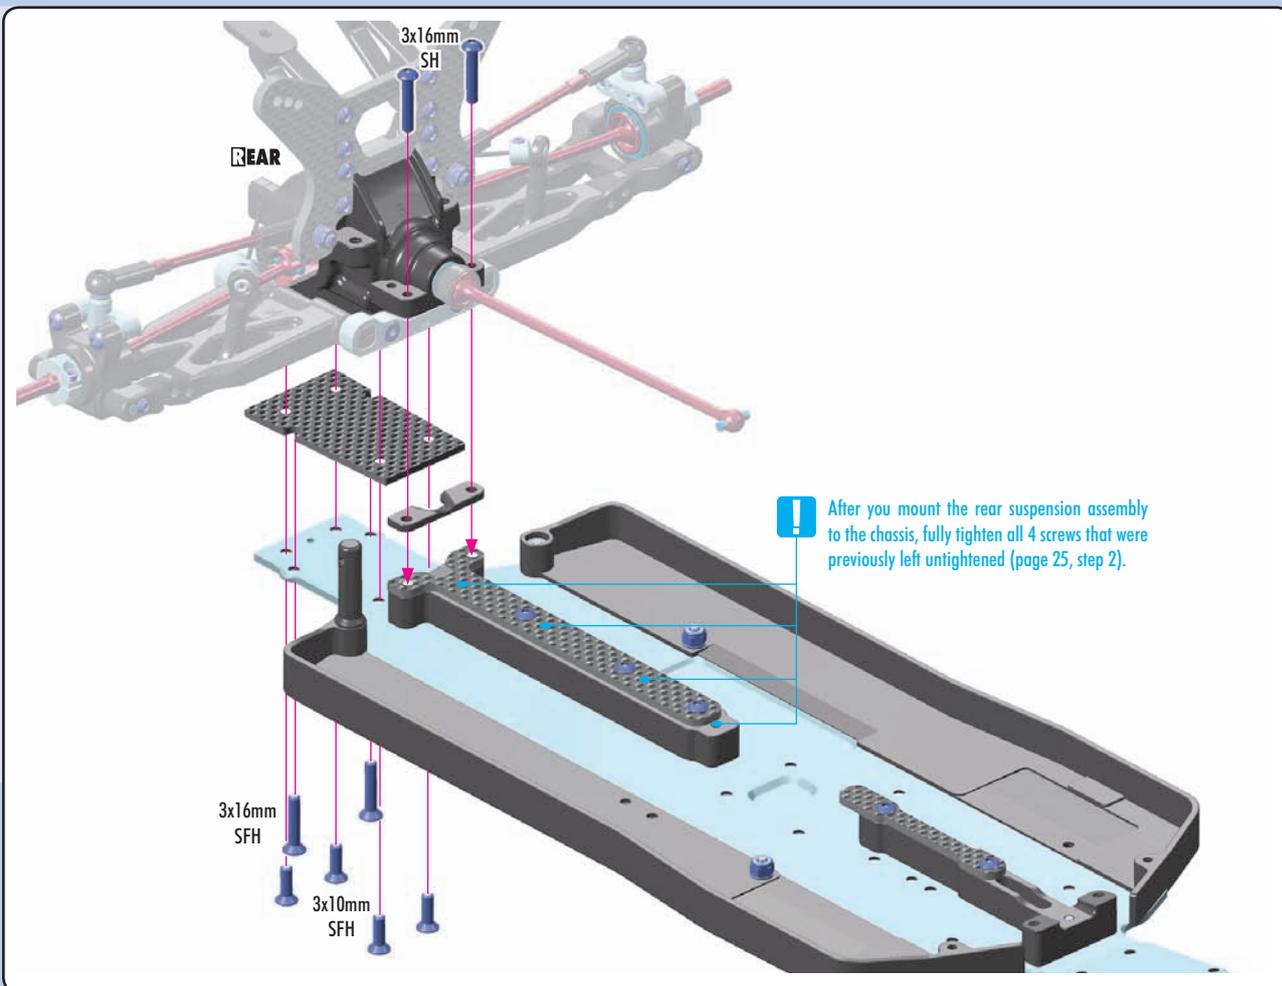


902312  
SH M3x12




903310  
SFH M3x10



903316  
SFH M3x16

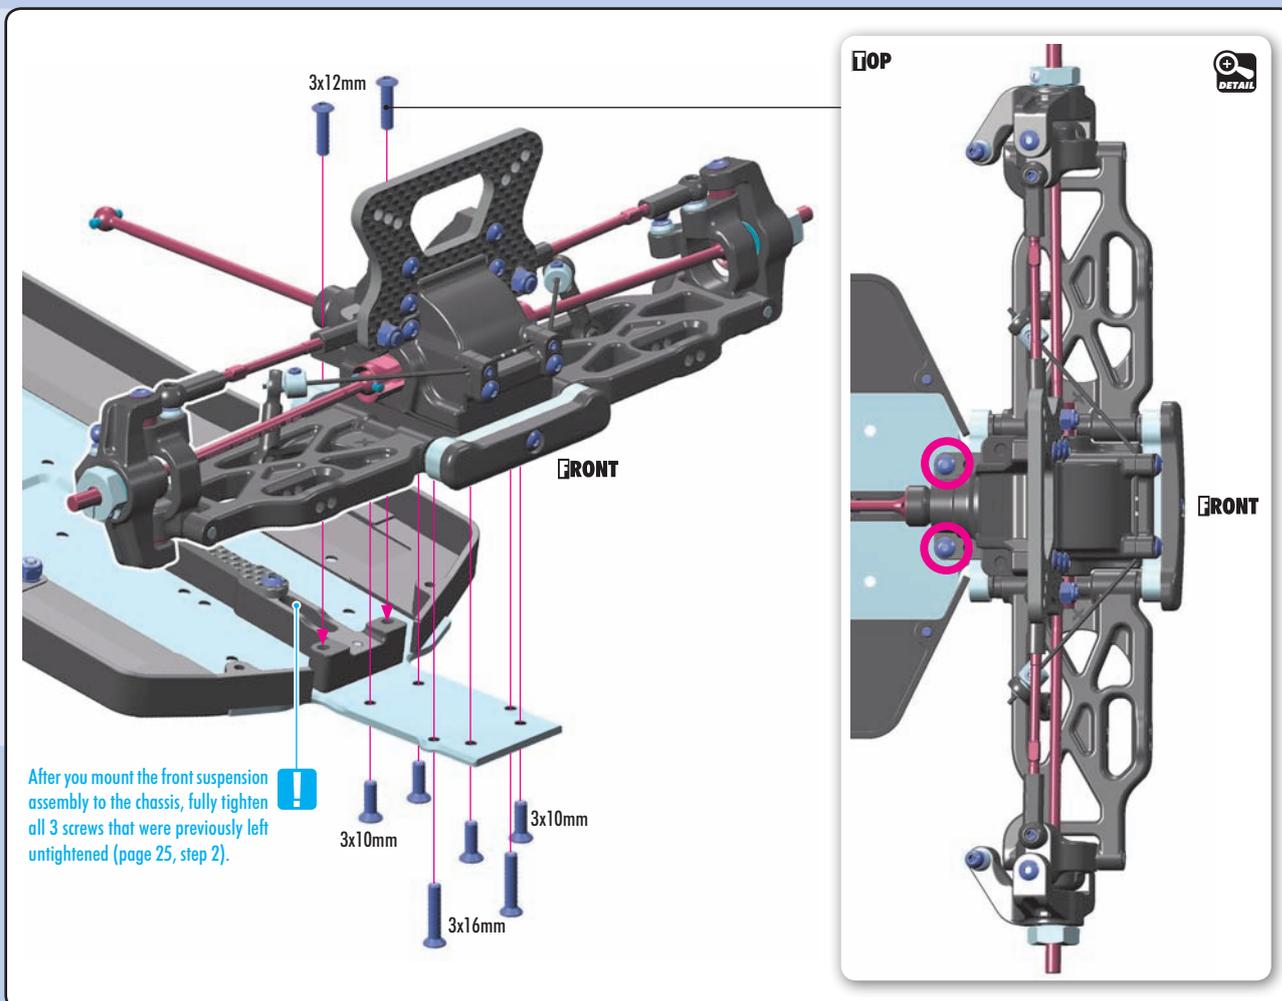

# 5. STEERING

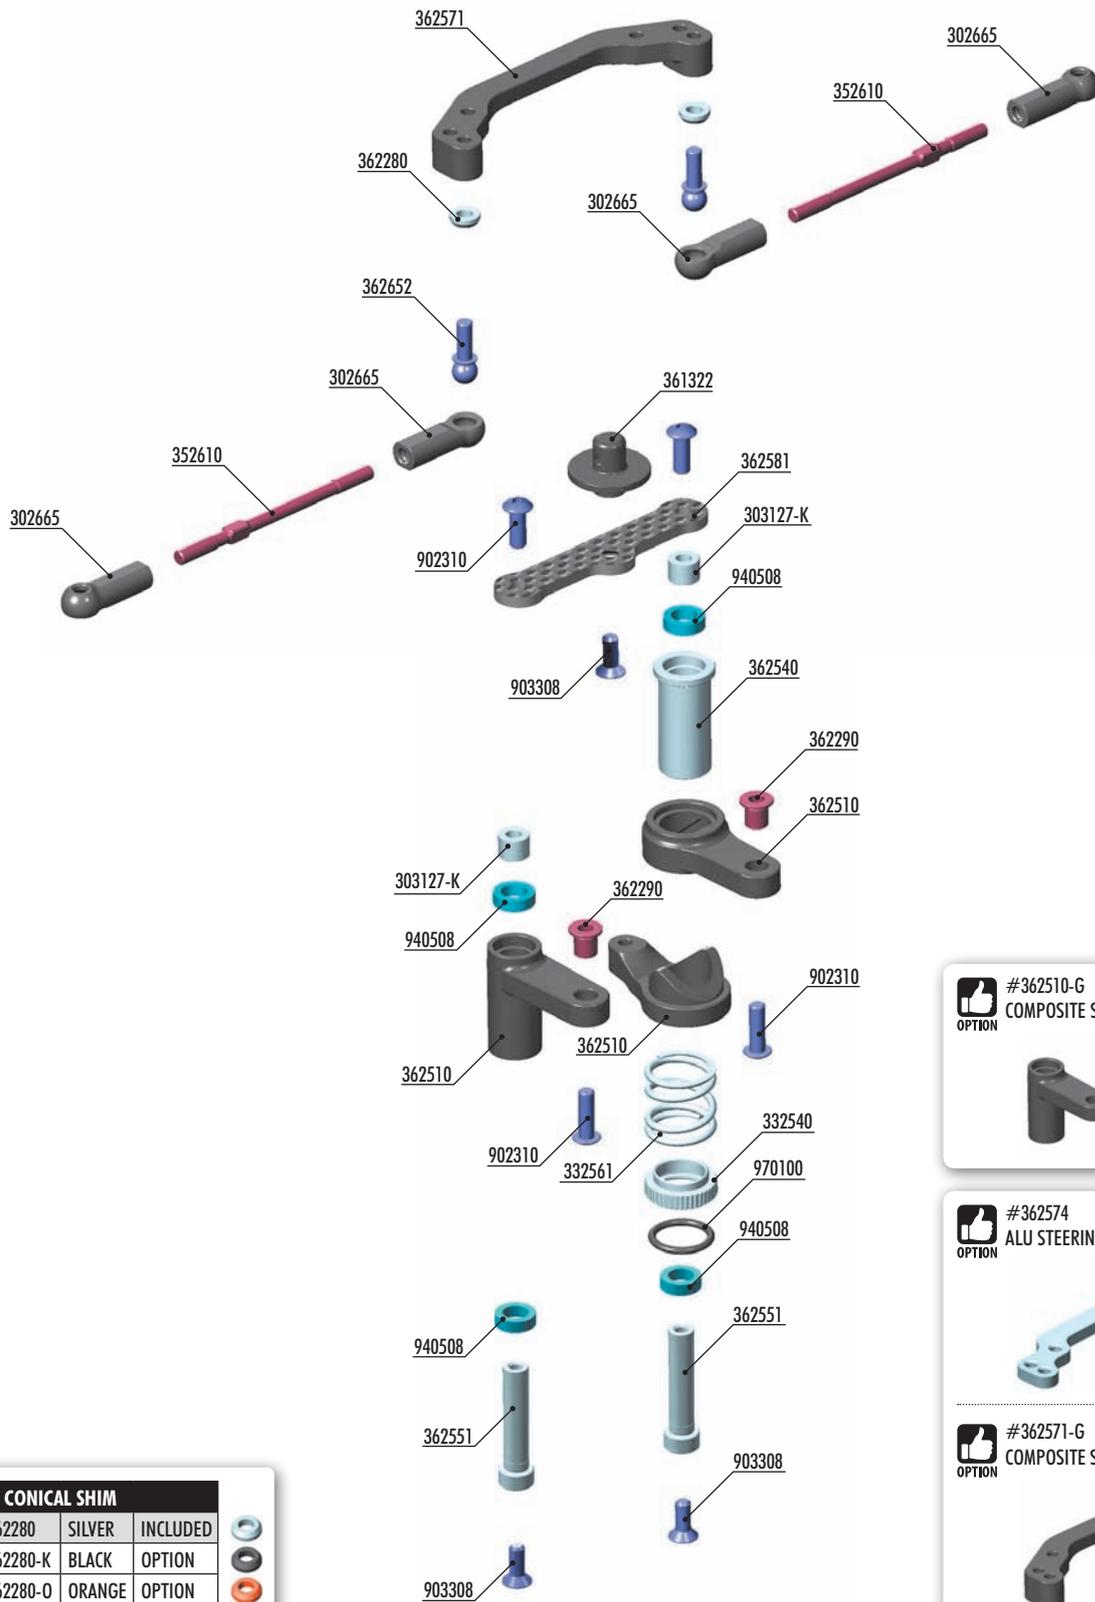

ALU CONICAL SHIM			
#362280	SILVER	INCLUDED	
#362280-K	BLACK	OPTION	
#362280-O	ORANGE	OPTION	

**BAG**  
**05**

- 302665 COMPOSITE BALL JOINT 4.9MM - CLOSED WITH HOLE (4)
- 303127-K ALU SHIM 3x6x4.0MM - BLACK (10)
- 332540 ALU SERVO SAVER ADJUSTABLE NUT
- 332561 SERVO SAVER SPRING C=14
- 352610 ADJ. TURNBUCKLE M3 L/R 45MM - SPRING STEEL (2)
- 361322 BODY MOUNT - EXTRA-SHORT
- 362280 ALU CONICAL SHIM 3x6x2.0MM (10)
- 362290 STEEL STEERING BUSHING - SHORT (2)
- 362510 COMPOSITE SERVO SAVER
- 362540 ALU SERVO SAVER MAIN SHAFT
- 362551 SERVO SAVER PIVOT SHAFT +2MM (2)


- 362571 COMPOSITE STEERING PLATE
- 362581 STEERING BRACE 2.0MM GRAPHITE
- 362652 BALL END 4.9MM WITH THREAD 10MM (2)
- 902310 HEX SCREW SH M3x10 (10)
- 903308 HEX SCREW SFH M3x8 (10)
- 940508 BALL-BEARING 5x8x2.5 RUBBER SEALED - OIL (2)
- 970100 O-RING 10 x 1.5 (10)




# 5. STEERING



903308  
SFH M3x8

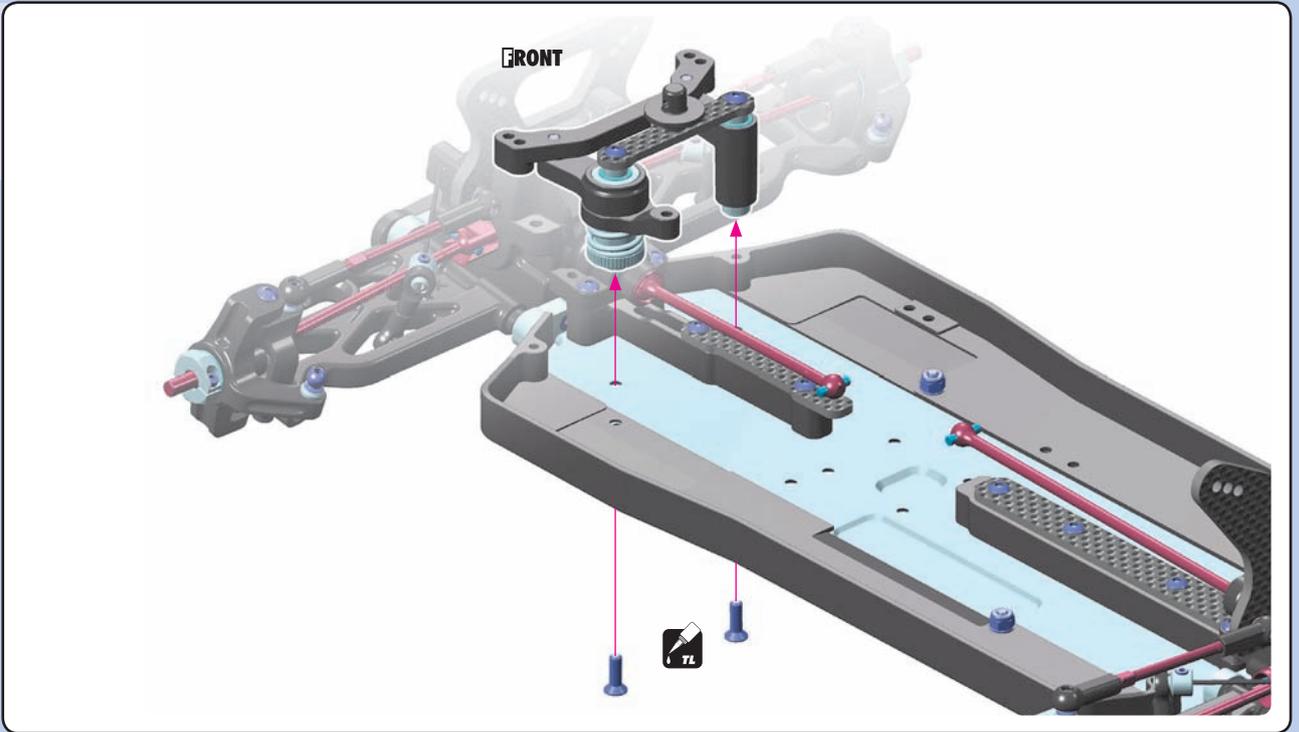

2x L=R

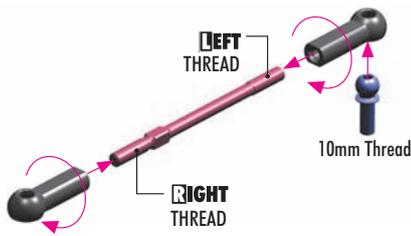


**TIP** Install the pivot balls with Professional Multi Tool (HUDY #183011)




362280  
CON. SHIM 3x6x2

2x L=R

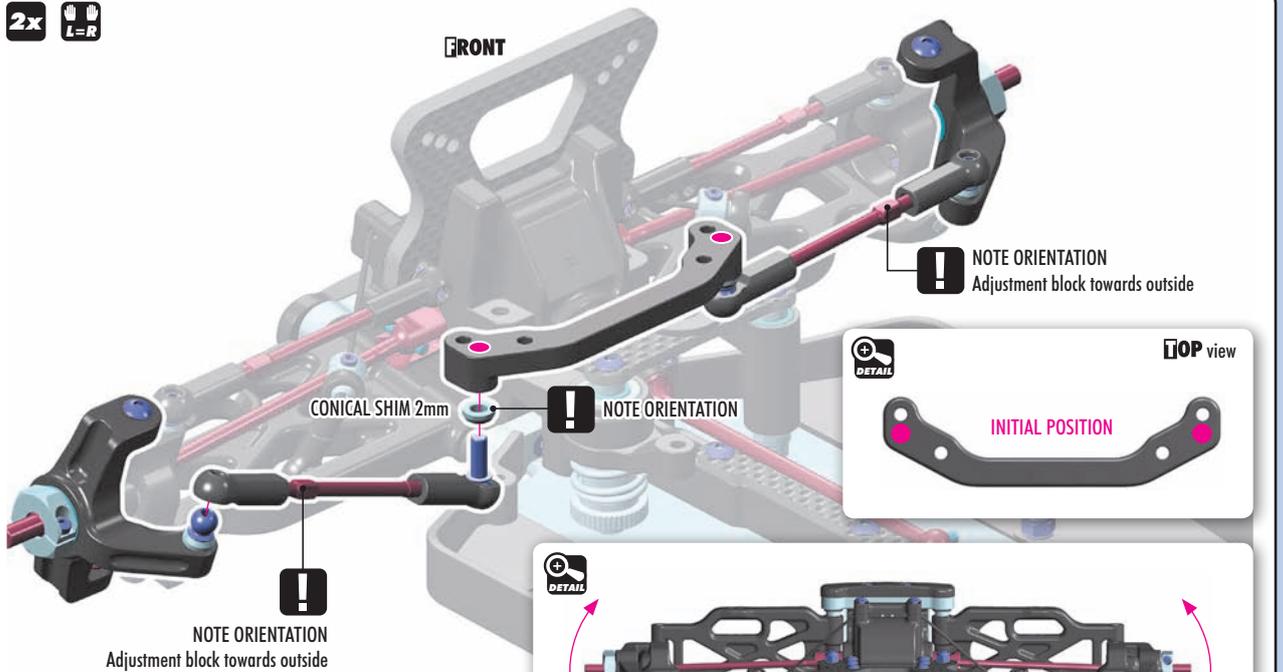

**SET-UP BOOK**  
ACKERMANN  
BUMP STEER  
TOE-IN

OPTION	ALU CONICAL SHIM			
#362280	SILVER	INCLUDED		
#362280-K	BLACK	OPTION		
#362280-O	ORANGE	OPTION		

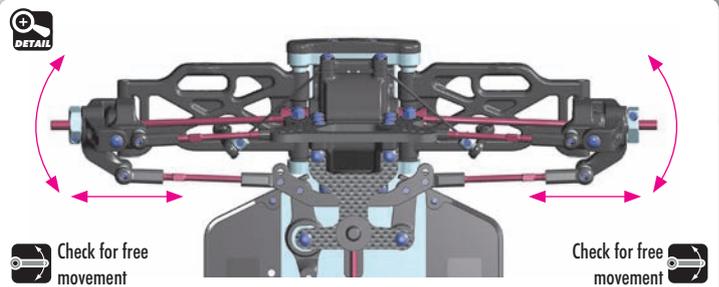

# 6. SLIPPER CLUTCH ASSEMBLY

#364904  
OPTION  
GEAR CENTER DIFFERENTIAL - SET

#364024  
OPTION  
ALU CENTRAL BULKHEAD

**SLIPPER CLUTCH SPUR GEARS**

#365875	75T / 48	OPTION
#365878	78T / 48	OPTION
#365881	81T / 48	INCLUDED
#365884	84T / 48	OPTION
#365887	87T / 48	OPTION

<p><b>BAG</b></p> <p><b>06</b></p>	361176	XB4'20 GRAPHITE CENTER UPPER DECK 2MM	365881	COMPOSITE SLIPPER CLUTCH SPUR GEAR 81T / 48 - GRAPHITE
	361188	XB4'20 GRAPHITE REAR UPPER BRACE 2MM	901304	HEX SCREW SB M3x4 (10)
	361320	BODY MOUNT, BATTERY MOUNT - V2 & WING SHIM (2)	902304	HEX SCREW SH M3x4 (10)
	364013	ALU MOTOR BULKHEAD - LOWER	902306	HEX SCREW SH M3x6 (10)
	364023	COMPOSITE CENTRAL BULKHEAD - LOWER	902308	HEX SCREW SH M3x8 (10)
	364113	3-PAD SLIPPER CLUTCH SHAFT - NARROW - HUDY SPRING STEEL™	902318	HEX SCREW SH M3x18 (10)
	364120	ALU SLIPPER CLUTCH PLATE - 7075 T6 BLACK HARD COATED	903308	HEX SCREW SFH M3x8 (10)
	364121	ALU 3-PAD SLIPPER CLUTCH PLATE WITH ADAPTER - 7075 T6 HARD COATED	941015	BALL-BEARING 10x15x4 RUBBER SEALED - OIL (2)
	364131	SLIPPER CLUTCH PAD "SLS" (2)	980212	PIN 2x11.6 (10)
	364140	ALU 3-PAD SLIPPER CLUTCH PLATE DISC - 7075 T6 HARD COATED	981208	PIN 2x8 (10)
	364172	SLIPPER CLUTCH OUTDRIVE ADAPTER - NARROW - HUDY SPRING STEEL™		
	364182	SLIPPER CLUTCH SPRING C=46 - BLACK		
	364190	ALU SLIPPER CLUTCH NUT - V2		

901304  
SB M3x4

980212  
P 2x11.6

NOTE ORIENTATION

902304  
SH M3x4

981208  
P 2x8

**VERY IMPORTANT!**  
It is very important that you NEVER FULLY TIGHTEN the Slipper Clutch. Overtightening the Slipper Clutch may result in breakage of the diff crown gear and pinion gear.

0~0.5mm

**SLIPPER ADJUSTMENT:**  
The Slipper Clutch is easily adjusted by the set-screw in the bushing. The more the spring is tightened (bushing moved more inwards), the more the Slipper Clutch is tightened.

**INITIAL INSTALLATION POSITION SHOWN**  
Detailed information on slipper adjustment can be found on page 32.


# 6. SLIPPER CLUTCH ASSEMBLY



902318  
SH M3x18




903308  
SFH M3x8

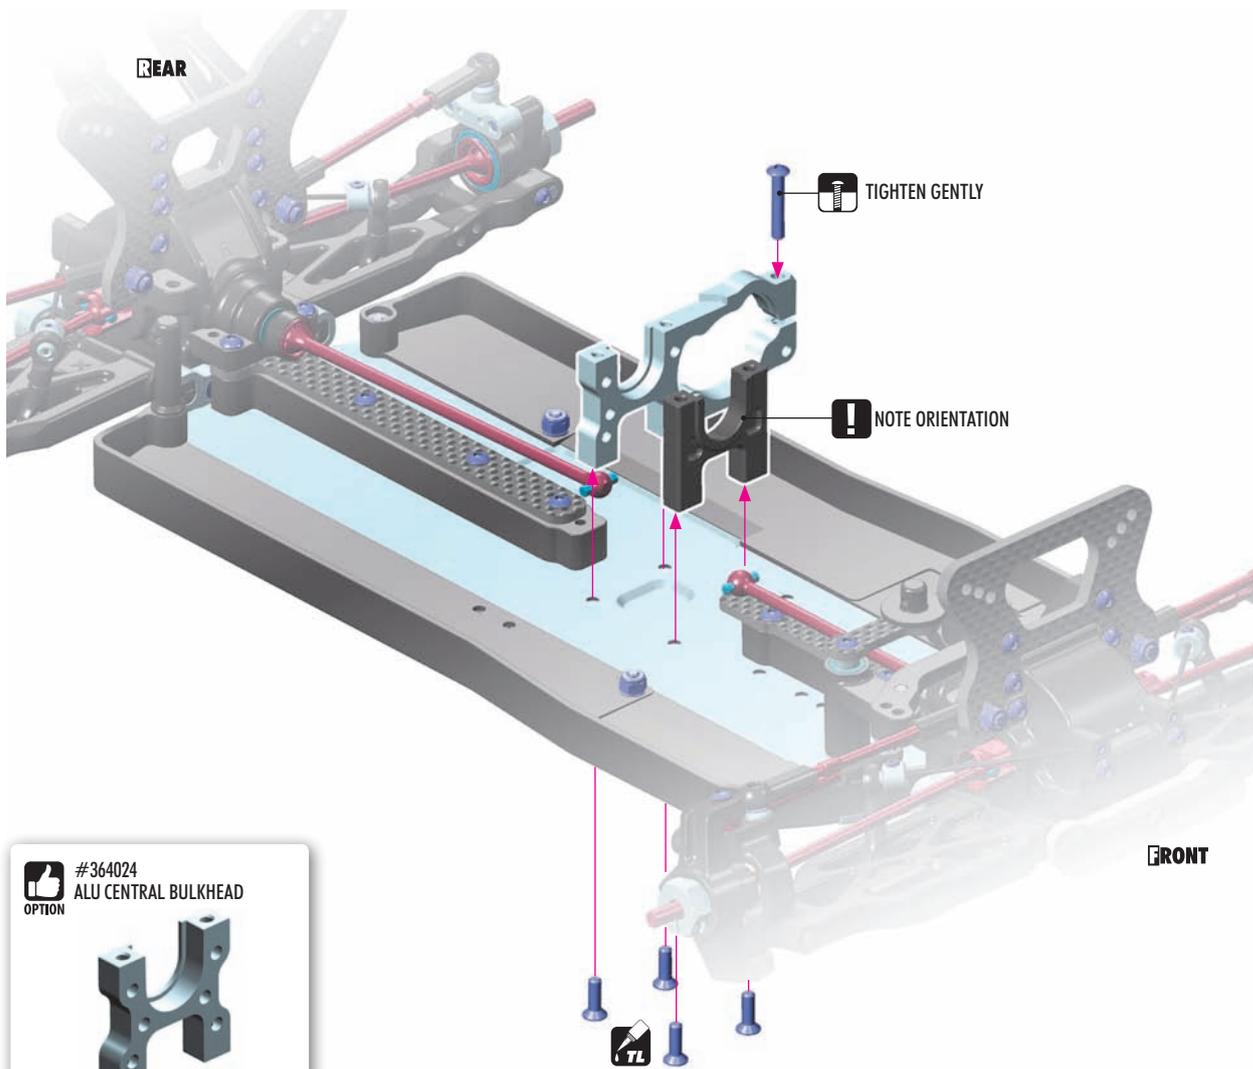

#364024  
ALU CENTRAL BULKHEAD  
OPTION



941015  
BB 10x15x4

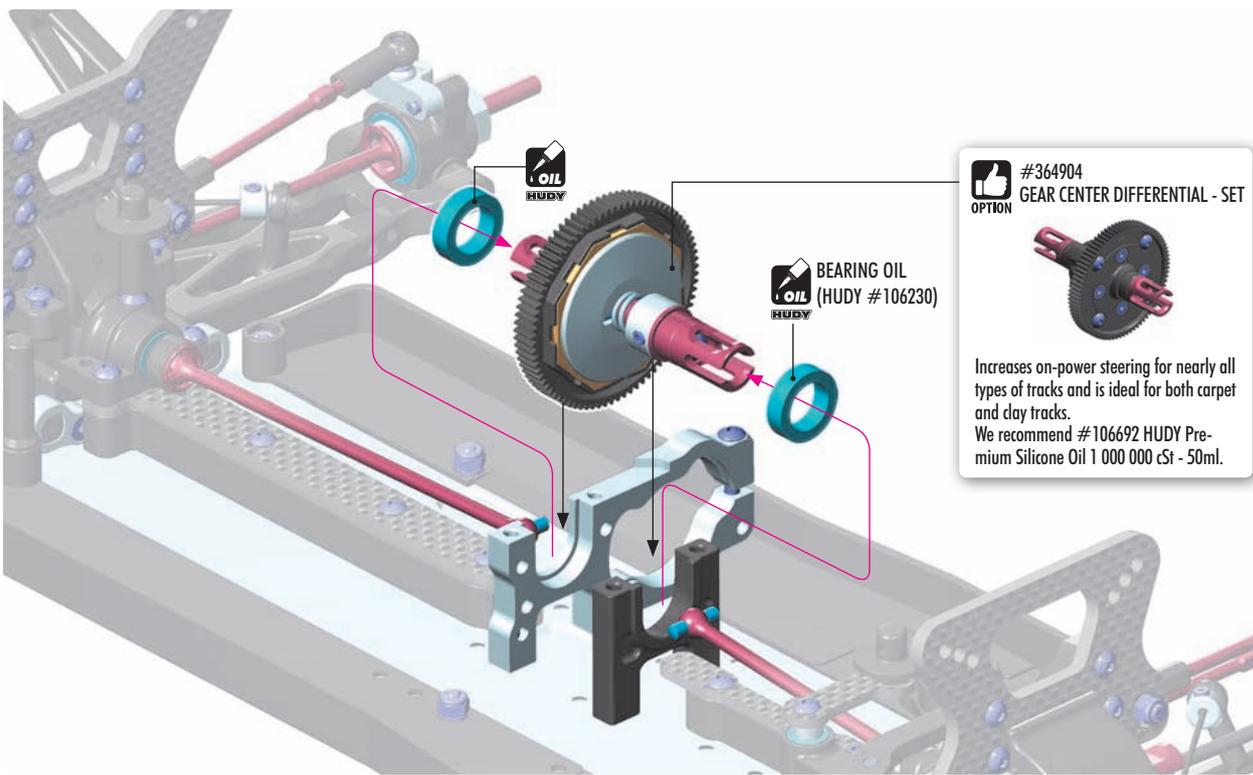

#364904  
GEAR CENTER DIFFERENTIAL - SET  
OPTION



Increases on-power steering for nearly all types of tracks and is ideal for both carpet and clay tracks.  
We recommend #106692 HUDY Premium Silicone Oil 1 000 000 cSt - 50ml.




# 6. SLIPPER CLUTCH ASSEMBLY

## SLIPPER CLUTCH ADJUSTMENT



The Slipper Clutch can be adjusted by loosening the set-screw and then, while keeping the tool inside of the set-screw, rotating the spur gear by hand as indicated in the drawing.

To **LOOSEN**: Rotate the spur gear in the counterclockwise (CCW) direction.


To **TIGHTEN**: Rotate the spur gear in the clockwise (CW) direction.

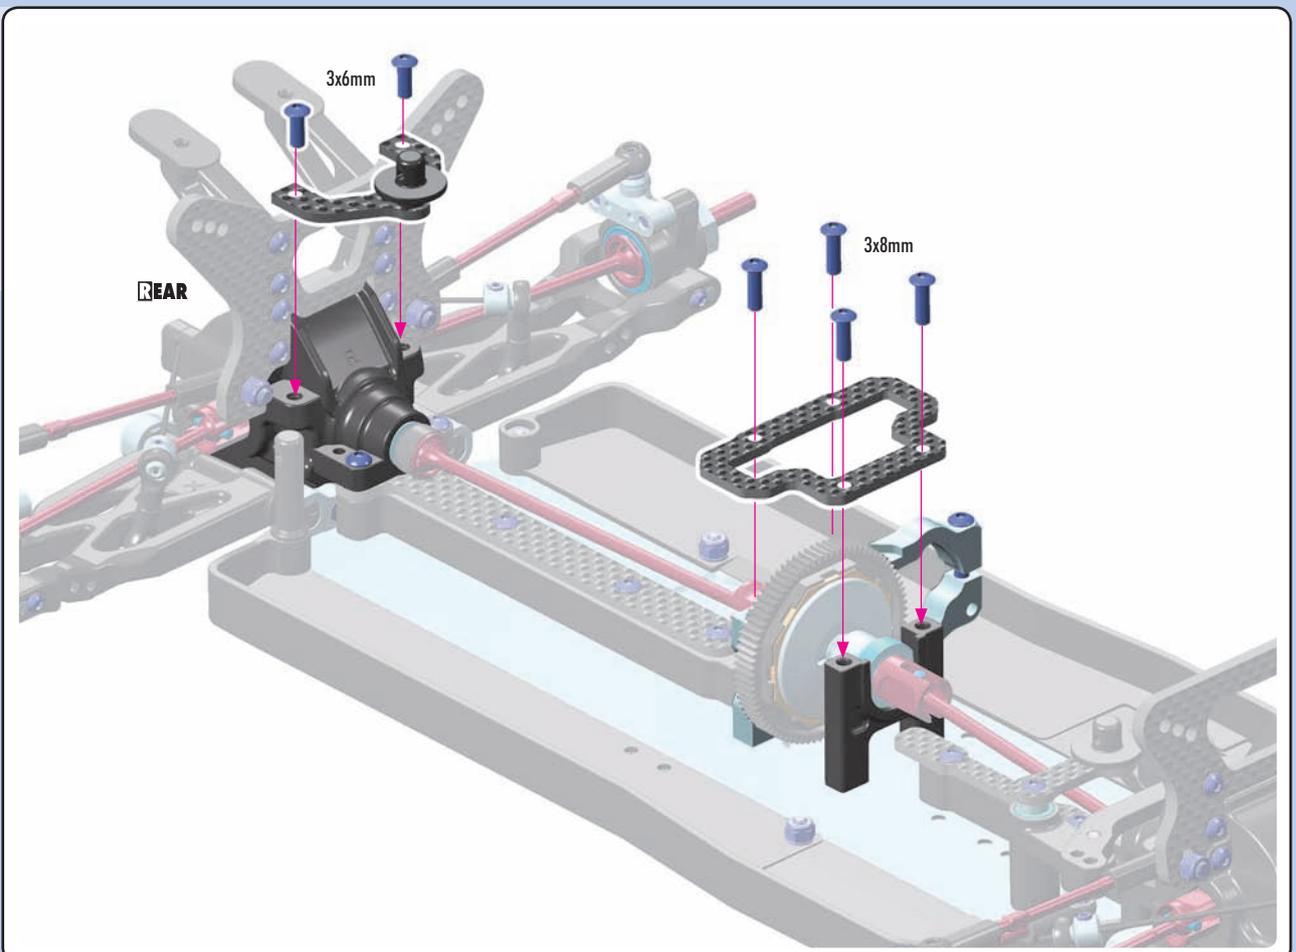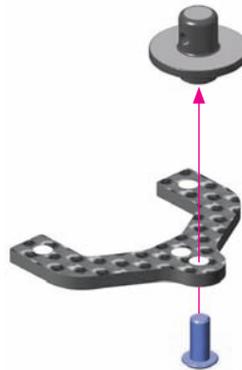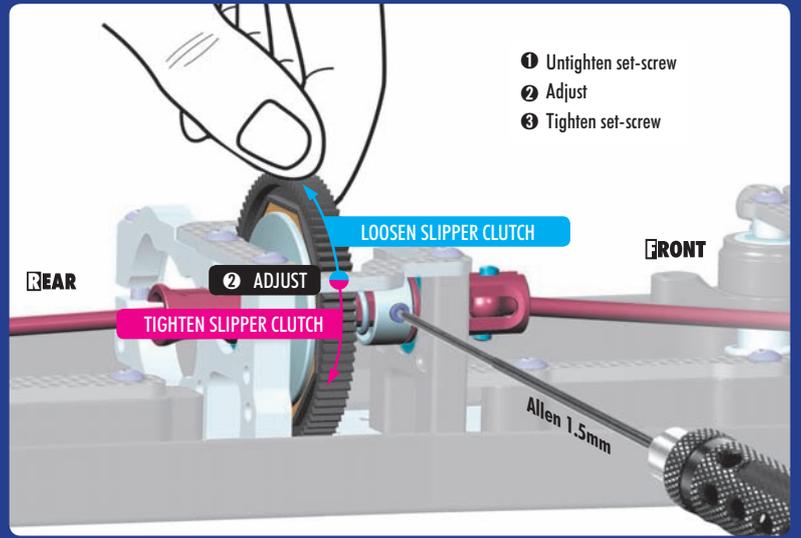

# 7. SHOCK ABSORBERS

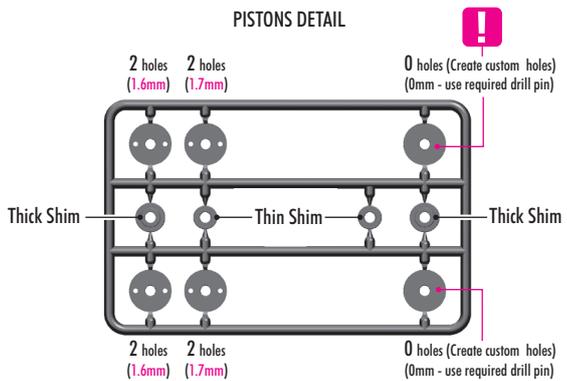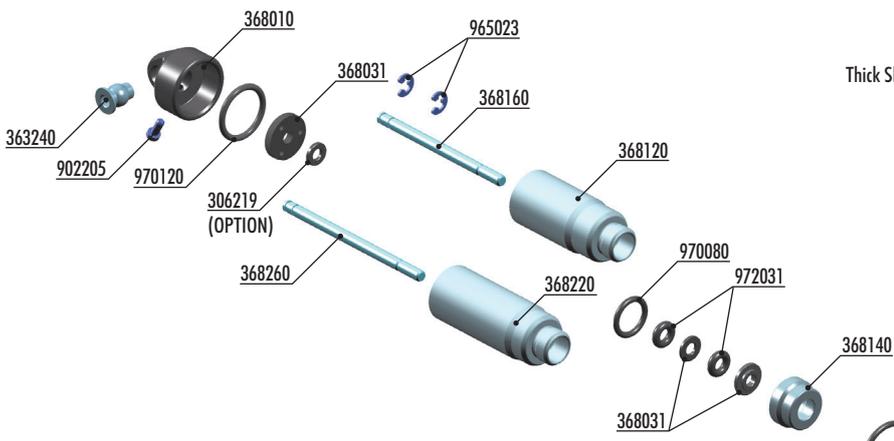

**!**  
These pistons can NOT be used in shocks without making the custom holes by yourselves.

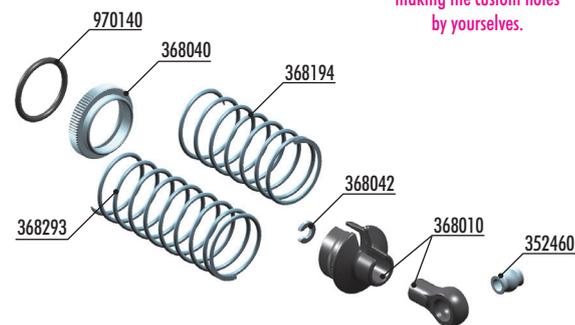

FRONT SPRINGS				
#368191	LINEAR	42mm	1 DOTS	OPTION
#368192	LINEAR	42mm	2 DOTS	OPTION
#368193	LINEAR	42mm	3 DOTS	OPTION
#368194	LINEAR	42mm	4 DOTS	INCLUDED
#368195	LINEAR	42mm	5 DOTS	OPTION



REAR SPRINGS				
#368292	LINEAR	57mm	2 DOTS	OPTION
#368293	LINEAR	57mm	3 DOTS	INCLUDED
#368294	LINEAR	57mm	4 DOTS	OPTION



FRONT SPRINGS				
#368174	PROGRESS. 45mm	2 STRIPES		OPTION
#368175	PROGRESS. 40mm	3 DOTS		OPTION
#368182	LINEAR 45mm	1 STRIPE & 3 DOTS		OPTION
#368183	LINEAR 45mm	1 DOT		OPTION
#368184	LINEAR 45mm	2 DOTS		OPTION
#368185	LINEAR 45mm	3 DOTS		OPTION
#368186	LINEAR 45mm	4 DOTS		OPTION



REAR SPRINGS				
#368273	PROGRESS. 60mm	2 STRIPES		OPTION
#368275	PROGRESS. 55mm	2 DOTS		OPTION
#368283	LINEAR 63mm	1 STRIPE & 3 DOTS		OPTION
#368284	LINEAR 60mm	1 DOT		OPTION
#368285	LINEAR 60mm	2 DOTS		OPTION
#368286	LINEAR 60mm	3 DOTS		OPTION
#368287	LINEAR 60mm	4 DOTS		OPTION



#104004  
HUDY AIR VAC - VACUUM PUMP - 1/10 OFF-ROAD



- 306219 COMPOSITE SET OF SERVO SHIMS (4)
- 352460 PIVOT BALL 5.8 - V3 (10)
- 363240 BALL UNIVERSAL 5.8MM WITH BACKSTOP (2)
- 368010 COMPOSITE SHOCK PARTS
- 368031 SHOCK PISTONS - COMPLETE SET - DERLIN - V2
- 368040 ALU SHOCK ADJUSTABLE NUT (2)
- 368042 COMPOSITE SHOCK BUSHING & SHIM FOR ALU CAP (2+2)
- 368100 FRONT SHOCK ABSORBERS COMPLETE SET (2)
- 368120 ALU FRONT SHOCK BODY - HARD COATED (2)
- 368140 ALU LOWER SHOCK BODY CAP (2)
- 368160 FRONT HARDENED SHOCK SHAFT (2)
- 368194 FRONT SPRING SET L=42MM (4 DOTS) (2)
- 368200 REAR SHOCK ABSORBERS COMPLETE SET (2)
- 368220 ALU REAR SHOCK BODY - HARD COATED (2)
- 368260 REAR HARDENED SHOCK SHAFT (2)

- 368293 REAR SPRING SET L=57MM (3 DOTS) (2)
- 902205 HEX SCREW SH M2x5 (10)
- 965023 E-CLIP 2.3 (10)
- 970080 O-RING 8x1 (10)
- 970120 O-RING 12 x 1.0 (10)
- 970140 O-RING 14 x 1.5 (10)
- 972031 SILICONE O-RING 3x2.1 (10)

# 7. SHOCK ABSORBERS

965023  
C 2.3

970080  
O 8x1

972031  
O 3x2.1

## SET-UP BOOK

SHOCK DAMPING  
SHOCK PISTONS

2x FRONT  
FRONT - SHORT SHOCK ROD  
2 holes (1.6mm)

INITIAL PISTON SETTING


2x REAR  
REAR - LONG SHOCK ROD  
2 holes (1.7mm)

4x  
THICK Shim  
O-ring  
THIN Shim  
O-ring

There are two different thickness shims, use them as shown. Use the same procedure when building both front and rear shocks.




#306219  
OPTION  
DOWNSTOP SHIMS

THICKER shim used, GREATER downstop is achieved.

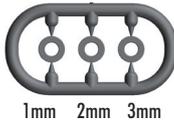

IMPORTANT


Always use same shim thickness on right and left side to achieve same downstop.

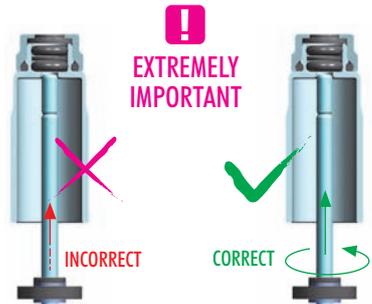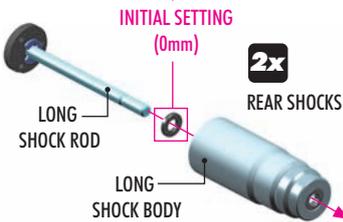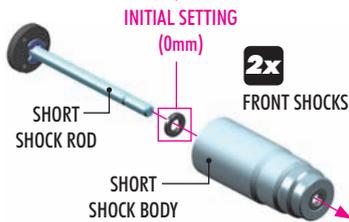


Do not push the shock rod straight through the lower shock body assembly; O-ring damage may result.

Twist the shock rod through the lower shock body assembly.

970140  
O 14x1.5

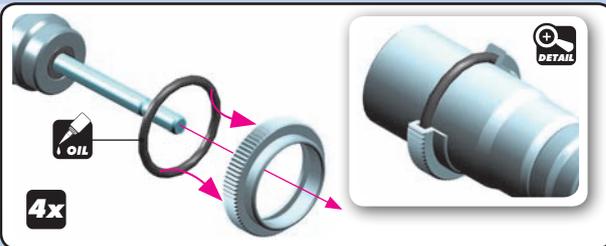

970120  
O 12x1

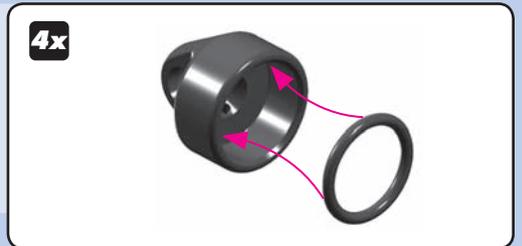


## UP-STOP "C" SHIMS

INITIAL SETTING

FRONT REAR



UP-STOP SHIM

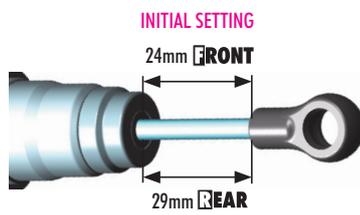

TIP Install the pivot balls with Professional Multi Tool (HUDY #183011)

# 7. SHOCK ABSORBERS

## IMPORTANT

### UP-STOP TRAVEL SETTINGS

It is very important to have properly set the up-stop travel to avoid damage to the drive shaft and diff outdrives.

To avoid collision of the drive shaft with diff outdrives use the up-stop travel shims to set-up the up-stop travel.


All these settings have influence on the up-stop travel:

- Length of arms (long/short)
- Length of drive shafts
- Shock positions
- Eccentric bushings in suspension holders
- Eccentric bushings in rear uprights
- Camber

UP-STOP SHIM

UP-STOP TRAVEL

ENSURE NO COLLISION !

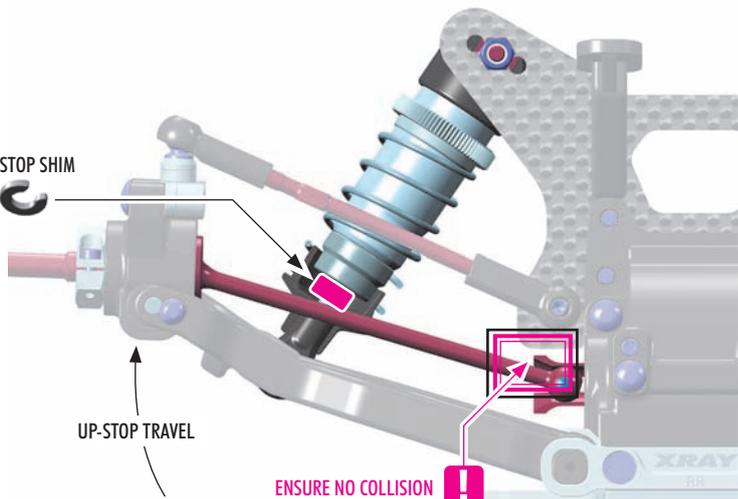

### DEFAULT SHOCK REBOUND SETTING 0% REBOUND

**2x** FRONT (SHORT)  
Oil 700cSt

**2x** REAR (LONG)  
Oil 500cSt

**1** Extend the shock shaft completely. Fill the shock body with the shock oil. For the FRONT shocks use 700cSt oil. For the REAR shocks use 500cSt oil.

**2** Move the shock shaft up and down a few times to release the air bubbles trapped beneath the piston.

**3** Orient the filled shock vertically for several minutes with the shock shaft fully extended. The remaining air bubbles will release.

**4** Gently place the shock cap onto the filled shock body and start to tighten the cap fully.

**5** Gently push the shock shaft completely into the shock body. Excess oil will flow through the hole in the shock cap.

**6** Keep the shock shaft pushed in the shock body and insert the screw into the shock cap. Tighten gently.

**7** 6x push the shaft up and down.

**8** Untighten the screw.

**9** Gently push the shock shaft completely into the shock body. Excess oil will flow through the hole in the shock cap.

**10** Tighten the screw. The rebound will be at approx. 0%.

902205 SH M2x5


Keep the shock shaft pushed in the shock body and insert the screw into the shock cap. Tighten gently.

6x push the shaft up and down.

Untighten the screw.


Gently push the shock shaft completely into the shock body. Excess oil will flow through the hole in the shock cap.

Tighten the screw. The rebound will be at approx. 0%.

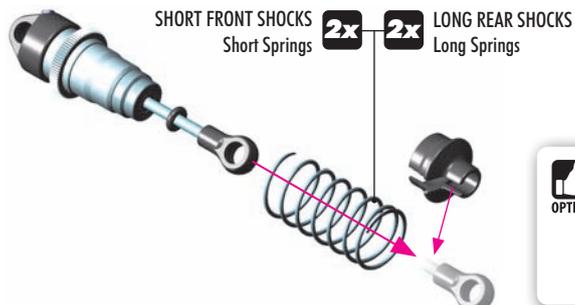


**2x** FRONT SHOCKS (SHORT)  
**2x** REAR SHOCKS (LONG)

**#368021**  
OPTION  
ALU SHOCK SPRING RETAINING COLLAR (4)

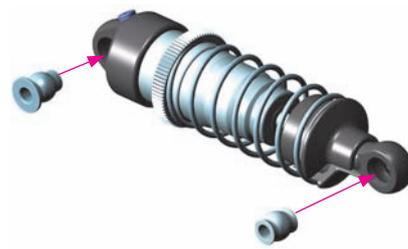

# 8. FINAL ASSEMBLY

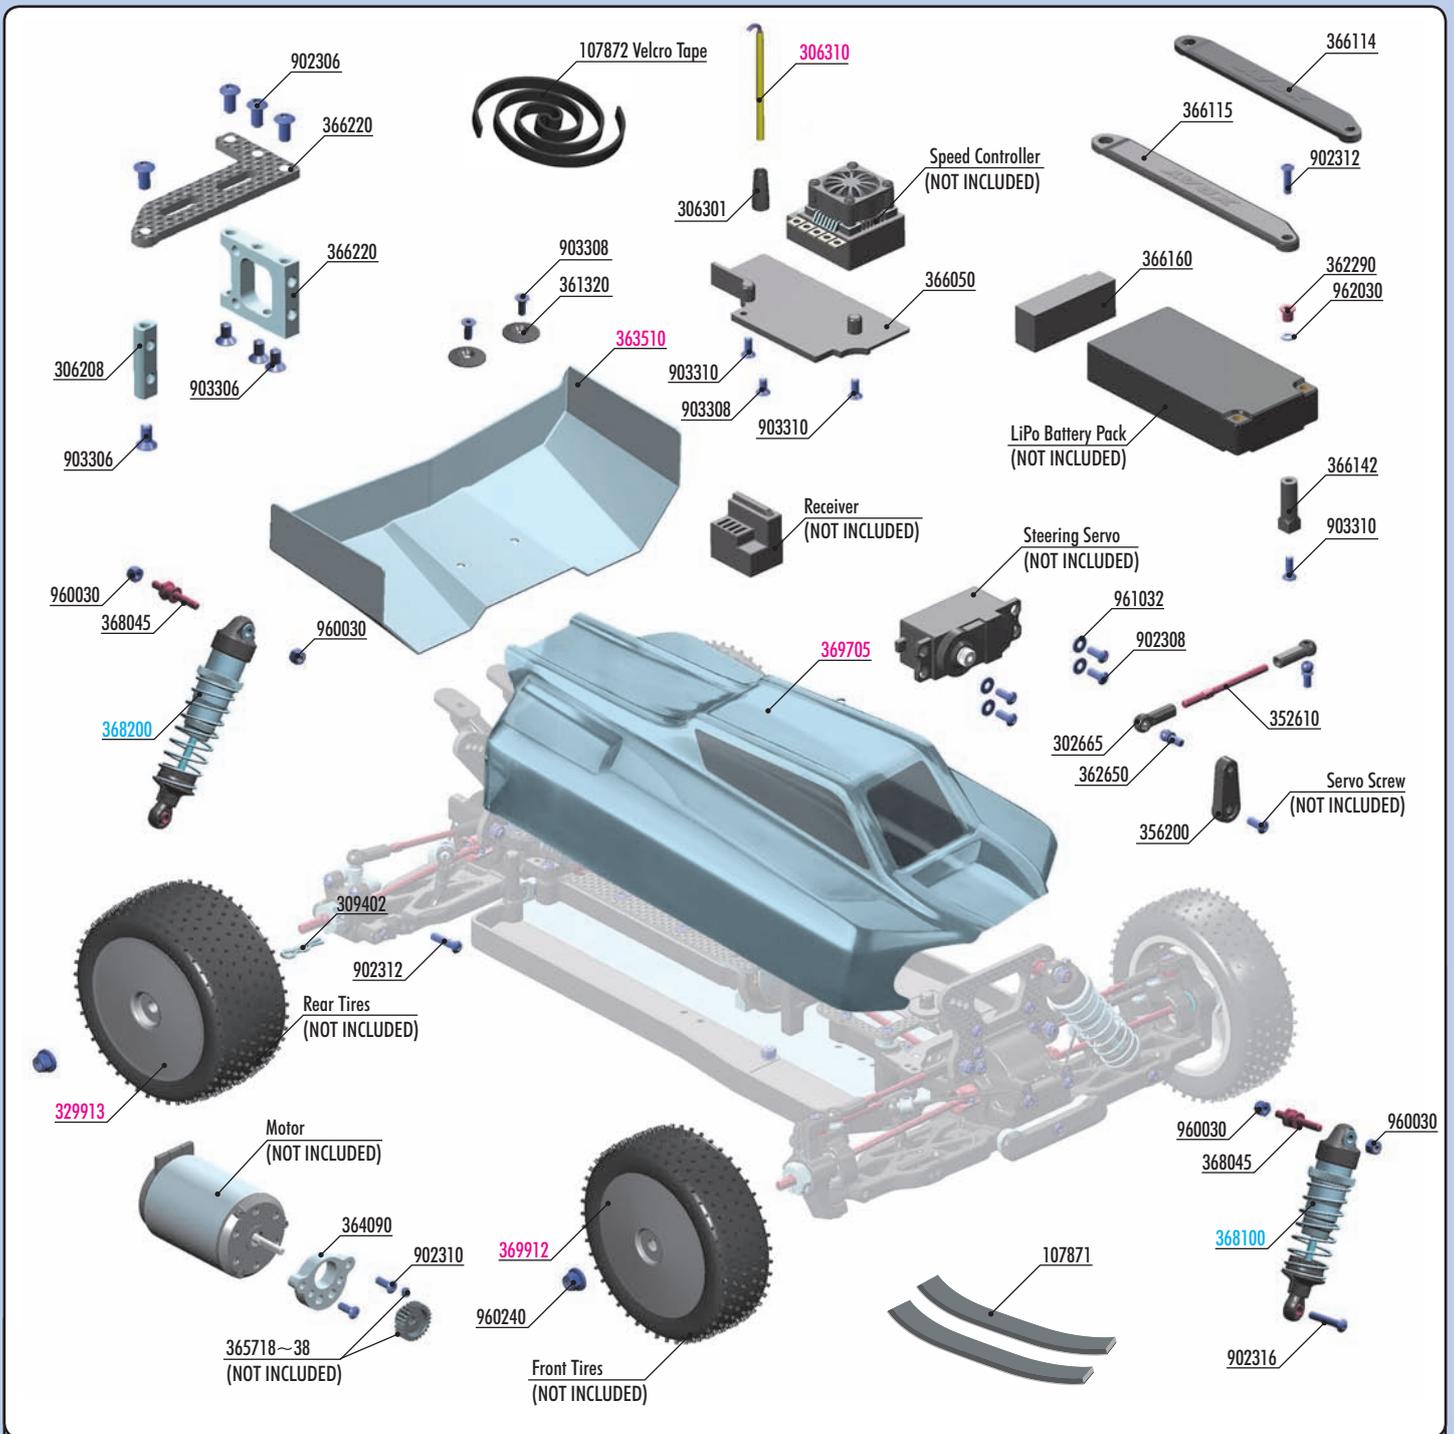

- |           |   |        |  |
|-----------|---|--------|--|
| 107871    | HUDY SELF-ADHESIVE FOAM STRIP (2)                 | 902306 | HEX SCREW SH M3x6 (10)                         |
| 107872    | VELCRO TAPE WITH DOUBLE SIDED TAPE 8x500MM        | 902308 | HEX SCREW SH M3x8 (10)                         |
| 302665    | COMPOSITE BALL JOINT 4.9MM - CLOSED WITH HOLE (4) | 902310 | HEX SCREW SH M3x10 (10)                        |
| 306208    | ALU SERVO MOUNT - BOTH SIDES THREADED             | 902312 | HEX SCREW SH M3x12 (10)                        |
| 306301    | ANTENNA MOUNT - THIN                              | 902316 | HEX SCREW SH M3x16 (10)                        |
| 309402    | BODY CLIP FOR 6MM BODY POST (4)                   | 903306 | HEX SCREW SFH M3x6 (10)                        |
| 352610    | ADJ. TURNBUCKLE M3 L/R 45 MM - SPRING STEEL™ (2)  | 903308 | HEX SCREW SFH M3x8 (10)                        |
| 356200    | BRAKE/THROTTLE ARMS & STEERING SERVO ARMS - SET   | 903310 | HEX SCREW SFH M3x10 (10)                       |
| 361320    | BODY MOUNT, BATTERY MOUNT - V2 & WING SHIM (2)    | 960030 | NUT M3 (10)                                    |
| 362290    | STEEL STEERING BUSHING - SHORT (2)                | 961032 | WASHER S 3.2 (10)                              |
| 362650    | BALL END 4.9MM WITH THREAD 6MM (2)                | 962030 | WASHER S 3x6x0.3 (10)                          |
| 364090    | ALU ECCENTRIC MOTOR BULKHEAD INSERT - V3          | 960240 | NUT M4 WITH SERRATED FLANGE (10)               |
| 365718~38 | ALU PINION GEAR HARD COATED 18~38T/48 (OPTION)    | 368100 | FRONT SHOCK ABSORBERS COMPLETE SET (2)         |
| 366050    | COMPOSITE RADIO PLATE - V2                        | 368200 | REAR SHOCK ABSORBERS COMPLETE SET (2)          |
| 366114    | COMPOSITE BATTERY STRAP - LONG                    | 306310 | ANTENNA (2)                                    |
| 366115    | COMPOSITE BATTERY STRAP - LONG XL                 | 363510 | LEXAN REAR WING (2)                            |
| 366142    | COMPOSITE BATTERY HOLDER STAND (2)                | 369705 | XRAY XB4 BODY                                  |
| 366160    | FOAM SPACER FOR BATTERY                           | 369912 | FRONT WHEEL AERODISK WITH 12MM HEX - WHITE (2) |
| 366220    | INDEPENDENT SERVO MOUNT - V2 - SET                | 329913 | REAR WHEEL AERODISK WITH 12MM HEX - WHITE (2)  |
| 368045    | STEEL SCREW SHOCK PIVOT BALL WITH HEX (2)         |        |  |

# 8. FINAL ASSEMBLY

**902316**  
SH M3x16

**960030**  
N M3

**INITIAL POSITION**

**902312**  
SH M3x12

**960030**  
N M3

**INITIAL POSITION**

**ALU NUTS M3**

OPTION	ALU NUTS M3	OPTION
#296530-B	BLUE	OPTION
#296530-K	BLACK	OPTION
#296530-O	ORANGE	OPTION
#960031	SILVER	INCLUDED

### SERVO LINK

Adjust servo link to fit your servo.

**TIP** Install the pivot balls with Professional Multi Tool (HUDY #183011)

**902306**  
SH M3x6

**902308**  
SH M3x8

**961032**  
SHIM S 3.2

**HUDY ALU SERVO HORNS**

#293497	23T
#293498	24T
#293499	25T

**HUDY CLAMP ALU SERVO HORNS**

#293404	23T
#293405	24T
#293406	25T

For more in-corner steering and better steering response, aluminum servo horns may be used.

**USE APPROPRIATE SERVO ARM:**

(23T)


(24T)

(25T)


# 8. FINAL ASSEMBLY





903306  
SFH M3x6

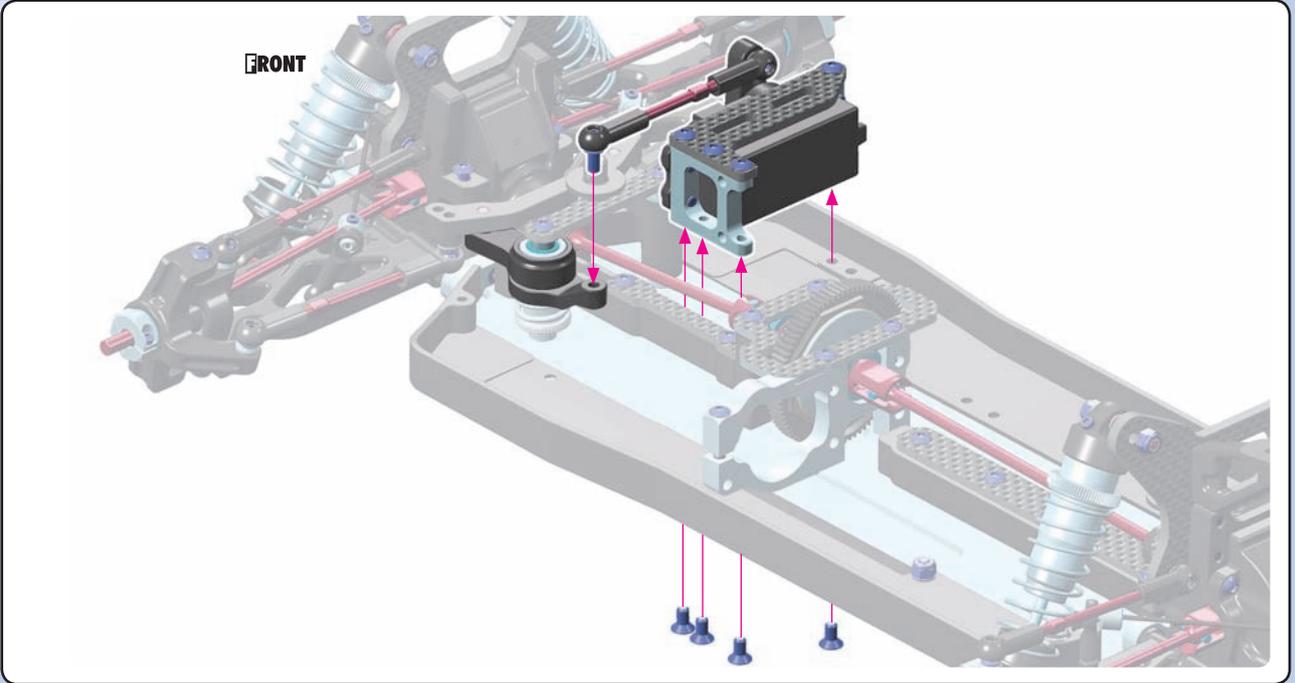

902310  
SH M3x10

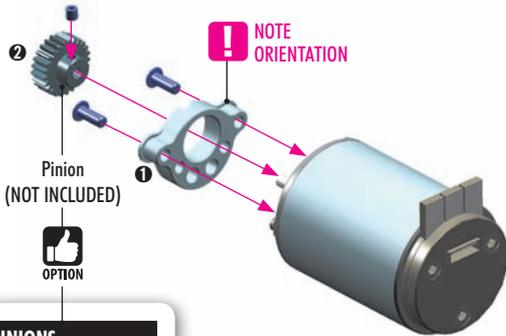

PINIONS	
#365718	18T / 48P
#365719	19T / 48P
#365720	20T / 48P
#365721	21T / 48P
#365722	22T / 48P
#365723	23T / 48P
#365724	24T / 48P
#365725	25T / 48P
#365726	26T / 48P
#365727	27T / 48P
#365728	28T / 48P
#365729	29T / 48P
#365730	30T / 48P
#365731	31T / 48P
#365732	32T / 48P
#365733	33T / 48P
#365734	34T / 48P
#365735	35T / 48P
#365736	36T / 48P
#365737	37T / 48P
#365738	38T / 48P

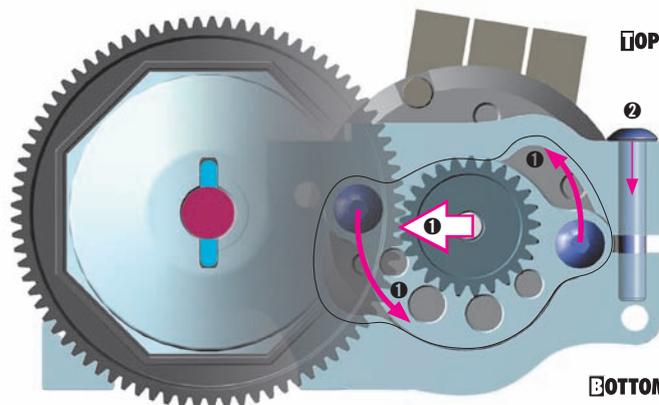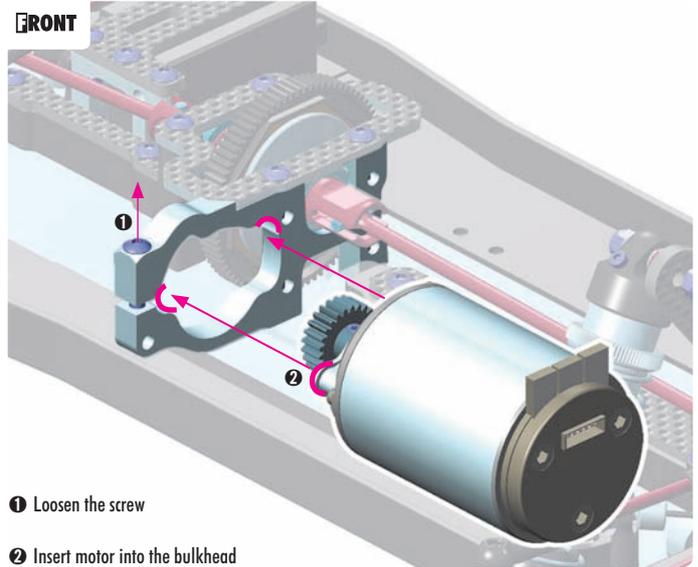

Adjust the motor so the pinion meshes with the spur gear properly. Make sure the gear mesh is not too tight. There should be a small amount of play between the teeth of the pinion gear and the spur gear.




# 8. FINAL ASSEMBLY



903308  
SFH M3x8



903310  
SFH M3x10

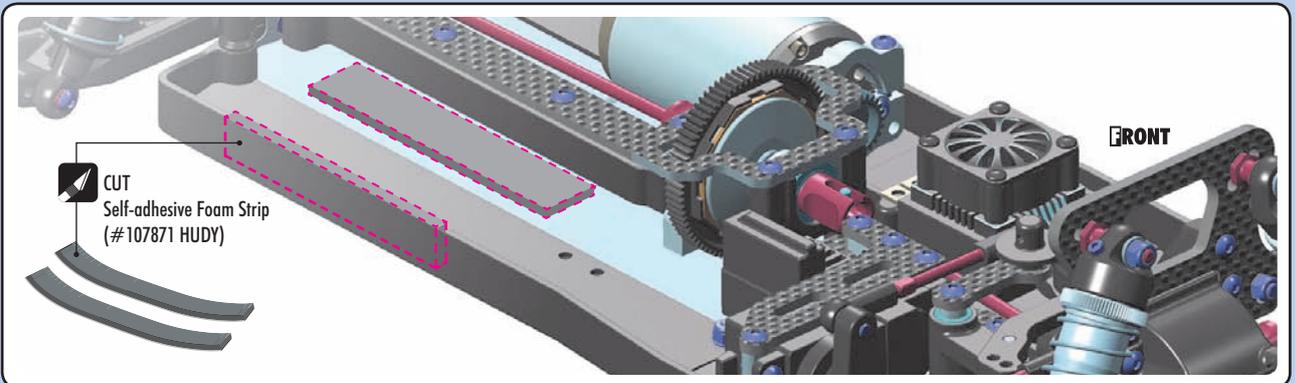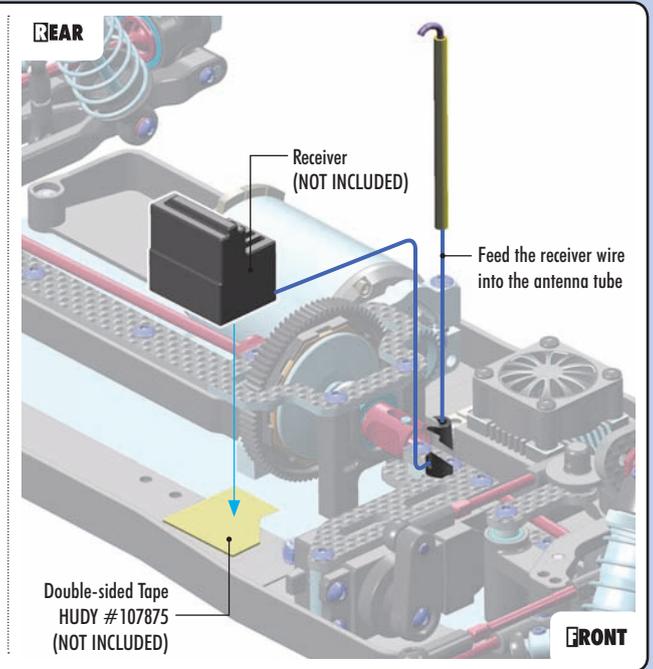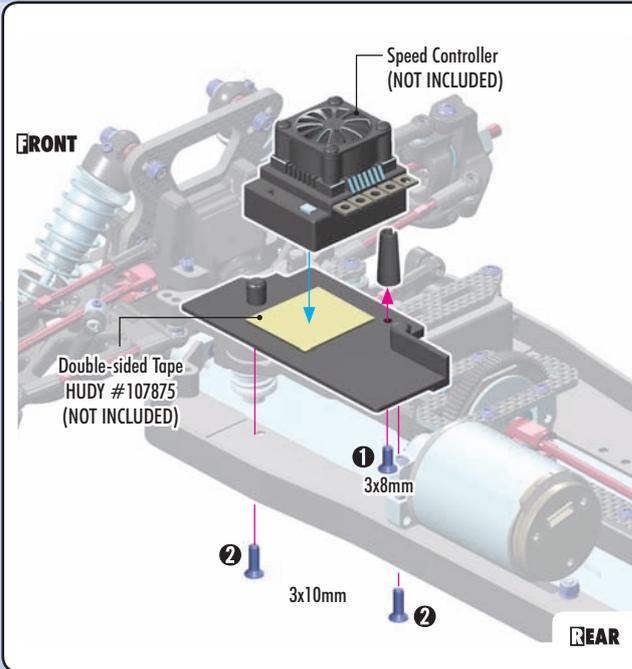

902312  
SH M3x12




903310  
SFH M3x10



962030  
S 3x6x0.3

## ALTERNATIVE 1

FORWARD WEIGHT BALANCE POSITION  
(INITIAL SETTING)

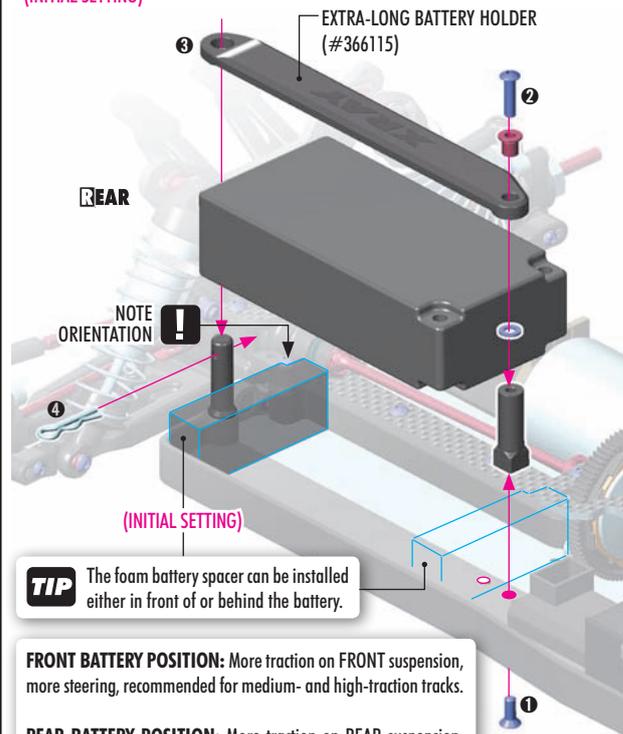


**TIP** The foam battery spacer can be installed either in front of or behind the battery.

**FRONT BATTERY POSITION:** More traction on FRONT suspension, more steering, recommended for medium- and high-traction tracks.

**REAR BATTERY POSITION:** More traction on REAR suspension, more stable, recommended for medium- and low-traction tracks.

## ALTERNATIVE 2


REARWARD WEIGHT BALANCE POSITION

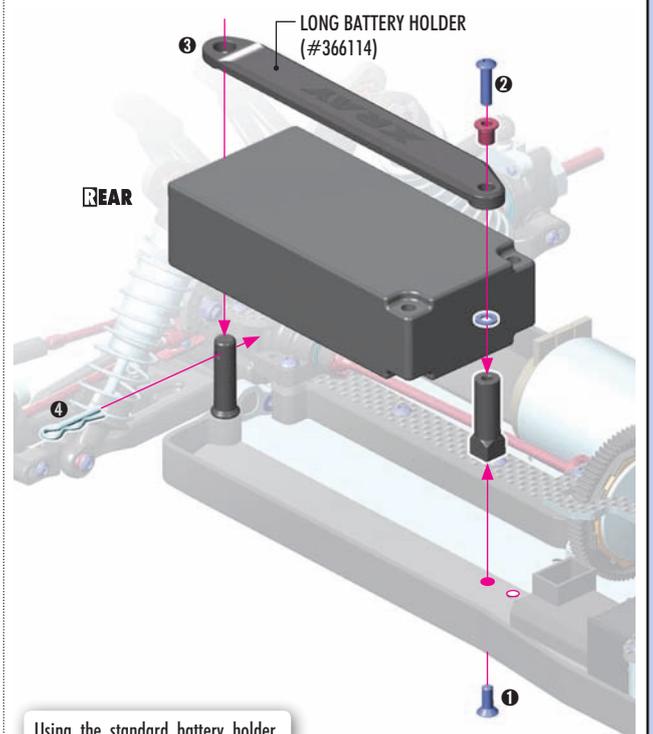


Using the standard battery holder positions the battery to the REAR.

# 8. FINAL ASSEMBLY

- 1 Before cutting and making holes on the BODY, put the unpainted body on the chassis to confirm the mounting position and location for holes and cutouts. Before cutting and making holes on the WING, put the unpainted wing on the wing holders to confirm the mounting position and location for holes and cutouts.
- 2 Before painting, wash the inside of the body with mild detergent, and then rinse and dry thoroughly.
- 3 Mask all windows.

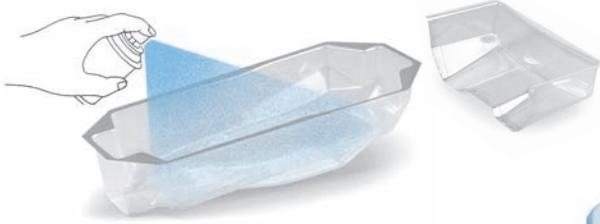


- 4 Apply paint masks as appropriate.
- 5 Paint the body using paints formulated for polycarbonate bodies.
- 6 When the paint is dry, remove the masking.
- 7 Carefully cut out the body using appropriate scissors or cutting tools.
- 8 When you have finished cutting, peel off the external protective films.

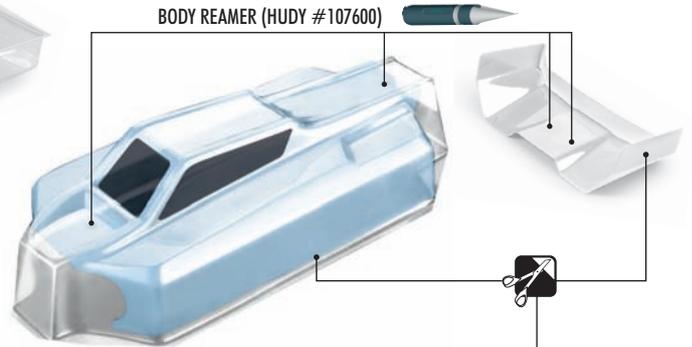

BODY REAMER (HUDY #107600)

### WING CUTTING LINE OPTIONS

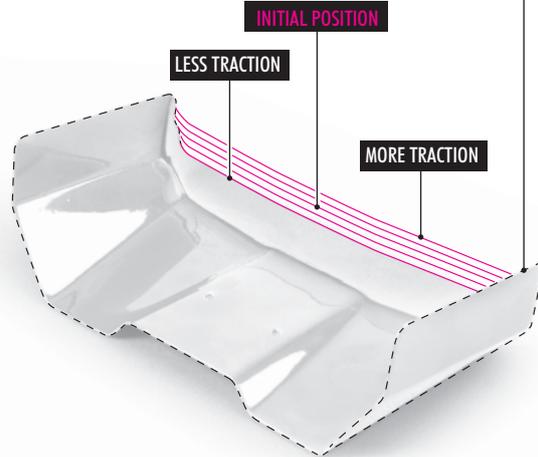

#### XRAY LEXAN BODY

#369703	0.75mm		OPTION
#369704	0.50mm		OPTION
#369705	0.75mm	ALPHA	INCLUDED
#369706	0.50mm	ALPHA	OPTION



#### XRAY LEXAN REAR WING

#323510	1.0mm		OPTION
#323511	1.5mm		OPTION
#323513	1.0mm	RANK	OPTION
#323517	1.0mm	TEC	OPTION
#363510	1.0mm		INCLUDED
#363511	1.5mm		OPTION
#363512	2.0mm		OPTION




#### XRAY LEXAN CENTER FIN

#323515	1.0mm	ZAP	OPTION
---------	-------	-----	--------

2x




Double-sided Velcro™ tape is used to seal the body against the side guards.

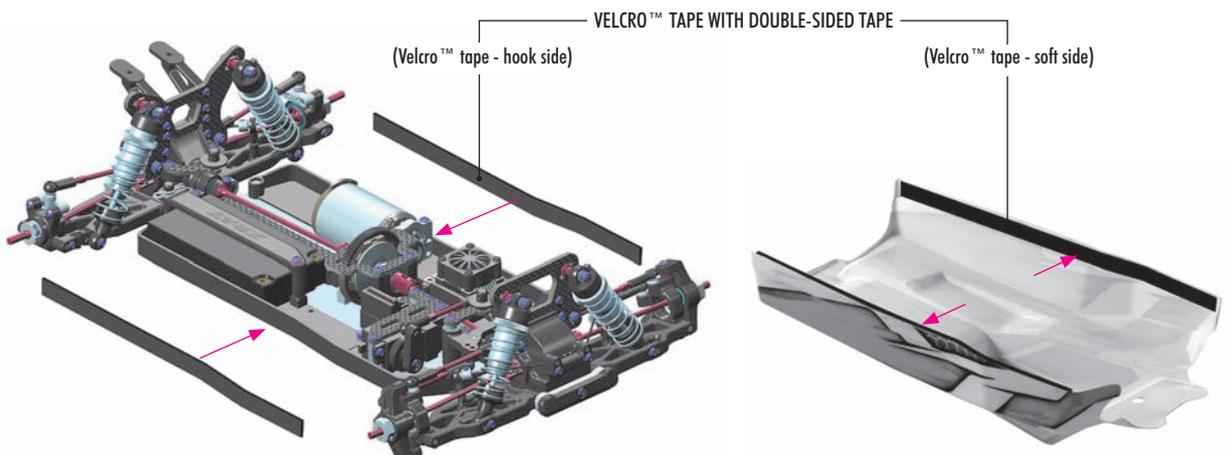

# 8. FINAL ASSEMBLY



960240  
N M4

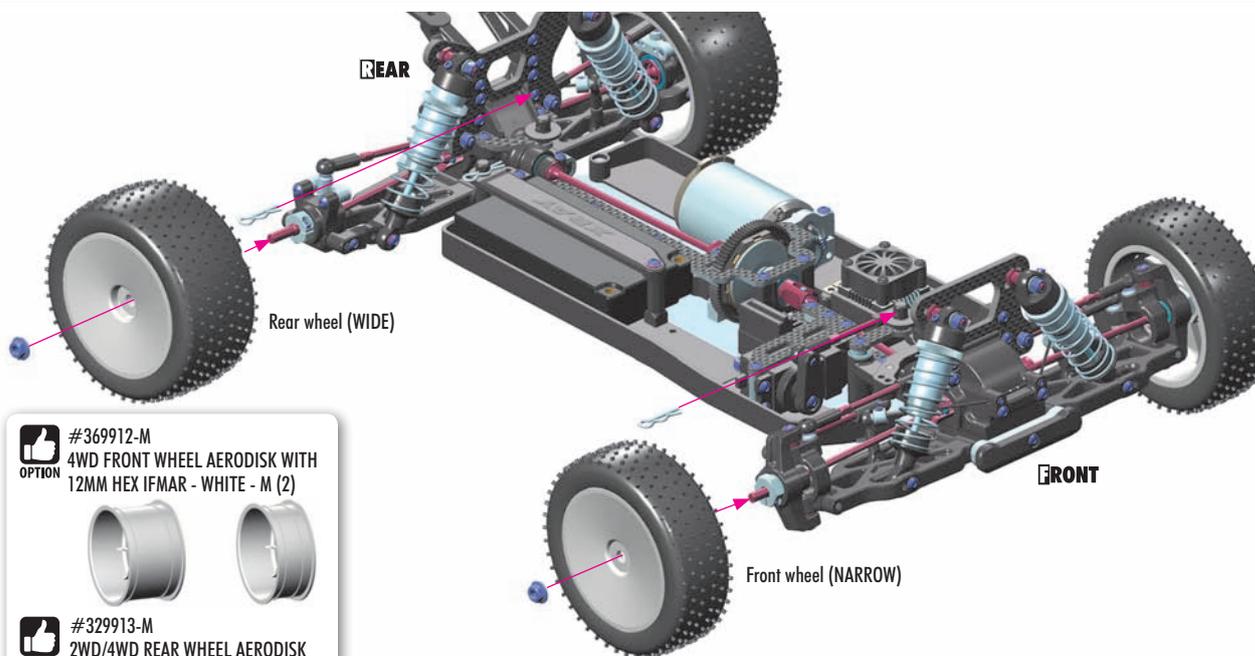


#369912-M  
4WD FRONT WHEEL AERODISK WITH  
12MM HEX IFMAR - WHITE - M (2)



#329913-M  
2WD/4WD REAR WHEEL AERODISK  
12MM HEX IFMAR - WHITE - M (2)



903308  
SFH M3x8

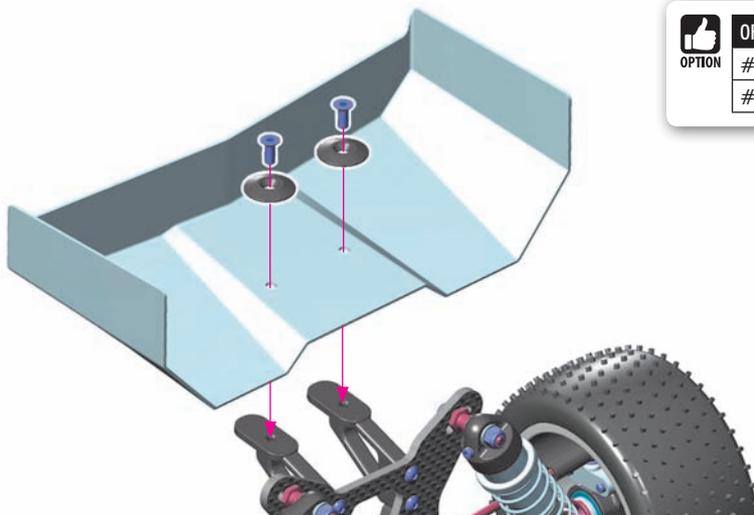


OPTIONAL ALU WING SHIM

#293561	SILVER	OPTION
#293561-0	ORANGE	OPTION



FINAL ASSEMBLY VIEW

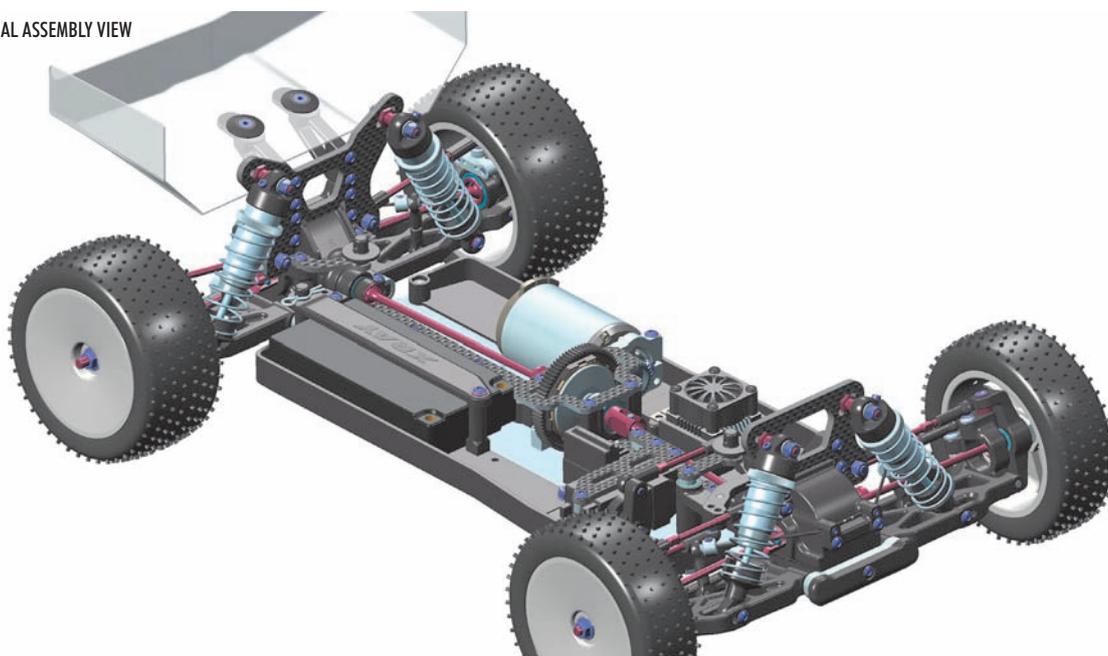

## SHOCK MAINTENANCE

The most important maintenance task for keeping consistent shock performance is refilling and bleeding them correctly. If built correctly, it will not be necessary to re-build them often. Replacing warped/hard o-rings, scarred piston rods, or shaved/split/loose composite upper and lower ball joints are also important.

- For club racing, it is recommended to check the shocks for air inside before each race and only re-fill and bleed them if necessary. Before each race day, make sure you take the spring off of each shock, hold it up to your ear, and quickly compress the shock rod fully into the body while listening for any air making a "whistling" or "squishy" sound as it passes through the piston holes. If you hear any air, refill and bleed your shocks. For high-competition racing, it is recommended that the shocks be re-filled and bled before a large event.
- If building or pairing new shocks, always make sure they are the same length using a shock length measuring tool and adjust the lower ball joints as needed.
- During regular shock operation, oil naturally gets on the shock shaft and drop-by-drop slightly gets out of the shock body. Shocks should be inspected regularly after each race, and oil replaced as required.

## BEARING MAINTENANCE

Ball-bearings in an off-road car must be properly maintained for smooth operation and long lifespan.

The XB4 ball-bearings are degreased and are lubricated with HUDY Bearing Oil or HUDY Grease. The following procedures are recommended to clean all of the bearings in your off-road car. For high-competition racing, we recommended doing this every 3-4 weeks, or before a major race.

- 1 Remove the seals on both sides of the bearing (if present). If the seals bend a little and you can see a kink, carefully flatten the kink out by hand.
- 2 Spray the seals with motor cleaner and blow dry with compressed air.
- 3 Spray the bearing on both sides with motor cleaner.
- 4 Spin the bearing while it is still wet to dislodge any particles with the cleaner.
- 5 Spray the bearing on both sides again.
- 6 Blow both sides of the bearing dry with compressed air to make sure particles come out.
- 7 Hold the inner part of the bearing with my left thumb/forefinger and spin it to make sure it spins free without any abnormal vibrations or sounds.
- 8 Place one drop of bearing oil into each side of the bearing.
- 9 Replace both seals at the same time by lining them up on each side of the bearing and lightly pressing them in all the way around the bearings circumference with your thumb and forefinger. Do not press too hard or use any type of tool, such as a wrench tip, to push the blue seals in as they will push in too far, bend and cause drag.

If you spin test the bearing after you have re-oiled and sealed it, it will not spin freely for an extended period of time. The lightest of oils may allow it to spin for 1-2 seconds. This is normal and once you have mounted the bearings in the car again, the drive train will spin freely.

Make sure you use a motor cleaner that does not leave a residue after it dries as this may cause drag and wear in the bearings.

### RECOMMENDED PRODUCTS

- Use correct oil or grease to lubricate the bearings:  
 #106230 HUDY Bearing Oil  
 #106220 HUDY Bearing Grease - Standard  
 #106221 HUDY Bearing Grease - Blue  
 #106222 HUDY Bearing Grease - Red



## SUSPENSION & DRIVETRAIN MAINTENANCE

- Check suspension for free movement during building and operation, and especially after running and if you have crashed the car. If the suspension does not move freely, use the appropriate HUDY Arm Reamer to clean and resize the holes of the suspension arms.
- Regularly check the drive shaft pins (both side and center) and if they show any wear must be immediately replaced by new pins. If the car is run with worn pins, excessive wear on the diff outdrives will result. The #106000 HUDY Drive Pin Replacement Tool (for 3mm Pins) is a compact, rugged multi-use tool set for replacing 3mm drive pins in drive shafts. Use the HUDY replacement drive shaft pins 3x12 (#106051).
- Regularly inspect and replace the connecting pins which connect the center drive shafts with the pinion gear, and also the pins that connect the wheel drive shafts with wheel axles. Use HUDY Graphite Grease to lubricate the drive shaft connecting joints and the diff gears.
- Pivot balls and ball-joints will naturally wear for some time and will generate play. If there is too much play the pivot balls and ball joints need to be replaced.
- If the car is run in wet conditions, apply WD-40® on all drivetrain parts before the run. After the run, clean and dry the parts again.



#106210 HUDY GRAPHITE GREASE or #106213 HUDY JOINT GREASE

## HUDY SPRING STEEL™


The HUDY Spring Steel™ used in the car is the strongest and most durable steel material on the RC market. While items made from HUDY Spring Steel™ are still subject to wear, the lifespan is considerably longer than any other material. As parts made from HUDY Spring Steel™ wear, the

brown color will fade (get lighter) but it will not affect the strength of the material. The brown color is only a surface treatment and if the brown color will wear the durability of the part will be still strong.



EXCLUSIVE PROFESSIONAL

# HUDY

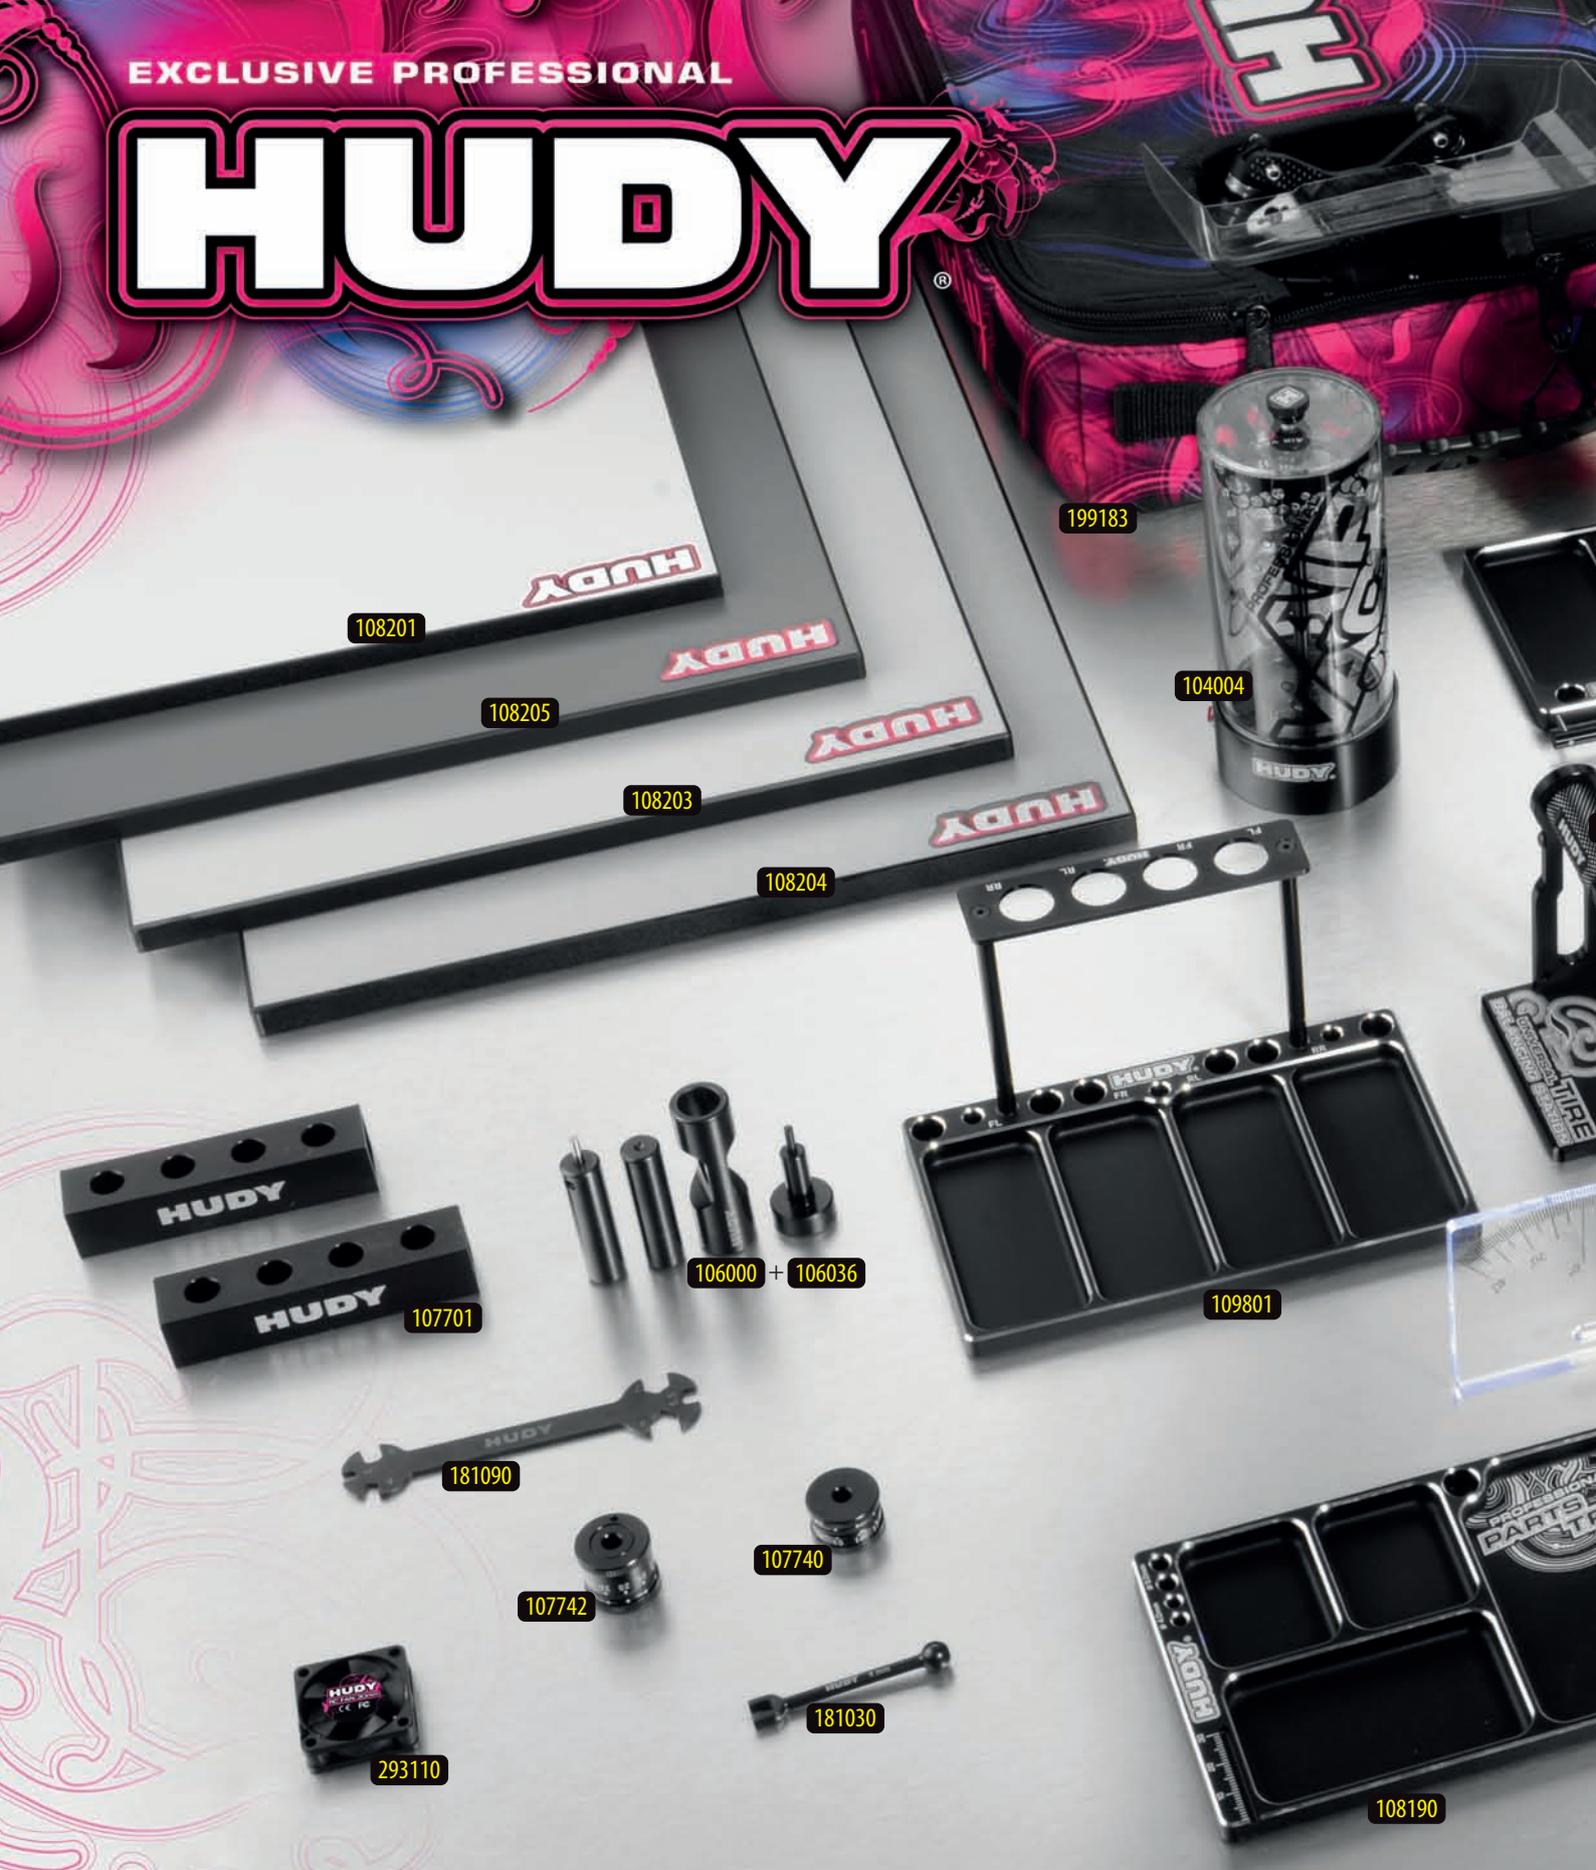

- 104004 HUDY AIR VAC - VACUUM PUMP - 1/10 OFF-ROAD
- 105500 HUDY UNIVERSAL TIRE BALANCING STATION
- 105520 WHEEL ADAPTER FOR 1/10 TOURING CARS - 12MM
- 106000 HUDY DRIVE PIN REPLACEMENT TOOL (FOR 3MM PINS)
- 106036 EJECTOR PIVOT PIN & ALTERNATING PIVOT 2.5MM FOR #106000
- 107090 HUDY BEARING CHECKING TOOL
- 107601 LIMITED EDITION - REAMER FOR BODY 0-9MM + COVER - SMALL
- 107701 CHASSIS DROOP GAUGE SUPPORT BLOCKS 20MM FOR 1/8 - LW(2)
- 107740 HUDY ADJUSTABLE RIDE HEIGHT GAUGE 14-20MM
- 107742 HUDY ADJUSTABLE RIDE HEIGHT GAUGE 20-30MM
- 107855 HUDY PIT LED
- 107880 CHASSIS BALANCING TOOL (2)

- 108160 HUDY 1/10 OFF-ROAD CAR STAND - V2
- 108190 HUDY ALU TRAY FOR PARTS
- 108201 FLAT SET-UP BOARD FOR 1/10 TOURING CARS
- 108203 FLAT SET-UP BOARD FOR 1/10 TOURING CARS - SILVER GREY
- 108204 FLAT SET-UP BOARD FOR 1/10 TOURING CARS - TITAN
- 108205 FLAT SET-UP BOARD FOR 1/10 TOURING CARS - DARK GREY
- 108905 UNIVERSAL EXCLUSIVE SET-UP SYSTEM FOR 1/10 OFF-ROAD CARS
- 108960 ALU NUT FOR 1/10 OFF-ROAD SET-UP SYSTEM (4)
- 109801 HUDY ALU TRAY FOR 1/10 OFF-ROAD DIFF & SHOCKS
- 109840 HUDY ALU TRAY FOR 1/10 OFF-ROAD DIFF ASSEMBLY
- 109860 HUDY ALU TRAY FOR SET-UP SYSTEM
- 109880 HUDY ALU TRAY FOR ACCESSORIES & PIT LED



111545 LIMITED EDITION - ALLEN WRENCH # 1.5MM  
 112045 LIMITED EDITION - ALLEN WRENCH # 2.0MM  
 132045 LIMITED EDITION - ALLEN WRENCH + BALL REPL. TIP # 2.0MM  
 153055 LIMITED EDITION - SLOTTED SCREWDRIVER # 3.0MM - LONG  
 175535 LIMITED EDITION - SOCKET DRIVER # 5.5MM  
 177035 LIMITED EDITION - SOCKET DRIVER # 7.0MM  
 181030 HUDY SPRING STEEL TURNBUCKLE WRENCH 3 MM  
 181090 HUDY SPECIAL TOOL FOR TURNBUCKLES & NUTS  
 183011 HUDY PROFESSIONAL MULTI TOOL  
 188990 HUDY PROFESSIONAL BODY SCISSORS  
 199060 HUDY ALU TOOL STAND  
 199183 HUDY CAR BAG - 1/10 OFF-ROAD

199270 HUDY LIPO SAFETY BAG  
 293110 HUDY BRUSHLESS RC FAN 30MM  
 298100 HUDY TIN ROUND BOX 80X30MM  
 293110XL HUDY BRUSHLESS RC FAN 30MM - SET OF 12PCS

For more information about tools, set-up equipment and accessories suitable for your car please visit:

[www.hudy.net](http://www.hudy.net)



[www.teamxray.com](http://www.teamxray.com)

**XRAY EUROPE**

XRAY, K VÝSTAVISKU 6992, 91101 TRENCIN, SLOVAKIA, EUROPE  
PHONE: +421-32-740 11 00, FAX: +421-32-740 11 09, [info@teamxray.com](mailto:info@teamxray.com)

**XRAY USA**

RC AMERICA, 2030 Century Center Blvd #15, Irving, TX 75062, USA  
PHONE: 214-744-2400, FAX: 214-744-2401, [xray@rcamerica.com](mailto:xray@rcamerica.com)



/TeamXray



/TeamXray



/TeamXray



/TeamXrayRC



/XrayRacing



/XrayRacing